




RadioShack

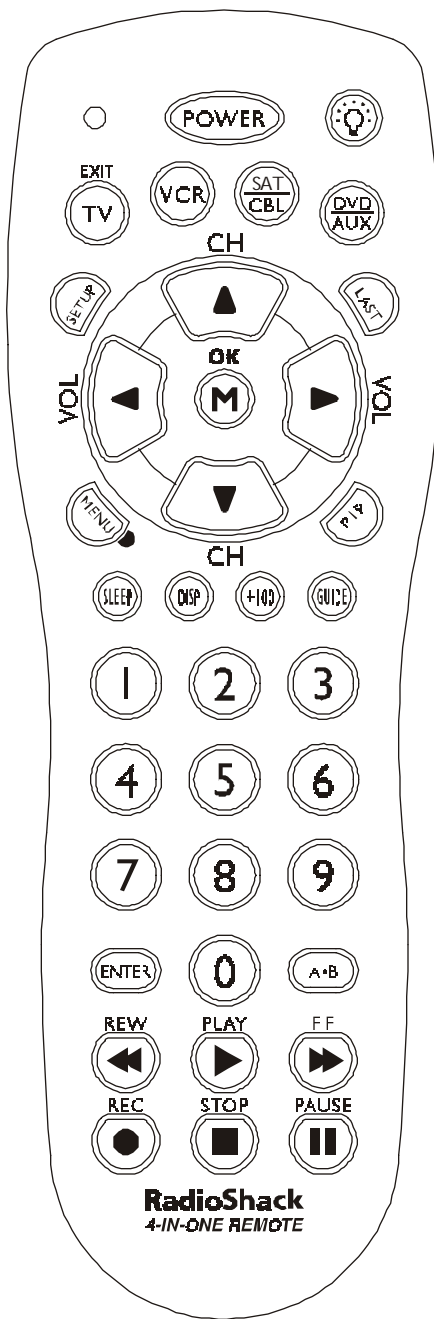

### Introduction

Thank you for buying a RadioShack Remote Control. You can use your remote to replace a broken or lost remote or combine the functions of two or more remotes.

This remote control operates the common features of most (but not all) models and brands of IR (Infrared) controlled video equipment. This remote may support functions that are not available on your device. Some functions of your particular device (such as menu functions) may not be controlled by this remote. In such cases, use the original remote control for your device.

Please use this manual to become familiar with your remote, then install batteries and set up your remote for your particular device and brand.

### Battery Installation

1. Push down on the tab on the back of the remote and lift off the cover.
2. Match the batteries to the + and - marks inside the battery case, then insert 4 AAA alkaline batteries.
3. Replace the cover.

When the remote's range decreases or it does not operate properly, replace the batteries. You have 2 minutes to change the batteries without losing codes you have programmed. However, do not press any buttons until batteries are installed. If buttons are pressed without batteries in the remote, all codes will be lost.

### Battery Saver

Your remote automatically times out if the buttons are pressed more than 30 seconds. This will save your batteries should your remote get stuck in a place (for example, between sofa cushions) where the buttons remain pressed.

### TV Volume/Mute Punch-Through

The TV Volume/Mute punch-through feature lets you control the Volume and Mute function of your TV in any mode programmed to be a VCR, DVD, Cable, or DBS device without changing to TV mode.

### TV/VCR Punch-Through

VCR Punch-through is only available in TV mode and any mode programmed for Cable, the 6 VCR keys (Play, Pause, Stop, Record, FF and Rewind) will punch-through to the device programmed under VCR (in TV mode), or any mode programmed for Cable.

### Button functions

The remote powers on in TV mode.

- A-B** Operates as TV/Video, TV/VCR, etc., depending on mode.
- PIP** Operates your television's Picture-in-Picture feature if available.
- Disp** Displays device on-screen status information.
- Enter** Used to enter channel numbers for some devices.
- Backlight** Lights up the buttons on the remote when pressed.
- Menu** Puts the remote in Menu mode and displays the menu on the TV. The indicator light blinks continuously to indicate the remote is in Menu mode, VOL UP/DOWN keys operate as cursor right/left, CH+/- keys operate as cursor up/down, and Mute operates as OK. Press any mode key to exit Menu.
- Guide** Displays on-screen Satellite Channel Guide. To use the cursor keys in Guide screens, activate Menu Mode (above) then press **Guide**. The same keys are now available for Guide as described above for Menu Mode.
- Last** Goes to last channel viewed.
- 100+** Press first, then enter the number for channels higher than 100.

Note: Some buttons on the remote might have functions that are labeled differently on the device you are controlling, depending on the brand and model of your device. For example, Last may be called RECALL or Previous Channel; ENTER may be called DISPLAY. Also, this remote can only operate features that exist on your device. For example, your device must have Previous Channel capability for the Last button to operate this feature.

### Code Setup

The Setup button is used to set up the remote. You can set up the remote using the code for your brand of device from the code list, or search through the library of codes until you find a code that works for your device.

You can store any kind of code under any mode (except TV). For example, you can store a VCR code under the DBS key, or a DVD code under the VCR key, etc. However, you can only store TV codes under the TV key.

### Direct Code Entry

1. Press and hold the Setup button until the red indicator stays on. Release the Setup button.
2. Press and release the desired mode button (TV, VCR, etc.). The red indicator blinks, then stays lit.
3. Enter the 3 digit code from the code list.  
Note: The red indicator turns off after a valid code entry and flashes for an invalid code.
4. With your device on, press Channel Up. If the device responds, no further setup is required.  
Note: If some buttons on your device do not operate, try one of the other codes for your brand.

### TV/VCR and TV/DVD Combo units

For some TV/VCR and TV/DVD combo units, you might need to set up two different buttons to control both parts of the combo unit. (See "Direct Code Entry.") For example, set up a code under the TV button to control the TV part of the combo unit AND a separate code for the VCR or DVD under any other button you choose.

### Programming with Code Search

1. Manually turn on the device (TV, VCR, etc.) to be controlled.
2. Press and hold the Setup button until the red indicator stays on. Release the Setup button.
3. Press and release the desired mode button (TV, VCR, etc.). The red indicator blinks, then stays lit.
4. Press the Channel Up button repeatedly (up to 300 times) until the device to be controlled changes channels. The red indicator blinks, then stays lit.

If you accidentally overshoot the desired code, press the Channel Down button to backtrack through the library until the device changes channels. Pressing Channel Up changes the direction to forward again. Press and release the Enter button to set the code. If the device does not have a Channel Up button, use Play (VCR or DVD) or Power instead.

The Code Search method above assumes that you want to store VCR codes under the VCR button, DVD codes under DVD, etc. If you want to store a VCR code under DVD, first follow the procedure for "Direct Code Entry" on page 3, trying any DVD code from the code tables (that is, press DVD in step 2, then enter any VCR code). Then follow the steps for Code Search above.

### Operation

1. Press the mode button for the desired device.
2. Aim the remote at the device.
3. Press POWER to turn on the device.
4. Press other buttons to operate the features of your device.

Note: The REC button must be pressed TWICE to record from your VCR. For some brands of VCRs, you might need to press the REC button once, then press it again for three seconds.

### Code Identification

1. Press and hold the Setup button until the red indicator stays lit. Release the Setup button.
2. Press and release the desired mode button (TV, VCR, etc.). The red indicator blinks, then stays lit.
3. Press and release the Setup button. The indicator light blinks off.
4. To find the first digit for the code stored under the mode key you pressed in step 2, press each numeric key from 0-9 in turn. When the indicator blinks off, the number you pressed is the first digit for the code you are searching for.
5. Repeat step 4 to find the second and third digits.

### Sleep Timer

The Sleep Time enables the remote to turn off the TV after a period of 1 to 99 minutes. The remote must be in TV mode to set a Sleep Timer. This feature works even if your TV does not have a sleep feature.

1. Press and release the TV mode key.
2. Press and hold the Sleep button until the LED remains lit (about 2-3 seconds).
3. Release the Sleep button.
4. Press and release the numeric keys (01-99) for the time required. The LED will blink off to indicate keypress acceptance.
5. TV Sleep Timer is set.
6. **Leave the Remote pointing towards the TV with an unobstructed path.**

To cancel the Sleep Timer, press and hold the Sleep key until the LED blinks, or press and release the Power key in TV mode.

### Troubleshooting

#### Remote does not operate your device.

- Press the mode button of the device you want to control.
- Program the remote with a new code.
- Install new batteries. (You might have to reprogram your remote after installing new batteries.)
- Remote may not be compatible with your device.

#### Remote does not operate some features of your device.

- Program remote with a new code.
- Remote may not be able to operate all features of your device or button names might be different than your device.

#### Indicator light blinks after you program a device code.

- Remote did not accept the code.
- Try to program the code again or try a different code.

### Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period. This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, setup service adjustment or reinstallation. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

Custom Manufactured in China for RadioShack, Ft. Worth, TX 76102.



