



 
Proton	0178, 0466, 0003, 0052
Pulsar	0017, 0019
Quasar	0051, 0250, 0055, 0165
RCA	0047, 0747, 1047, 1147, 1247, 1347, 1447, 0090, 0051, 0093, 0019, 0679, 0018, 0135, 0038
Radio Shack	0047, 0747, 0154, 0180, 0030, 0178, 0056, 0019, 0165, 0039, 0032
Realistic	0154, 0180, 0030, 0178, 0056, 0019, 0165, 0039, 0032
Rhapsody	0185
Runco	0017, 0030, 0603, 0497
SSS	0180, 0019
Sampo	0030, 0039, 0052, 0032
Samsung	0060, 0030, 0178, 0056, 0019, 0032
Samsux	0039
Sansei	0451
Sansui	0463
Sanyo	0154, 0159, 0146
Scimitsu	0019
Scotch	0178
Scott	0236, 0180, 0178, 0179, 0019
Sears	0047, 0747, 0054, 0154, 0156, 0178, 0179, 0056, 0171, 0159, 0146
Semivox	0180
Semp	0156
Sharp	0093, 0688, 0165, 0039, 0386, 0157
Shogun	0019
Signature	0016
Simpson	0187, 0186
Sony	0000, 0080, 0111
Soundesign	0180, 0178, 0179, 0186
Spectricon	0003
Squareview	0171
Starlite	0180
Supre-Macy	0046
Supreme	0000
Sylvania	0054, 0030, 0096, 0020, 0381
Symphonic	0171
TMK	0178, 0056, 0177
TNCI	0017
Tandy	0093
Tatung	0055, 0003
Technics	0051, 0250
Technol Ace	0179
Techwood	0051, 0056, 0003
Teknika	0054, 0180, 0150, 0060, 0179, 0056, 0019, 0016, 0092, 0039, 0186
Telefunken	0056
Toshiba	0154, 0156, 0060, 1256
Tosonic	0185
Totevision	0039
Trical	0157
Universal	0027
Vector Research	0030
Victor	0053
Vidikron	0054
Vidtech	0178, 0019
Viking	0046
Wards	0054, 0030, 0178, 0021,

0179, 0056, 0019, 0016, 0165, 0096, 0020, 0080, 0027, 0111

White	
Westinghouse	0463, 0623, 0624
Yamaha	0030, 0019
Zenith	0017, 0463, 0624, 0016, 0092
Zonda	0003

CHECKING THE CODES

If you have set up the One For All TV Universal remote control using the Searching For Your Code procedure, you may need to find out which four-digit code is operating your equipment. For example, to find out which code is operating your TV:

- Turn on your TV.
-  Press and hold SET until the LED blinks twice, then release SET.
-  Enter 9 - 9 - 0. The LED will blink twice.
-  To view the code for the first digit, press 1 once. Count the number of LED blinks (e.g., 3 blinks = 3) and write down the number in the left-most TV Code box below.

NOTE: If a code digit is "0", the LED will not blink.

- Repeat step 4 three more times for remaining digits. Use 2 for the second digit, 3 for the third digit, and 4 for the fourth digit. Finish writing down the code in the TV Code boxes below.

- Write down the codes in the appropriate box below

TV Code

--	--	--	--

TROUBLESHOOTING

- PROBLEM:** LED does not blink when you press a key.
- SOLUTION:** Replace the batteries with two (2) new AA alkaline batteries.
- PROBLEM:** LED blinks when you press a key, but TV does not respond.
- SOLUTION:** Make sure you are aiming the remote control at your TV and that you are within 15 feet of the component you are trying to control.
- PROBLEM:** The remote control does not control TV or commands are not performing properly.
- SOLUTION:** Try all listed codes for the TV brand being set up. Make sure TV can be operated with an infrared remote control.
- PROBLEM:** CH+, CH-, and PREV.CH do not work for your RCA TV.
- SOLUTION:** Due to RCA design (1983-1987), only the original remote control will operate these functions.
- PROBLEM:** Changing channels does not work properly.
- SOLUTION:** If original remote control required pressing ENTER to change channels, press ENTER on the remote control after entering a channel number.
- PROBLEM:** Please contact us in any of the following ways:
- SOLUTION:**
- Please visit www.oneforall.com
 - If the above website is not able to provide you with the information you need, please email us at ofasupport@ueic.com

ADDITIONAL INFORMATION

The One For All TV Universal remote control does not have any user-serviceable parts. Opening the case, except for the battery cover, may cause permanent damage to your remote control.

©2000 by Universal Electronics Inc. No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated to any language, in any form or by any means, electronic, mechanical, magnetic, optical, manual, or otherwise, without the prior written permission of Universal Electronics Inc. One For All® is a registered trademark of Universal Electronics Inc.

One For All® PRODUCTS

90 Days Limited Warranty

One For All ("OFA") warrants, to the original purchaser only, that this product will be free from defects in materials and workmanship, under normal use, for ninety (90) days from the date of original purchase.

This warranty does not cover damage or failures caused by products or services not supplied by OFA, or which result from accident, misuse, abuse, neglect, mishandling, misapplication, faulty installation, set-up adjustment, improper maintenance, alteration, maladjustment of consumer controls, modifications, commercial use, or that is attributable to acts of God.

There are no express warranties except as listed above. OFA SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

To obtain warranty service for a defective product during the warranty period, please return the product, preferably in the original carton, along with your purchase receipt, to the store of original purchase. A note detailing the complaint would be helpful. The store, at its option, will replace or repair this product if found to be defective.

One For All
(330) 405-8655

One For All® is the registered trademark of Universal Electronics Inc. Computime International Ltd. is the Licensee of the ONE FOR ALL® brand for USA and Canada.

Copyright 2002 by Universal Electronics Inc. No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated to any language, in any form or by any means, electronic, mechanical, magnetic, optical, manual, or otherwise, without the prior written permission of Universal Electronics Inc.

 
One For All® is designed for compatibility in North America excluding Mexico.

URC-1050 -- TV Universal

07/02



TV Universal

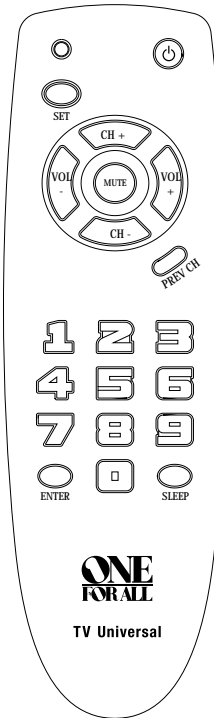




FEATURES AND FUNCTIONS

Use the illustration below to locate One For All TV Universal remote control features and then study the Key Charts to learn how they function.

Key Charts

- Use SET for all programming sequences.
- The LED (red light) blinks to show that the remote control is working and is sending signals.
- Press POWER once to turn on (or off) a selected home entertainment component.
- Use VOL + (or VOL -) to raise (or lower) the sound volume.
- Use CH + (or CH -) to select the next higher (or lower) channel.
- Press MUTE once to turn sound off or on.
- Press SLEEP once to enable (or disable) a selected component's sleep timer (if available).
- Press ENTER once after entering channel numbers on some TV models.
- Press PREV.CH once to recall the last-review channel

   INSTALLING BATTERIES



- On the back of the remote control, push down on the tab and lift the cover off.
- Match the battery to the + and - marks inside the battery case, then insert the batteries.
- Press the battery cover back into place.
- Test the unit by pressing POWER and any mode key. If batteries are inserted correctly, the LED will blink once.

NOTE: When batteries need replacement, the One For All TV Universal remote control will cease to operate. Simply replace the batteries and the unit will be restored to its full functionality, complete with your favorite settings. Removing the batteries for more than 60 minutes will require you to reprogram your remote.

PROGRAMMING TV CONTROL

Locate the brand name of your TV in the Setup Codes For TVs section below, and write it in the following space.

TV Brand: _____

The brands are listed in alphabetical order with the most popular codes listed first. To program TV control:

- Turn on the TV.
- On the remote control, press and hold SET until the LED blinks twice, then release SET.

NOTE: The remote control will exit programming if more than 10 seconds elapse between key presses.
- Enter the first four-digit code for your TV. If you perform this procedure correctly, the LED will blink twice.

NOTE: If the LED emits a long blink, the code is invalid. Repeat steps 2 through 3 and try entering the same code again.
- Aim the remote control at your TV and press POWER once. The TV should turn off. If it does not respond, repeat steps 2-3, trying each code for your brand until you find one that works. If it still does not work, try searching for the code (see Searching For Your Code).
- Write your TV code in the boxes below for future reference.

--	--	--	--

Setup Codes for TVs:

A-Mark	0003
AOC	0030, 0019, 0185, 0003, 0052
Abex	0032
Admiral	0093, 0463
Adventura	0046
Aiko	0092
Akai	0030
Alaron	0179
Ambassador	0177
America Action	0180
Ampro	0751
Anam	0180
Anam National	0055
Archer	0003
Audiovox	0451, 0180, 0623, 0092, 0003
Baysonic	0180
Belcor	0019
Bell & Howell	0154, 0016
Bradford	0180
Brockwood	0019
Broksonic	0236, 0463, 0003
CCE	0217
CXC	0180
Candle	0030, 0056, 0046, 0186
Carnivale	0030
Carver	0054
Celebrity	0000
Cineral	0451, 0092
Citizen	0060, 0030, 0056, 0092, 0039, 0280, 0046, 0186
Clairtone	0185
Concerto	0056
Contec	0180, 0185, 0157
Craig	0180
Crosley	0054
Crown	0180, 0039
Curtis Mathes	0047, 0747, 1147, 1347, 0054, 0154, 0051, 0451, 0093, 0060, 0030, 0056, 0145, 0016, 0166, 0466, 0039
Daewoo	0451, 0019, 0623, 0624, 0092, 0039
Daytron	0019
Denon	0145
Dumont	0017, 0019
Dwin	0720, 0774
Electroband	0000, 0185
Electrohome	0381, 0389
Emerson	0154, 0236, 0463, 0180, 0178, 0179, 0019, 0623, 0624, 0177, 0185, 0282, 0039, 0280, 0038
Envision	0030
Fisher	0154, 0159
Fujitsu	0179, 0683
Funai	0180, 0179, 0171
Futuretech	0180
GE	0047, 0747, 1147, 1347, 0051, 0451, 0093, 0178, 0021, 0055, 0282, 0135, 0027, 0279
Gibraltar	0017, 0030, 0019
GoldStar	0030, 0178, 0056, 0019, 0032, 0001
Gradiente	0053, 0056, 0392

Grumpy	0180, 0179
Hallmark	0178
Harley Davidson	0179
Harman/Kardon	0054, 0078
Harvard	0180
Hitachi	0056, 0145, 0016, 0151, 0032, 0038, 0279
Infinity	0054
Inteq	0017
JBL	0054
JCB	0000
JVC	0053
Janeil	0046
KEC	0180
KTV	0180, 0030, 0185, 0039, 0280, 0217
Kaypani	0052
Kenwood	0030, 0019
Kloss	0046, 0024, 0078
Konka	0707, 0628, 0632, 0638, 0703
LG	0056
LXI	0047, 0747, 0054, 0154, 0156, 0178
Logik	0016
Luxman	0056
MEI	0185
MGA	0150, 0030, 0178, 0019
MTC	0060, 0030, 0056, 0019, 0185
Magnavox	0054, 1254, 0030, 0179, 0187, 0096, 0020, 0186, 0386, 0024
Majestic	0016
Marantz	0054, 0030
Matsushita	0250
Megatron	0178, 0145, 0003
Memorex	0154, 0250, 0463, 0150, 0178, 0179, 0056, 0016
Midland	0047, 0747, 0017, 0051, 0135, 0039, 0032
Minutz	0021
Mitsubishi	0093, 0150, 0178, 0019
Motorola	0093, 0055
Multitech	0180, 0217
NAD	0156, 0178, 0166
NEC	0030, 0056, 0019, 0497
NTC	0092
Nikko	0030, 0178, 0092
Noblex	0430
Noshi	0018
Onwa	0180
Optimus	0154, 0250, 0166
Optonica	0093, 0165
Orion	0236, 0463, 0179
Panasonic	0051, 0250, 0055
Penney	0047, 0747, 1347, 0156, 0051, 0060, 0030, 0178, 0021, 0056, 0019, 0018, 0135, 0039, 0003, 0027, 0032
Philco	0054, 0463, 0030, 0145, 0019, 0096, 0020
Philips	0054
Pilot	0030, 0019, 0039
Pioneer	0166, 0679, 0038
Portland	0019, 0092, 0039
Princeton	0717
Prism	0051
Proscan	0047, 0747

INTRODUCTION

The One For All® TV Universal remote control is our latest-generation universal remote control designed.

It's packed with easy-to-use features such as:

- Preprogrammed technology for easy setup.
- Color-coded keys to quickly locate popular functions
- Code Search to help program control of older or discontinued TV

Before using your new remote control, you will need to program it. Please follow the instructions detailed in this manual and then enjoy your new One For All TV Universal remote control.