




URC-2530  
700414

# "SO EASY" Universal Remote

USER GUIDE & CODE BOOK

Retain For Future Reference

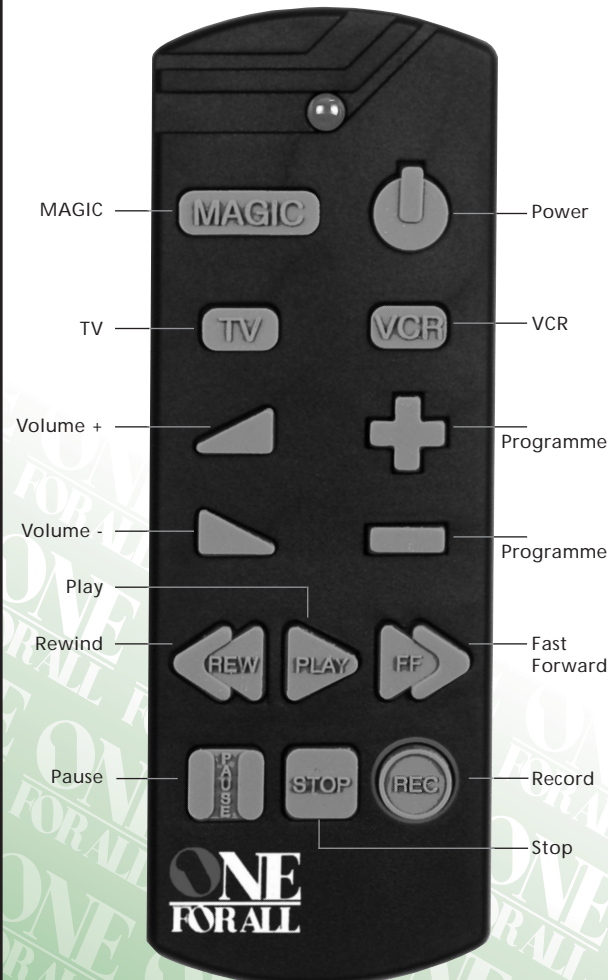

## Contents

<b>ABOUT YOUR SO EASY</b> Features and functions	Front Page
<b>INSTALLING THE BATTERIES</b>	Front Page
<b>SETTING UP THE SO EASY</b>	Front Page
<b>TROUBLE-SHOOTING</b> Searching For Your Code Code Blink Out Helpful Hints Consumer Help-Line	Front Page Front Page Front Page Front Page
<b>ADVANCED OPERATION</b> Controlling Colour & Brightness Punch-Through	Back Page Back Page
<b>SET-UP CODES</b>	Back Page

## About Your SO EASY

Thank you for purchasing the ONE FOR ALL "So Easy" universal remote control (URC-2530). Your SO EASY package contains:

- The SO EASY Remote Control
- THE SO EASY User Guide & Code Book

The User Guide & Code Book explains in simple steps how to set up and operate your new universal remote control. You may need this guide again in the future, so please be sure to keep it.

Your SO EASY needs two new "AAA/LR03" batteries.

Your SO EASY is designed to let you use one remote to operate your Television and Video Recorder. The illustration below and the chart on the next page describe the features and functions of the SO EASY universal remote control.

## Features and Functions

Key	Function
<b>LED</b>	<b>LED</b> The LED (Light Emitting Diode) flashes red to show the remote is working.
	<b>MAGIC</b> The MAGIC key is used to set up your SO EASY and to access special features.
	<b>Power</b> The Power key controls the same features as your original remote control.
	<b>Device Keys</b> The TV and VCR keys select the home entertainment device to be controlled. For example, pressing the TV key allows the remote to control the functions of your Television. After pressing VCR, you can operate your Video Recorder.
	<b>Volume, Programme +/-</b> The Volume and Programme keys control the two most frequently used functions of your devices. They operate just as those on your original remote control. These keys are also used to set up your device.
	<b>Video Recorder Keys</b> After pressing the VCR key, the Video Recorder keys operate the functions of your Video Recorder. To prevent accidental recording, the Record key must be pressed <b>twice</b> .

## Installing The Batteries

The SO EASY needs two new AAA/LR03 alkaline batteries.

- Remove the battery cover from the back of the SO EASY.
- Match the batteries to the +/- marks inside the battery case, then insert the batteries.
- Press the battery cover back into place.

### Important note:

- In order to avoid having to reprogramme your SO EASY after you remove the batteries, you will need to insert new batteries within 15 minutes. Also, it is best that you do not use rechargeable batteries.

## Setting Up The SO EASY

To set up the SO EASY for your Television and Video Recorder:

- Turn on your TV (or VCR).
- Find your Television code in the Set-Up Code section (see reverse). Codes are listed by brand name. The most popular codes are listed first.
- Press and release the **TV** (or **VCR**) key on the SO EASY. Then press and hold the **MAGIC** key until the light blinks twice (the light will blink once then twice).
- Enter your **5-digit code** according to the chart below. The red light will blink twice.
 

	<b>Volume+</b>	=	<b>1</b>
	<b>Volume-</b>	=	<b>2</b>
	<b>Programme+</b>	=	<b>3</b>
	<b>Programme-</b>	=	<b>4</b>
- Now, aim the SO EASY at your Television and press **POWER**. If your Television switches off, your SO EASY is ready to operate your Television.

### Important notes:

- To set up your Video Recorder, follow the same instructions above, only press the VCR key during step 3.
- If your device does not respond, follow steps 1-5 with each code listed for your brand. If none of the codes listed for your brand operate your device, follow the Search Method described in the next section. The Search Method can be used even if your brand is not listed at all.
- Remember, to control your device after you have programmed it with the SO EASY, you must press the device key first (TV or VCR).
- Write the codes for your TV and VCR in the boxes provided for easy future reference.

TV Code

VCR Code

## Trouble-Shooting

### Searching for Your Code

If your TV or VCR does not respond to the SO EASY after trying all the codes listed for your brand, try searching for your code:

- Turn on your TV (or VCR).
- Press the **TV** (or **VCR**) key on the SO EASY. Then, press and hold the **MAGIC** key until the light blinks twice (the light will blink once then twice).
- Next, press the **Programme-** key three times.
- Alternate between **TV** and **POWER** until your Television turns off (or between **VCR** and **POWER** until your Video turns off). You may have to press these keys many times, so be patient. Remember, you must aim the SO EASY at your device the entire time you are searching for your code.
- When your device turns off, press and release **MAGIC**. Don't forget, press **MAGIC** as soon as your device turns off.

The SO EASY is now ready to run your device. When you want to control your device, press the device key first.

### Important notes:

- To search for the code for your Video Recorder, follow the same instructions above, only press the VCR key during steps 2 and 4.
- If your Video's original remote control does not have a power key, press **PLAY** instead of **POWER** when searching for your code.
- During step 4, you may have to press these keys many times (up to 150!), so be patient. Remember, you must aim the SO EASY at your device the entire time you are searching for your code.

### Code Blink Out

After you have used the Search Method, you can find out which code the SO EASY is using by blinking back the code. It's handy to know your Television or Video code for future reference. Remember, you can only blink back your code after the SO EASY is operating your TV or VCR.

To blink out your code:

- Press the **TV** (or **VCR**) key on the SO EASY. Then, press and hold the **MAGIC** key until the light blinks twice (the light will blink once then twice).
- Next, press **Programme-**, **Programme-**, **Programme+**.
- For the first digit of your 5-digit code, press **Volume+** and count the red blinks.
- For the second digit, press **Volume-** and count the red blinks.
- For the third digit, press **Programme+** and count the red blinks.
- For the fourth digit, press **Programme-** and count the red blinks.
- For the fifth digit, press **PLAY** and count the red blinks.

Now you have your 5-digit code. Write your code in the boxes provided previously for easy future reference.

### Important notes:

- To blink out the code for your Video Recorder, follow the same instructions above, only press the VCR key during step 1.

## Helpful Hints

Problem:	Solution:
Red light does not blink when you press a key?	Replace batteries with 2 fresh, new AAA/LR03 alkaline batteries
The ONE FOR ALL does not respond after pressing a key?	Make sure you are using new batteries and are aiming the ONE FOR ALL at your device.
The ONE FOR ALL does not operate your device?	A) Try all the codes listed for your brand. B) Try the search method.
Your brand is not listed in the ONE FOR ALL code section?	Try the search method.
The ONE FOR ALL is not performing commands properly?	You may be using the wrong code. Start the search method over again to locate the proper code.
Your TV switches to programme 1 when you press the power key before switching off OR you must press Power twice to switch on your TV?	Press TV, then press MAGIC until the light blinks twice. Then press: (Programme-) (Programme+) (Programme-)

## Consumer Help-Line

If you have any questions about the operation of your new ONE FOR ALL Universal Remote Control, you may call our consumer help-line for assistance. Before calling, please read this manual carefully to find the answer to your question. If you cannot find a solution in this manual, please complete the information below on all your equipment before calling. This way we can better serve you.

In the UK: phone: 0800 966 194  
fax: +31 53 432 9816  
e-mail: ofahelp@ueic.com

In Ireland: phone: 1-800 553 118  
fax: +31 53 4329816  
e-mail: ofahelp@ueic.com

In Australia: phone: 1-800 064 472  
e-mail: ofahelp@ueic.com

Your ONE FOR ALL model number: URC-2530

Date of purchase: \_\_\_/\_\_\_/\_\_\_  
day/month/year

Your device:  
(The first row is an example of how to complete this table)

TYPE	BRAND	MODEL NR.	REMOTE MODEL NR.
TV	Sony	KVX-2950B	RMT-V131B

## Advanced Operation

### Controlling Colour & Brightness

Depending on the functions of your original remote control, the SO EASY can operate the colour and brightness settings of your Television.

To adjust the colour:



Press **MAGIC** followed by **Volume+** (for colour up) or **Volume-** (for colour down).



To adjust the brightness:



Press **MAGIC** followed by **Programme+** (for brightness up) or **Programme-** (for brightness down).



### Punch-Through

You may be able to use some features of your Television and Video at the same time. If you're watching a programme on your Video, you can adjust the volume (a TV function) without first pressing the TV key. The chart below lists the possibilities:

Last key pressed: You can control:



VCR functions: Play, Stop, Fast Forward, Rewind, Pause, Record



TV volume up and down

## Set-Up Codes

The following section lists the codes for your equipment. The most popular codes are listed first.

Use the Programme and Volume keys to enter your code:



**Volume+** = 1



**Volume-** = 2



**Programme+** = 3



**Programme-** = 4

(Example: To enter the Sony TV code 11133, you would press Volume+, Volume+, Volume+, Programme+, Programme+)

If your device does not respond to the SO EASY after you have tried all the codes listed for your brand, try the Search Method described in the Trouble Shooting section.

## Televisions

Acura	11132			
Admiral	12224	12242	23313	14222
Adyson	21131			
Agazi	14122			
AGB	21131			
Aiko	14231	11132	11322	22414
	11322	12131	22332	13444
Aim	14231			
Akai	14211	22332	22414	11322
	13444	11314	11132	12131
	14233	13314		
Akiba	14233	21233	24124	11322
Akura	14233	21233	21221	11132
	23241	21131	11322	
Alba	14233	14334	11132	23313
	22314	22314	22414	11322
	14231	14424	23344	
	12141			
Alcyon	14143	21323	14232	
Allorgán	11322			
Alistar	11322			
Amplivision	14232	23211	22111	
Amstrad	13412	11132	31121	21131
	14233	22414	22333	23241
	11322			
Anglo	11132	21131		
Anitech	11132	12121	12141	21131
Ansonic	22413	12323	11132	11322
	22423	13314	22114	23234
	21114	14424	11141	23341
Arc en Ciel	23144	24422	12141	12342
	31431			
Arcam	14231	23144	14232	
Aristona	11322	31341	11141	
Arthur Martin	23211			
ASA	12332	22233	12123	12331
	12224			
Asberg	11322	12141		
Asuka	14233	21131	14231	21233
	14112			
Atlantic	11322	14231	14143	22111
Atori	11132			
Audiosonic	11322	12342	14232	22413
	22413	11131	14233	
Audioton	14232			
Ausind	12141			
Autovox	12224	14342	12141	14232
	14424			
Ayomi	14242			
Báird	12342	14112	22224	13443
	14111	12131		
Bang & Olufsen	12224	31422		
Barco	14233			
Basic Line	14233	11132	22423	11322
	21233			
Bastide	14232			
Baur	21344	31224	31111	31333
	22332	14432	11133	11322
Bazin.	14232			
Beko	22413			
Beon	11322			
Best	22212	22413	23322	
Bestar	11322	22413	22423	
Binatone	14232			
Black Star	14424			
Blacktron	21233			
Blackway	31333	31224	13444	14114
Blaupunkt	14131	14222	22124	22131
	14124			
Blue Sky	14233	11233	24124	11322
Blue Star	14124			
Bondstec	14424			
Boots	14232			
BPL	21233			
Brandt	24422	23144	14342	22142
	14121	14123	21244	22144
	31431			
Brinkmann	23313			
Brionvega	11322	12224		
Britannia	14124	14232		
Bronx	12224			
BSR	14233			
BTC	14233	14334	11132	11321
Bush	21233	11322	22314	22414
	22423	31124		
Capsonic	21131			
Carena	24124	11322		
Carrefour	11321	12123	11432	
Cathay	11322			
Centurion	11322			
Century	12224	14222	14424	
CGE	21233	23313	22413	14424
	11132	14334	14233	
Cimline	11132			
City	14233	21131	22413	22414
Clatronic	11322	12141	11322	11132
	23112			
Clayton	23112			
Concorde	11322			
Condor	14231	14424	21233	22111
	11322	22413	11132	12323
Contec	14231	11132	13242	11134
	11321			
Continental				
Edison	24422	14342	14121	14123
	23144	22142	21244	24524
	31431			
Cosmel	11132	22212		
Crezar	14222			
Crosley	12224	14424	12133	12221
	12141	14222		
Crown	11132	22413	12141	23322
	11322	22324		
Crystal	23344			
CS Electronics	14424	14231	14233	
CTC	14424			
Cybertron	14233			
Daewoo	11132	11322	14231	22423
	14233	14232	24414	
Dalnichi	14233			
Dansai	11322	21131		
Dawa	11322			
Daytron	11132	22423		
Decca	12131	31121	11322	14432
DeGraaf	14232			
Desmet	14211	11341		
	22111	11322		

Dixi	11132	11322		
Domland	23133			
DTS	11132			
Dual	14232	11432	22224	21114
Dual-Tec	14232	11132		
Dumont	14232	11132		
Dynatron	11322			
Elbe	23414	14343	21114	22333
	21321	22413	13314	11322
	11322	13444	23314	
	12294	14424	31121	12323
Elicit	11322			
Elekta	21131	21233		
Elin	14231	11322	12332	12331
Elite	14233	11322		
Elman	11322			
Ela	11322			
Emerson	13412	14222	12224	14424
Emperor	21233			
Eries	11322	11141		
Etron	11322	11132		
Euro-Feel	21131			
Euromann	14231	21131	11322	14232
	23322	22413		
Europhon	14232	31121	12323	14222
	14143	23211		
Expert	14143	23211		
Fenner	22423	11132		
Ferguson	22132	14343	14111	13443
	22132	14343	14112	12342
Fidelity	14112	14231	22414	
Finlandia	14211	22233	22324	
Finlux	12332	12331	11322	22233
	14232	21312	12141	11121
	12123	12224	12323	
First Line	21323	22112	14231	11322
	22423	23112	14424	11132
	14232			
Fisher	12331	12224	14232	11321
	11432	14211	22413	11322
	13242	22332	21344	12131
Flint	11322	24124		
Forgestone	14112			
Formenti	12224	14222	14231	22111
	12141			
Fortress	12242	12224		
Fraba	22413	11322		
Frontech	14424	21131	23344	14232
	11132			
Fujitsu	14143	12131	14232	
Funal	21131	21323		
Galaix	22413	23313	11322	
GBC	14222	11132		
GEC	11334	12131	22332	31121
	11322	14232	12131	22242
	14223	11132	22423	
Geloso	11132			
General Technic	14233	11322	22423	
Genexxa	14222			
Germanvox	14222			
Goldman	22212	22413	21313	11132
Goldline	11322	22413	21313	11132
Goldstar	22432	14232	14424	14231
	23444			
Goodmans	11321	12131	11322	11132
	21131	31121	21313	22423
	22341	22414	24414	
Gorenje	22413	23322		
Granada	11322	14313	22321	22324
	11141	12131	12341	14211
	14232	12141	11321	22214
	31121			
Grandin	31223	14233	23211	11322
	22341	22414	24124	
	31224	14114	13444	31333
	24324	12123	12141	14342
	11322			
Halifax	21131	14231	14232	
Hampton	11141	14232		
Hanseatic	11322	21321	21233	22332
	23143	11132	21323	14232
Hantarex	11132	14222	11322	21331
HCM	21131	11132	21233	23241
	14232	14233	11322	
Hema	14232	11132		
Hilfox	24422	14121	23144	31431
HilLine	21131	11322		
Hinari	14211	11321	11322	14232
	11132	13314	22341	24124
Hisawa	21233	14233	23211	12132
Hitachi	14312	11321	22242	22321
	24232	11334	11341	22224
	14121	14123	14232	
Hoshai	14233			
Hoshida	14231			
Hornbyphon	11322			
Hyper	11132	14231	14232	14424
Hypersonic	22332			
Hypson	11322	21131	14232	21233
	24124	23211		
ICE	21131	14232	11322	22414
	14233	14231	11132	
Imperial	11322	14424	22413	23313
	12133	12242	12142	22324
	14342	14222	12141	22242
Indesit	11322			
Indiana	11322			
Ingelsol	11132			
Inno Hit	11132	12131	11322	14233
	21313	14232	31121	14424
	11132	14424	12121	
Interbuy	11132	21131	14424	12121
Interfunk	11322	11141	12224	31111
	12224	14124	13314	22332
	22414	24422	31431	
Intervision	21233	14232	24124	12121
	11322	23133	14233	12323
	21131	14424	23344	
Irradio	21313	12141	14233	14424
	14233	11322	21233	
ITC	14232			
ITS	11322	22414	14233	21233
	21131	14231		
ITT	11322			