

ONE
FOR ALL[®]

3

URC-2560

“Little Easy”[™]

Universal Remote

USER GUIDE & CODE BOOK



Retain For Future Reference



Table of Contents

About Your LITTLE EASY	3
Features and Functions	3
Installing the Batteries	6
Setting Up Your Device	7
The AUX Key:	
Setting Up a Second Television or Video	8
The Search Method	10
Getting Codes from the LITTLE EASY	11
Changing the Device Keys	12
The Scan Key	13
Colour & Brightness.....	14
Punch-Through (Control Across Device Types) ...	14
More On Teletext.....	15
Sleeptimer	16
Preventing Accidental Code Changes	19
Trouble-Shooting.....	20
Consumer Help-Line	21
Quik Code Reference	22
Set-Up Codes	
Set-Up Codes For Televisions.....	23
Set-Up Codes For Video Recorders	28

Note: If you're having problems operating all the functions of your device, don't worry, your ONE FOR ALL may just need customising for your model type. Just call our consumer help-line and we'll get you on the right track.





About Your LITTLE EASY

Your LITTLE EASY Package contains:






Your LITTLE EASY Remote
Your LITTLE EASY Manual

Your manual is divided into two parts: set-up instructions and device codes. You will need your manual to set up your new LITTLE EASY so please be sure to keep it.


Your LITTLE EASY needs two new AAA/LR03 alkaline batteries.

Your LITTLE EASY can operate three devices: a Television, a Video and a Second Television or Video Recorder.

Features and Functions


Key	Function
LED	The LED (Light Emitting Diode) flashes red to show the remote is working.
	Power The Power key controls the same function as it did on your original remote.
	MAGIC Key The MAGIC key is used to set up your LITTLE EASY and to access special functions.
	Device Keys The TV, VCR and AUX keys select the home entertainment device to be controlled. For example pressing the TV key allows the remote to control the functions of your Television, after pressing VCR you can operate your Video Cassette Recorder and the AUX key operates a second Television or Video Recorder.
	
	



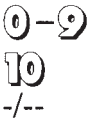

Number Keys

The Number keys (0-9, 10) provide functions just like your original remote, such as direct access programme selection. If your original remote uses one/two digit input switching (-/-- symbol), this function can be obtained by pressing the -/-- key, which is the same as the 10 key.

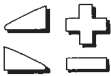

Volume, Programme

The Volume and Programme keys control the most frequently used functions of your Television. They operate just as those on your original remote.



Scan

The Scan key allows you to easily browse through the programmes on your Television and Video Recorder. See page 13 for more information.



Mute

The Mute key operates the same function as it did on your original remote.



Video Recorder Keys


After pressing the VCR key, the Video Recorder keys operate the functions of your Video Recorder. To prevent accidental recording, the Record key must be pressed **twice** to start recording.



Teletext Keys

After pressing the TV key, the top row of the Video Recorder keys are used to operate the main teletext functions. The symbols above the keys are for teletext. The Text keys are used to access the teletext functions of your Television. Of course, your Television must be teletext capable. For an explanation of the teletext symbols, please refer to page 15 of this manual. For a detailed explanation on how teletext works, please refer to the manual of your television set.



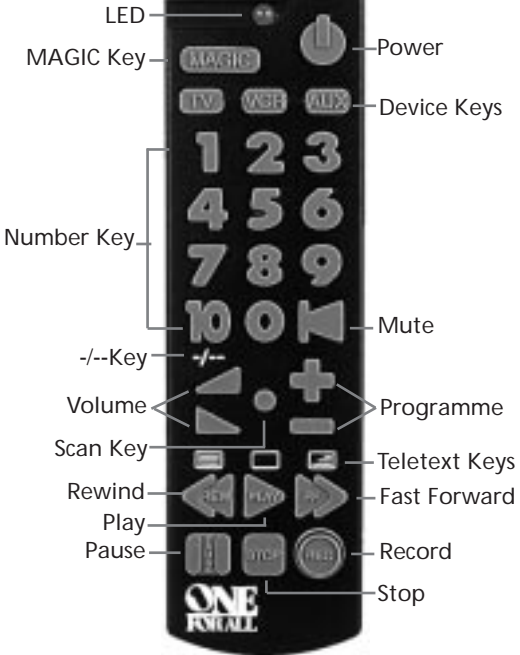




Installing the Batteries


Your LITTLE EASY needs two new AAA/LR03 alkaline batteries.

1

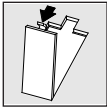


Remove the battery cover from the back of your LITTLE EASY.

2

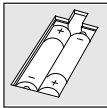

Match the batteries to the + and - marks inside the battery case, then insert the batteries.

3

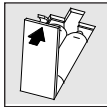

Press the battery cover back into place.

Note: In order to avoid having to reprogramme your Little Easy after you remove the batteries, you will need to insert new batteries within 3 minutes. Also it is best that you do not use rechargeable batteries.





Setting Up Your Device

To set up the LITTLE EASY for your Television:

1

ONE FOR ALL	
Admiral	087 093 264
	163
Agazi	264
AGB	075
Aiko	216 009
Akai	208 351 037
	191 163 284
	009 218
Akiba	218

Find your Television code in the Set-Up Code section (starting on page 23). Codes are listed by brand name. The most popular code is listed first. Make sure your Television is switched on.

2



Press and release your LITTLE EASY's **TV** key. Then **press and hold down the MAGIC key** until the LITTLE EASY's red light blinks twice. (The light will blink once and then twice.)

3



Enter your three-digit TV code using the number keys. The red light will blink twice.

4



Now, aim your LITTLE EASY at your Television and press **POWER**. If your Television switches off, your LITTLE EASY is ready to run your Television.

Write your code in the three boxes on page 22, for quick, easy reference.

To control your Television, press TV first.

Important notes:

- To set up your Video Recorder, follow the same instructions above, only press the VCR key during step 2.
- If your Video's original remote control does not have a power key, press PLAY instead of POWER.
- If your Device does not respond, follow steps 1-4 with each code listed for your brand. If none of the codes listed for your brand operate your Device, then try the search method described on page 10, even if your brand is not listed at all.





The AUX Key: Setting Up a Second Television or Video

The AUX key on your LITTLE EASY can be used to control a second Television or Video Recorder.

To set up the AUX key to control a second TV:

1



Press and hold down the **MAGIC** key until the red light blinks twice. (The light will blink once and then twice.)

2

9 9 2

Press **9 9 2 TV AUX**.



3

ONE FOR ALL	
Admiral	087 093 264
	163
Agazi	264
AGB	075
Aiko	216 009
Akat	208 351 037
	191 163 284
	009 218
Akiha	218

Find your Television code in the Set-Up Code section (starting on page 23). Codes are listed by brand name. The most popular code is listed first. Make sure your Television is switched on.

4



Press and release your LITTLE EASY's **AUX** key. Then **press and hold down the MAGIC** key until the LITTLE EASY's red light blinks twice.

(continued)





5



Enter your three-digit TV-code using the number keys. The red light will blink twice.

6



Now, aim your LITTLE EASY at your Television and press **POWER**. If your Television switches off, your LITTLE EASY is ready to run your Television.

Write your code in the three boxes on page 22, for quick, easy reference.

Important notes:

- To set up your Video Recorder, follow the same instructions above, only press the VCR key during step 2.
- If your Video's original remote control does not have a power key, press PLAY instead of POWER.
- If your Device does not respond, follow steps 3-6 with each code listed for your brand. If none of the codes listed for your brand operate your Device, then try the search method described on page 10, even if your brand is not listed at all.










The Search Method

If your Television or Video Recorder does not respond to the LITTLE EASY after you have tried all the codes listed for your brand, try the Search Method. The Search Method may also work if your brand is not listed at all.

Let's say you cannot get your LITTLE EASY to control your Television:

- 1 Switch your Television on.
- 2  Press the **TV** key on your LITTLE EASY.
- 3 
9 9 1 Aim your LITTLE EASY at your Television. **Press and hold down MAGIC** until the LITTLE EASY's red light blinks twice. Then, press **9 9 1**. The red light will blink twice.
- 4 
 Now, alternate between **TV** and **POWER**, over and over, until your Television turns off. You may have to press these keys many times, so please be patient. It could take up to 5 minutes. Remember to keep pointing your LITTLE EASY at your Television when you press the POWER and TV keys.
- 5  When your Television turns off, press **MAGIC**. Don't forget, press MAGIC as soon as your Television turns off. Now your LITTLE EASY is ready to run your Television.

To search for the code for your Video Recorder, follow the instructions above, only press the VCR key during steps 2 and 4.

Note: If your Video's original remote control does not have a power key, press PLAY instead of POWER when searching for your code.





Getting Codes from the LITTLE EASY

Even if you have used the Search Method, it is handy to know your Television or Video code for future reference. It's easy to get your code after you have set up the Little Easy with your Television or Video.

To get your Television code:

1



Press **TV**.

2



9 9 0

Press and hold MAGIC until the LITTLE EASY's red light blinks twice. Press **9 9 0**. The red light will blink twice.

3

1

For the first digit of your three-digit code, press **1** and count the red blinks. If there are no blinks, the digit is "0".

4

2

For the second digit, press **2** and count the red blinks.

5

3

For the third digit, press **3** and count the red blinks. Now you have your three-digit code.

For your Video, follow the same steps above, only press VCR instead of TV.









Make sure you write your Television code in the three boxes on page 22.








Changing the Device Keys

If you want, you can change any of the device keys (TV, VCR or AUX) to operate another type of device. The chart below lists how to change the keys and to set up that device:

To Change:	Press:
 to 	MAGIC* 992 VCR TV then TV MAGIC* Code
 to 	MAGIC* 992 TV VCR then VCR MAGIC* Code
 to 	MAGIC* 992 TV AUX then AUX MAGIC* Code
 to 	MAGIC* 992 VCR AUX then AUX MAGIC* Code

* Hold down the MAGIC key until the red light blinks twice. (The light will blink once and then twice.)

To reset a device to its original function, press:

	MAGIC* 992 TV TV
	MAGIC* 992 VCR VCR
	MAGIC* 992 AUX AUX

* Hold down the MAGIC key until the red light blinks twice. (The light will blink once and then twice.)





The Scan Key

Your LITTLE EASY comes with a special Scan key which lets you go through every programme available on your Television or Video Recorder.

For example, to scan through the programmes on your Television:

1



Aim the LITTLE EASY at your Television and press **TV**, then **Scan**. You will automatically move through all the programmes available on your Television stopping at each programme for about three seconds. Remember, the LITTLE EASY must remain aimed at your Television the entire time you are using Scan.

2

When you find a programme that you would like to watch, simply press the **Scan** key again to stop the Scan feature.

To use Scan with your Video Recorder, simply press **VCR** then **Scan**. To use Scan with the AUX key, press **AUX** then **Scan**.

Note: Scan may not function with devices that did not have a programme +/- key on the original remote.







Colour & Brightness

Depending on the functions of your original remote control, the LITTLE EASY can operate the colour and brightness settings of your Television.

To adjust the colour:

  Press **MAGIC** followed by **Volume+** (for colour up) or **Volume-** (for colour down).

To adjust the brightness:

  Press **MAGIC** followed by **Programme+** (for brightness up) or **Programme-** (for brightness down).

Punch-Through

You may be able to use some features of your Television and Video Recorder at the same time. If you're watching a programme on your Video, you can adjust the volume (a TV function) without first pressing the TV key. The chart below lists some of the possibilities:




Last Key Pressed:	You Can Control:
VCR	TV volume up and down, mute
AUX	TV volume up and down, mute





More on Teletext

 The LITTLE EASY is designed to operate the basic functions of teletext (text on, text off and mix).

Symbol	Title	Description
	TEXT	Puts the Television in the teletext mode
	TV	Switches the Television back to regular viewing mode. On some Televisions, this may be done by pressing the TEXT key several times.
	MIX	Shows both teletext and regular Television simultaneously. Also used for subtitling. On some Televisions this function is accessed by pressing the TEXT key twice.

Note: For a more detailed explanation of teletext, please refer to the manual of your Television. Remember, different Televisions control teletext features in different ways. Not all of the teletext functions may be available for your particular model.








Sleeptimer

Sleeptimer is a feature which comes built into many TVs. It allows you to set your device to turn off within a certain amount of time. This feature comes in handy if, for example, you enjoy falling asleep with your television on.

With the ONE FOR ALL, there are two ways to use the sleeptimer. If your TV came with this feature built in, follow the instructions "Device Sleeptimer" below. If your device did not come with this feature, follow the instructions "ONE FOR ALL Sleeptimer".

Device Sleeptimer

If your TV has a "Sleeptimer" function built in, you can access this function with your ONE FOR ALL remote. To do so:

- 1 Make sure your TV is switched on.
- 2  Press the TV key.
- 3 
 Point the ONE FOR ALL at your TV and press and release **MAGIC** then press **POWER**. You should see the Sleeptimer activate on your TV screen. To increase the timer, simply press MAGIC then POWER until the timer gets to the desired time.

To deactivate the Sleeptimer, repeat steps 1-3 above. During step 3, continue pressing Magic then Power until the timer indicates zero minutes.

Note: Remember, your device must have its own Sleeptimer function in order for the above instructions to operate. If your device does not have its own Sleeptimer, follow the instructions outlined below.





The ONE FOR ALL Sleptimer

Your ONE FOR ALL remote comes with an internal Sleptimer function for those devices which did not come standard with this function. To use the ONE FOR ALL Sleptimer:

Making your ONE FOR ALL ready for Sleptimer:

1



Press the TV key.

2



9 7 0

Then, **press and hold MAGIC** until the red light blinks twice. Press **970**. The red light will blink twice again. It is only necessary to perform steps 1 and 2 once. Now to set the timer, continue with the steps below.

Setting the ONE FOR ALL Sleptimer:

It is possible to set the timer for 15, 30, 45 or 60 minutes. To do this, first make sure your TV is switched on. Then,



Press and release **MAGIC** then **POWER**. The red light will blink once which indicates the timer is set for 15 minutes. To increase the timer, simply press **POWER** again (this must be done within 5 seconds.). The light will blink twice indicating the timer is set for 30 minutes (2x 15). You can press **POWER** a maximum of four times which will set the timer to 60 minutes.





 (:30)

 (:45)

 (:60)

Once you have set the timer to the desired time, set your ONE FOR ALL remote down, pointing it at your device. When the programmed amount of time has elapsed, the ONE FOR ALL will send the command for Power, hence turning off your device.

Notes:

-The red light on the ONE FOR ALL will blink every 15 seconds indicating that the remote is in Sleptimer mode.

-To deactivate the Sleptimer, simply press any key on the ONE FOR ALL remote.

-It is only necessary to follow steps 1 and 2 above one time. For subsequent use of the Sleptimer, simply begin with "Setting the Sleptimer".

-Remember, when using the ONE FOR ALL Sleptimer, you must set the remote so it is pointing to your device.











Preventing Accidental Code Changes

To prevent the accidental changing of codes in the LITTLE EASY (for instance by young children), it is possible to lock in the code you have set up:

Please remember, this is an optional feature and should only be used after you have found all the code(s) which operate your device(s) correctly and have set up your LITTLE EASY exactly the way you want it.

To lock in your:	Press:
TV code	  * 9 8 2
VCR code	  * 9 8 2
AUX code	  * 9 8 2

* Hold down the MAGIC key until the red light blinks twice. (The light will blink once and then twice.)

To release the lock, simply repeat the same steps.

Note: Once you have locked in a code, you will not be able to enter a new code until the lock is released.



Trouble-Shooting

Red light does not blink when you press a key?	Replace batteries with 2 fresh, new AAA/LRO3 alkaline batteries.
The ONE FOR ALL does not respond after pressing a key?	Make sure you are using new batteries and are aiming the ONE FOR ALL at your device.
The ONE FOR ALL does not operate your device(s)?	A) Try all the codes listed for your brand B) Try the search method on page 10.
Your brand is not listed in the ONE FOR ALL code section?	Try the search method on page 10.
When following the set-up instructions, the red light on the ONE FOR ALL only blinks once instead of twice after you enter a three-digit code?	Did you use the Code Lock feature? You must first unlock the code before entering a new code. Follow the instructions on page 19 to do this.
The ONE FOR ALL is not performing commands properly?	You may be using the wrong code. Start the search method over again to locate the proper code.
Press a key but get the wrong result?	Hold MAGIC until the red light blinks twice, then press 992 and the device key twice. You will need to set-up your device again. Try the codes for brand or the search method on page 10.
You cannot control the volume feature of your Satellite, Cable Converter or TV/Video combination OR you cannot control the volume of the TV set up on the AUX key?	Hold MAGIC until red light blinks twice Then press 993 and VOL+. To set the volume control back to TV (Punch-Through), hold Magic until the red light blinks twice, then press 993 TV.
Problems changing channels?	Enter the programme number exactly as you would on your original remote.
Video not recording?	As a safety feature on your ONE FOR ALL, you must press the Record key twice .
Scan does not work on your device?	Make sure your original remote had a programme +/- key.



Consumer Help-Line

If you have any questions about the operation of your new ONE FOR ALL Universal Remote Control, you may call our consumer help-line for assistance. Before calling, please read this manual carefully to find the answer to your question. If you cannot find a solution in this manual, please complete the information below on all your equipment before calling. This way we can better serve you.

In the UK: phone: 0800 966 194
 fax: +31 53 432 9816
 e-mail: ofahelp@ueic.com
 Mon-Fri: 11:00-7:00

In Ireland: phone: 1-800 553 118
 fax: +31 53 432 9816
 e-mail: ofahelp@ueic.com
 Mon-Fri: 10:00-20:00
 Sat: 10:00-16:00

In Australia: phone: 1-800 064 472
 e-mail: ofahelp@ueic.com

Your ONE FOR ALL model number: URC-2560

Date of purchase: / /
 day/month/year

Your device:
(The first row is an example of how to complete this table)

TYPE	BRAND	MODEL NR.	REMOTE
TV	Sony	KVX-2950B	RMT-V131B





Quick Code Reference

The following pages list the codes for your equipment. The most popular codes for each brand are listed first.

If your device does not respond to the LITTLE EASY after you have tried all the codes for your brand, try the search method (page 10).

Write down the codes for your devices in the boxes below, for quick and easy reference.

<u>Device Type</u>	<u>Code</u>
1. _____	<input type="text"/> <input type="text"/> <input type="text"/>
2. _____	<input type="text"/> <input type="text"/> <input type="text"/>
3. _____	<input type="text"/> <input type="text"/> <input type="text"/>



Little Easy Code List

Televisions

Acura	009
Admiral	087 093 418 213 264
Adyson	217
Agazi	264
AGB	516
Aiko	216 009 037 371 035 072 361 191
Aim	037 274
Akai	208 361 371 037 191 035 009 072 218 163
Akiba	218 282 455 037
Akura	218 282 276 009 412 264 037
Alba	218 235 009 418 370 355 371 037 216 247 431
Alcyon	076
Allorgan	206 294 217
Allstar	037
Amplivision	217 400 320
Amstrad	177 009 516 264 218 371 362 412 037
Anglo	009 264
Anitech	009 068 076 264
Ansonic	370 102 009 037 374 163 323 411 259 247 012 428
Arc en Ciel	399 501 196 109 568
Arcam	216 399 217
Aristona	037 556 012
Arthur Martin	400
ASA	105 346 070 104 087
Asberg	037 076
Asuka	218 264 216 282 217
Atlantic	037 216 206 320
Atori	009
Audiosonic	037 109 217 370 337 264 218
Audioton	217
Ausind	076
Autovox	087 237 076 217 247

Ayomi	238
Baird	109 193 343 190 192 072
Bang & Olufsen	087 565
Basic Line	218 009 374 037 282
Bastide	217
Baur	303 535 512 554 361 505 010 037
Bazin	217
Beko	370
Beon	037
Best	337 370 421
Bestar	037 370 374
Binatone	217
Black Star	247
Blacktron	282
Blackway	282
Blaupunkt	554 535 191 195 200 213 327 328
Blue Sky	218 282 455 037
Blue Star	282
Bondstec	247
Boots	217
BPL	282
Brandt	501 399 237 333 196 198 287 335 568
Brinkmann	418
Brionvega	037 087
Britannia	216 217
Bruns	087
BSR	294
BTC	218
Bush	218 235 009 036 282 037 355 371 374 519
Capsonic	264
Carena	455 037
Carrefour	036 070
Cathay	037
Centurion	037
Century	087 213 247
CGE	074 084 076 247 276 418 370
Cimline	009 235 218
City	009
Clatronic	218 264 370 371 217 076 037 009
Clayton	385
Concorde	009

Condor	216 247 282 320 037 370 009 102	Ferguson	073 287 192 190 335 238 193 109
Contec	216 009 157 011 036	Fidelity	193 216 371
Continental Edison	501 237 196 198 399 333 287 487 568	Finlandia	208 346 359
Cosmel	009 337	Finlux	105 104 037 346 217 072 076 516 070 087 102
Crezar	213	First Line	294 321 216 037 374 385 247 009 217
Crosley	087 247 074 084 076 213	Fisher	104 087 217 036 208 370 087 157 361 303 072
Crown	009 370 076 421 037 359	Flint	037 455
Crystal	431	Forgestone	193
CS Electronics	247 216 218	Formenti	087 213 216 320 076
CTC	247	Fortress	093 087
Cybertron	218	Fraba	370 037
Daewoo	009 037 216 374 218 217	Frontech	247 264 431 217 009
Dainichi	218	Fujitsu	206 072 217
Dansai	037 264	Funai	264 294
Dawa	037	Galaxis	370 418 037
Daytron	009 374	GBC	213 009
Decca	072 516 037 249 217	GEC	043 072 361 516 037 217 072 349
DeGraaf	208	Geloso	213 009 374
Desmet	320 037	General	
Dixi	009 037	Technic	009
Domland	394	Genexxa	218 037 412
DTS	009	Germanvox	213
Dual	217 343 259 399 519	Goldline	337
Dual-Tec	217 259	Goldstar	037 370 290 009 377 217 247 216 431
Dumont	087 104 102 213 217 070	Goodmans	036 072 037 009 264 516 290 374 371
Dynatron	037	Gorenje	370 421
Elbe	435 238 259 362 292 370 163 037 218 191 411	GPM	218
Elcit	087 247 516 102	Granada	037 226 356 359 012 072 108 208 217 076 036 339 516
Elekta	264 282	Grandin	282 218 400 037 009 320 455
Elin	216 037 105 104	Grundig	535 195 191 554 487 070 076 237 037
Elite	218 037	Halifax	264 216 217
Elman	102	Hampton	216 217
Elta	009	Hanseatic	037 292 282 361 394 213 320 428 009 294 217 519
Emerson	177 213 087 247		
Emperor	282		
Erres	037 012		
Etron	037 009		
Euro-Feel	264		
Euromann	216 264 037 217 421 370		
Europhon	037 516 102 213 217 247		
Expert	206 400		
Fenner	374 009		

Hantarex	009 213 037 296	Kaisui	009 217 218 282 037 216 455
HCM	264 009 282 412 217 218 037	Kamp	216
Hema	217 009	Kapsch	206 163 361
Hifivox	501 196 399 568	Karcher	037 421 282
HiLine	264 037	Kendo	362 235 247 102 037 477 411 428
Hinari	208 036 037 218 009 163	Kennedy	206 213 435
Hisawa	282 218 400 455	Kingsley	216
Hitachi	225 036 349 356 473 043 343 196 198 217	Kneissel	435 259 292
Hoshai	218	Kolster	037
Hygashi	217 216	Konka	218 371
Hornyphon	037	Korpel	037
Hyper	009 216 217 247	Korting	087 421 320
Hypersonic	361	Kyoto	385
Hypson	037 264 217 282 455 400	Lenco	009 104
ICE	264 217 037 371 218 216 009	Lenoir	009
Imperial	037 247 370 418 074 084 076 349	Lesa	247
Indesit	237 213	Leyco	264 072 037 294
Indiana	037	Lifetec	009 264 519
Ingersol	009	Lloyds	009
Inno Hit	009 072 037 218 290 217 516 247	Loewe	512 087 037
Interbuy	009 264 247 068	Logik	011
Interfunk	037 012 087 512 275 327 163 361 370 501 568	Luma	206 037
Intervision	282 217 455 068 037 394 218 102 264 247 431	Lux May	037
Irradio	009 037 218 247 290 076	Luxor	237 290 357 361 356
Isukai	218 037 282	M Electronic	346 037 109 343 247 105 104 374 009 217 068 480 492 216
ITC	217	Magnadyne	087 247 516 102
ITS	037 371 218 282 264 216	Magnafon	516 213 076 102 216
ITT	163 480 349 361 473 361 339 208	Mandor	264
JEC	035	Manesth	037 235 217 264 320 276 035
JVC	053 094 190 036 192 193 371 218	Marantz	037
		Marelli	087
		Mark	037
		Matsui	235 177 009 355 011 072 036 037 487 217 294 371 443
		McMichael	043
		Mediator	037 556 012
		Memorex	009
		Memphis	337 072 009
		Mercury	037
		Metz	087 195 535 447 239 213 554 275 367
		Minerva	487 535 070 076 554 237
		Minoka	412 037 359

Mitsubishi	108 150 512 087 036 237	Panasonic	226 250 126 274 213 361 237 367 037
Mivar	292 290 291 370 216	Panavision	037
Motion	076	Pathe Cinema	238 216 400 320 292
MTC	370 349	Pathe Marconi	213 501 196 198 333 399 237 568
Multi		Pausa	009
standard	102	Perdio	072 320
Multitech	217 009 216 247 102	Perfekt	037
Murphy	104 216	Philco	087 084 074 418 076 213 247 370
National	237	Philharmonic	217
NEC	036 320	Philips	037 556 012 323 554 191 043 087 193
Neckermann	037 191 370 505 200 554 556 327 349 087 213 217 411	Phoenix	037 087 320 385
NEI	037 337 431	Phonola	037 012 087 193 216
Nesco	247	Pioneer	037 343 428
Newtech	037 009 556 343	Plantron	037 264
New World	218	Policom	568
Nicamagic	216	Poppy	009
Nikkai	072 218 037 217 264 035 337 216 009	Prandoni-Prince	247 516 361 213 076
Nobliko	102 076 070 216	Precision	217
Nogamatic	399 501 196 568	Prima	009 264
Nokia	163 480 349 359 473 361 339 208	Prinz	072
Nordmende	109 501 287 399 196 343 198 213 568	Profex	009
Oceanic	163 400 361 294 563	Profi-Tronic	037
Okano	370	Proline	321 072 037 012
Onwa	371	Prosonic	037 216 370 374
Opera	037	Protech	037 217 009 247 349 102 264 431 337
Orbit	037	Pye	037 556 012
Orion	235 294 177 320 355 011 037 009 321	Pymi	009
Osaki	072 218 217 264 276	Quasar	247
Oso	218	Quelle	037 010 011 501 512 535 554 361 036 217 247 074 084
Osume	157 072	Questa	036
Otto Versand	010 505 036 093 512 037 556 535 195 349 554 191 361 235 109 213 294	Radialva	109
Pael	216	R-Line	037
Palladium	370 037 191 505 200 554 556 327 349 087 213 217	Radiola	037 556 012 323
Panama	009 217 264 216 037	Radiomarelli	087 516 247
		Radiotone	009 037 428
		Rank	070
		Rediffusion	361
		Revox	037 370
		Rex	206 411 259
		RFT	087 292 428 072

Roadstar	009 264 218	Sonoko	037 009 264
Robotron	087		282 217
Royal Lux	421	Sonolor	208 163 400
RTF	087	Sontec	037 370 294
Saba	287 213 087	Sony	010 505 011
	399 163 109		036
	501 516 343	Sound &	
	361 498 196	Vision	102 218 374
	198 335	Soundwave	037 320 418
Sagem	455	Standard	218 009 217
Saisho	235 516 177		320 037
	009 011 217	Star Lite	037
	264	Stenway	282 218
Salora	290 349 356	Stern	206 259
	359 361 516	Sunkai	294 355 321
Sambers	213 516 102		455 218 235
Samsung	037 556 009	Sunwood	037 009
	217 370 264	Superla	516 216
	090 216 290	Supertech	009 037
	072 208	Supra	374 009
Sandra	216 217	Sutron	009
Sansui	037	Sydney	216 217
Sanyo	208 157 292	Tandy	218 072 217
	036 011 370		247 276 093
	072 216 217	Tashiko	036 043 217
	104 213 339		216
SBR	037 556 012	Tatung	037 072 516
Schaub Lorenz	349		217 249 011
Schneider	037 012 217	TEC	217 276 009
	303 519 394		247 471 335
	259 323 343	Technema	320
	247 371 218	Teleavia	109 501 196
	361		399 333 568
SEG	217 264 009	Telecor	037 163 218
	036 102 362		217 259
	037	Telefunken	109 501 498
SEI	087 102 010		471 399 287
	516 213 294		074 084 101
	296 206 037		335 262 073
Seleco	206 226 362		343 037
	259 411	Telegazi	037 163 259
Sencora	009		218 264
Sentra	276 035 218	Telemeister	320
Sharp	093 157 036	Telesonic	037
	294	Teletech	009 247 337
Shorai	294	Teleton	217 275 206
Siarem	087 102 213		349
Siemens	191 535 554	Televideon	320 216
	157 195 200	Temco	294
	213 327 328	Tensai	104 218 037
Sierra	037 556 012		217 294 320
Siesta	370		009 105 374
Silva	216		371 377
Silver	036 361	Texet	217
Singer	087 102 400	Thomson	287 399 109
Sinudyne	177 087 235		501 333 471
	102 213 294		335 196 198
	296 361		237 343 037
Skantic	357 356		568
Sogera	320	Thorn	193 190 238
Solavox	361 072		073 192 074
Sonitron	208 370 339		084 104

Tokai	072 037 337 163	Akai	106 315 053 041 020
Tokyo	216 035	Akiba	072
Tomashi	282	Akura	072 041
Toshiba	035 508 036 070 102	Alba	278 072 333 334 209 352 192 020 295
Towada	349 102	Allorgan	240
Trans		Allstar	322
Continens	217	Ambassador	020
Trident	516 217	Amstrad	000 325 332
Triumph	177 516 346 556	Anitech	072 322
Uher	076 037 206 320 303 374 418	ASA	037 081
Ultravox	087 102 374 216 213 037	Asuka	072 037 081 000
Universum	346 105 535 473 361 200 011 512 294 036 157 070 370 492 480 247	Audiosonic	278
Univox	337 087 037	Baird	106 278 104 107 041 000
Vestel	037 217	Bang & Olufsen	499
Vexa	009 037	Basic Line	278 209 020 072
Videologique	216 218 217	Bestar	278 020
VideoSystem	037	Black Panther Line	278
Videotechnic	216 320	Blaupunkt	226 154 227 162 081 006 195 403
Visiola	216	Bondstec	020
Vision	037 320	Bosch	154
Vistar	276 206	Brandt	041 187 206 320 493
Vortec	037	Brionvega	344
Voxson	087 076 037 418	Bush	072 278 315 333 334 209 352
Waltham	217 276 356 418 287 385 037	Carena	209 081
Watson	037 320 218 213	Carrefour	045
Watt Radio	213 102 216	Catron	020
Wega	213 036 087 037	CGE	041 000
Weltblick	037 320	Cimline	072 209
White Wes- tinghouse	320 216 037 337	Clatronic	020
Yamashi	282 455 218 037	Combitech	352
Yoko	217 037 218 264 009 431	Condor	020 278
Yorx	218	Crown	278 072 020 322
Zanussi	206 217	Daewoo	278 020 045
		Dansai	072
		Daytron	278
		Decca	000 041 081 008 067
		DeGraaf	042 166 081 104 048
		Dual	041 081
		Dumont	000 081 104 105
		ESC	278 240
		Elcatech	072
		Elin	240
		Elta	072

VCRs

Aiwa	307 000 041 209 352 037
------	----------------------------

Emerson	072	ITV	278 037
Etzuko	072	JVC	041 067 008
Europhon	020		206 384
Ferguson	107 041 320	Kaisui	072
	053 493	Kendo	106 209 315
Fidelity	000 072		053
Finlandia	104 081 042	Kenwood	041
	166 000 048	Korpel	072
Finlux	000 081 104	Kuba	047
	042 105	Leyco	072
First Line	072 209 043	Loewe Opta	081 006 037
	037 045 042		105 004
Fisher	047 104 046	Logik	004 240 072
Flint	209		106 209
Frontech	020 322	Luxor	106 046 043
Fujitsu	000		072 104
Funai	000	M Electronic	000 037
Galaxy	000	Manesth	072 045 081
GBC	020		209
GEC	081	Marantz	081 006 295
General	020		209
Goldhand	072	Matsui	209 004 192
Goldstar	037 000		295 037 208
Goodmans	000 072 240		240 352 332
	278 037 020	Mediator	081
	081 209	Memorex	104 000 046
Graetz	041 104 240		037 048 047
	344	Memphis	072
Granada	104 046 048	Metz	195 347 081
	081 006 240		162 227 226
	037 226 042		006
	000	Migros	000
Grandin	072 037 020	Minerva	195
	000 278	Mitsubishi	043 067 081
Grundig	007 195 081	Multitech	000 072 020
	347 226 006		104
	403 320	Murphy	000
Hanseatic	037 209	National	226 162
Hantor	020	NEC	041 067 040
HCM	072	Neckermann	041 208 006
Hinari	004 072 208		081 344
	209 352 041	Nesco	072
	322	Nikkai	020 072 278
Hisawa	209 352	Nokia	104 106 041
Hitachi	042 105 166		278 046 344
	041 000 240		240 048 042
	081 004 104		081
Hypson	072 209 278	Nordmende	041 384 320
Impego	020		187 494
Imperial	000 240	Oceanic	000 048 106
Ingersol	004		081 104 041
Inno Hit	020 240 278		046
	322	Okano	315 209 072
Interbuy	037 072		322
Interfunk	081 104	Orion	209 004 208
Intervision	000 278 037		352 295 333
Irradio	072 037		334
ITT	106 041 046	Orson	000
	344 384 104	Osaki	000 037 072
	240	Otto Versand	081

Palladium	072 315 037 041 006 209	Sinudyne	004 081
Panasonic	226 227 162 225	Solovox	020
Pathe Cinema	004 043	Sonitron	047
Pathe Marconi	041	Sonoko	278
Perdio	000	Sonolor	048
Philco	072	Sontec	037
Philips	081 006 403	Sony	033 034 032 106
Phonola	081	Standard	278
Pioneer	067 081 042	Starlite	037 104
Portland	020 278	Sunkai	209 295
Prinz	000	Sunstar	000
Profex	322	Suntronic	000
Profi-Tronic	081 240	Sunwood	072
Proline	000	Supra	037 240
Prosonic	209	Symphonic	000 072
Provision	278	Taisho	004 209
Pye	081	Tashiko	000 048 240 081 037
Quelle	006 208 081 344	Tatung	000 041 081 053 048
Radialva	037 072 081 048	TEC	020
Radiola	081	Teleavia	041 187
Rex	041 384	Telefunken	187 041 320 384 493 494
RFT	020 403 072	Teletech	322 072
Roadstar	240 072 037 278	Tenosal	072
Royal	322 072	Tensai	000 322 037 072 004
Saba	041 187 206 320 384 494	Thomson	041 384 320 206 493 494
Saisho	004 209 208 192	Thorn	041 104 037
Salora	046 043 106 104	Tokai	072 037
Samsung	240 432	Toshiba	045 041 384 043 081 403
Samurai	020	Towada	322
Sansui	041 067 106	Towika	072
Sanwa	004	Triumph	208
Sanyo	104 046 047	TVA	020
Saville	352 278 240	Uher	037 240 344
SBR	081	Ultravox	344
Schaub Lorenz	041 344 106 000 104	Unitech	240
Schneider	072 000 037 081 042	United Quick Star	278
SEG	072 240 322 278	Universum	000 325 081 240 037 106 195 006
SEI-Sinudyne	004 081	Victor	008 067
Selec	041 008 384 020 037	Watson	081
Sentron	072	Weltblick	037
Sentra	020 072	White Wes- tinghouse	344
Sharp	048	Yamashi	072 278
Shintom	072 104	Yokan	072
Shivaki	037	Yoko	037 072 020 240
Shorai	004		
Siemens	195 006 037 104 007 081		
Silva	037		

Guarantee

UNIVERSAL ELECTRONICS INC./ONE FOR ALL warrants to the original purchaser that this product will be free from defects in materials and workmanship under normal use for a period of ninety (90) days from the date of the original purchase. Product will be replaced free of charge if it has been proven to be defective within the 90-day period when said product is returned at customer expense within the warranty period. THIS WARRANTY DOES NOT COVER ANY EXPENSES INCURRED IN THE REMOVAL AND REINSTALLATION OF THIS PRODUCT.

This warranty does not cover damage or failures caused by products or services not supplied by ONE FOR ALL, or which result from accident, misuse, abuse, neglect, mishandling, misapplication, faulty installation, set-up adjustment, improper maintenance, alteration, maladjustment of consumer controls, modifications, commercial use, fire, water, lightning or other acts of God. This warranty does not cover cartons, carrying cases, batteries, broken or marred cabinets, or any other items used in connection with the product.

There are no express warranties except as listed above. ONE FOR ALL SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE. Some countries do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from country to country.

To obtain warranty service during the warranty period, please carefully pack the product and send it prepaid and adequately insured to the address below, together with your purchase receipt or other proof of the date of original purchase.

In UK:

ONE FOR ALL
P.O. Box 197
Yateley, GU46 6ZR

In Ireland:

Sherlane Agencies Ltd./OFA
Rockford Works
Deansgrange Rd.
Blackrock, County Dublin

In Australia:

Kenmark Industrial (A)
Co. PTY. LTD.
106 Mitchell Street,
Maidstone VIC 3012,
AUSTRALIA

IMPORTANT:

IF THE UNIT IS RETURNED WITHIN THE WARRANTY PERIOD, YOU MUST INCLUDE YOUR PURCHASE RECEIPT so that we may establish your eligibility for service and can replace your unit without cost. It would be helpful if you included a note detailing the problem. **IF THE UNIT IS RETURNED FOR SERVICE OUTSIDE THE WARRANTY PERIOD,** please include a cheque to cover the cost of replacement, handling and return postage. (Prices may differ per model. Please contact ONE FOR ALL customer service in your country for exact amount.)

NOTHING IN THIS GUARANTEE AFFECTS YOUR STATUTORY RIGHTS.

ONE FOR ALL and the ONE FOR ALL 3 "Little Easy" are trademarks of Universal Electronics Inc.

Copyright 1996, 1997, 1998 by Universal Electronics Inc. All rights are reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated to any language or computer language, in any form or by any means, electronic, mechanical, or otherwise, without the prior written permission of Universal Electronics Inc.

URC-2560
700521

UK

SdL 0698



Printed on Recycled Paper