

**Setup Codes for TVs
(Use with TV key)**

AOC 1122, 1114
 Admiral 1143, 1234
 Aiko 1142
 Akai 1122
 Alaron 1223
 America Action 1224
 Anam 1224
 Audiovox 1233, 1224, 1142, 1242
 Baysonic 1224
 Belcor 1114
 Bell & Howell 1212, 1112
 Bradford 1224
 Brockwood 1114
 Broksonic 1231, 1234
 CXC 1224
 Candle 1122, 1133
 Carnivale 1122
 Carver 1132
 Celebrity 1111
 Cinerall 1233, 1142
 Citizen 1134, 1122, 1133, 1142
 Concerto 1133
 Contec 1224
 Craig 1224
 Crosley 1132
 Crown 1224
 Curtis Mathes 1123, 1132, 1212, 1124, 1233, 1143, 1134, 1122, 1144, 1133, 1112, 1214
 Daewoo 1233, 1114, 1142, 1242, 1243
 Daytron 1114
 Denon 1144
 Dumont 1113, 1114
 Electroband 1111
 Emerson 1212, 1231, 1234, 1224, 1222, 1114, 1223, 1242, 1243
 Envision 1122
 Fisher 1212
 Fujitsu 1223
 Funai 1224, 1223, 1221
 Futuretech 1224
 GE 1123, 1124, 1233, 1143, 1222
 Gibraltar 1113, 1122, 1114
 GoldStar 1122, 1222, 1114, 1133
 Gradiente 1131, 1133
 Grunpy 1224, 1223
 Hallmark 1222
 Harley Davidson 1223
 Harman/Kardon 1132
 Harvard 1224
 Hitachi 1144, 1133, 1112
 Infinity 1132
 Inteq 1113
 JBL 1132
 JCB 1111
 JVC 1131
 KEC 1224
 KTV 1224, 1122
 Kenwood 1122, 1114
 LG 1133
 LXI 1123, 1132, 1212, 1213, 1222
 Logik 1112
 Luxman 1133
 MGA 1211, 1122, 1222, 1114
 MTC 1134, 1122, 1114, 1133
 Magnavox 1132, 1122, 1223
 Majestic 1112
 Marantz 1132, 1122
 Matsushita 1232
 Megatron 1222, 1144

Memorex 1212, 1232, 1234, 1211, 1222, 1223, 1133, 1112
 Midland 1123, 1113, 1124
 Mitsubishi 1143, 1211, 1222, 1114
 Motorola 1143
 Multitech 1224
 NAD 1213, 1222, 1214
 NEC 1122, 1114, 1133
 NTC 1142
 Nikko 1122, 1222, 1142
 Onwa 1224
 Optimus 1212, 1232, 1214
 Optonica 1143
 Orion 1231, 1234, 1223
 Panasonic 1124, 1232
 Penney 1123, 1213, 1124, 1134, 1122, 1222, 1114, 1133
 Philco 1132, 1234, 1122, 1144, 1114
 Philips 1132
 Pilot 1122, 1114
 Pioneer 1214, 1244
 Portland 1114, 1142
 Princeton 1312
 Prism 1124
 Proscan 1123
 Proton 1222
 Pulsar 1113, 1114
 Quasar 1124, 1232
 RCA 1123, 1124, 1143, 1114, 1244
 Radio Shack 1123, 1212, 1224, 1122, 1222, 1114, 1133
 Realistic 1212, 1224, 1122, 1222, 1114, 1133
 Runco 1113, 1122
 SSS 1224, 1114
 Sampo 1122
 Samsung 1134, 1122, 1222, 1114, 1133
 Sansei 1233
 Sansui 1234
 Sanyo 1212
 Scimitzu 1114
 Scotch 1222
 Scott 1231, 1224, 1222, 1114, 1223
 Sears 1123, 1132, 1212, 1213, 1222, 1223, 1133, 1221
 Semivox 1224
 Semp 1213
 Sharp 1143, 1311
 Shogun 1114
 Signature 1112
 Sony 1111
 Soundesign 1224, 1222, 1223
 Squareview 1221
 Starlite 1224
 Supreme 1111
 Sylvania 1132, 1122
 Symphonic 1221
 TMK 1222, 1133
 TNCi 1113
 Tandy 1143
 Technics 1124, 1232
 Technol Ace 1223
 Techwood 1124, 1133
 Teknika 1132, 1224, 1211, 1134, 1114, 1223, 1133, 1112, 1142
 Telefunken 1133
 Toshiba 1212, 1213, 1134
 Vector Research 1122
 Victor 1131
 Vidikron 1132
 Vidtech 1222, 1114
 Wards 1132, 1122, 1222,

1114, 1223, 1133, 1112
 White
 Westinghouse 1234, 1242, 1243
 Yamaha 1122, 1114
 Zenith 1113, 1234, 1112, 1142, 1243

**Setup Codes for Cable Boxes or
Satellite
Receivers (Use with CBL/SAT
key)**

ABC 1114, 1122
 Allegro 1232, 1244
 Antronix 1211
 Archer 1232, 1211, 1323
 Cabletenna 1211
 Cableview 1211
 Century 1232
 Citizen 1232, 1244
 Comtronics 1214
 Contec 1142
 Emerson 1323
 Everquest 1134, 1214
 Focus 1312
 Garrard 1232
 Gemini 1134, 1323
 General Instrument 1313
 GoldStar 1231, 1214
 Goodmind 1323
 Hamlin 1143, 1241, 1123, 1213
 Jasco 1134, 1232, 1244
 Jerrold 1114, 1131, 1313, 1134
 Memorex 1111
 Movie Time 1222
 NSC 1222
 Oak 1142
 Optimus 1144
 Panasonic 1111, 1144
 Paragon 1111
 Philips 1232
 Pioneer 1231, 1322, 1331
 Popular Mechanics 1312
 Pulsar 1111
 Quasar 1111
 RCA 1144
 Radio Shack 1134, 1244, 1323, 1332
 Recoton 1312
 Regal 1143, 1241
 Runco 1111
 SL Marx 1214
 Samsung 1231, 1214
 Scientific Atlanta 1122, 1314, 1331
 Signal 1134, 1214
 Sprucer 1144
 Starcom 1114, 1134
 Stargate 1134, 1214, 1323
 Starquest 1134
 TV86 1222
 Teleview 1214
 Tocom 1131
 Toshiba 1111
 Tusa 1134
 Unika 1232, 1211
 Universal 1232, 1211, 1233
 Viewstar 1222
 Zenith 1111, 1321
 Zentek 1312

**Setup Codes for VCRs
(Use with VCR/DVD key)**

Admiral 1143, 1232
 Adventura 1111
 Aiko 1242
 Aiwa 1122, 1111

America Action 1242
 American High 1121
 Asha 1234
 Audiovox 1122
 Beaumark 1234
 Bell & Howell 1214
 Broksonic 1231, 1222, 1232, 1112, 1244
 CCE 1212, 1242
 Calix 1122
 Canon 1121
 Carver 1213
 Cinerall 1242
 Citizen 1122, 1242
 Colt 1212
 Craig 1122, 1142, 1234, 1212, 1241
 Curtis Mathes 1144, 1121, 1224
 Cybernex 1234
 Daewoo 1134, 1242
 Denon 1132
 Dynatech 1111
 Electrohome 1122
 Electrohome 1122
 Emerex 1113
 Emerson 1122, 1231, 1111, 1222, 1133, 1232, 1112, 1242, 1244
 Fisher 1142, 1214
 Fuji 1121, 1114
 Funai 1111
 GE 1144, 1121, 1143, 1234
 Garrard 1111
 Go Video 1243, 1311
 GoldStar 1122, 1123
 Gradiente 1111
 HI-Q 1142
 Harley Davidson 1111
 Harman/Kardon 1213, 1123
 Harwood 1212
 Headquarter 1141
 Hitachi 1111, 1132
 Hughes Network Sys. 1132
 JVC 1211
 KEC 1122, 1242
 KLH 1212
 Kenwood 1211, 1123
 Kodak 1121, 1122
 LXI 1122
 Lloyd's 1111
 Logik 1212
 MEI 1121
 MGA 1234, 1133
 MGN Technology 1234
 MTC 1234, 1111
 Magnasonic 1242
 Magnavox 1121, 1124, 1213, 1111
 Magnin 1234
 Marantz 1121, 1213
 Marta 1122
 Matsushita 1121, 1224
 Memorex 1121, 1122, 1143, 1124, 1142, 1234, 1111, 1214, 1232, 1224, 1141, 1244, 1221
 Minolta 1132
 Mitsubishi 1143, 1211, 1133
 Motorola 1121, 1143
 Multitech 1111, 1212
 NEC 1214, 1211, 1123
 Nikko 1122
 Noblex 1234
 Olympus 1121
 Optimus 1122, 1143, 1214, 1224, 1243, 1221
 Orion 1231, 1232, 1112, 1244

Panasonic	1121, 1224, 1313, 1221	JVC	1343, 1413
Penney	1121, 1122, 1234, 1132, 1123	Kenwood	1334, 1434
Pentax	1132	Konka	1441
Philco	1121, 1232, 1244	Magnavox	1323, 1432
Philips	1121, 1213, 1314	Marantz	1341
Pilot	1122	Mitsubishi	1324
Pioneer	1211	Onkyo	1323
Polk Audio	1213	Optimus	1344
Profitronic	1234	Oritron	1422
Proscan	1144	Panasonic	1322, 1421, 1433
Protec	1212	Philips	1323, 1341
Pulsar	1124	Pioneer	1332, 1344, 1421
Quarter	1141	Proscan	1331
Quartz	1141	RCA	1331, 1344
Quasar	1121, 1224, 1221	Samsung	1411
RCA	1144, 1121, 1143, 1234, 1132	Sharp	1414
Radio Shack	1111	Sony	1333
Radix	1122	Technics	1322
Randex	1122	Theta Digital	1344
Realistic	1121, 1122, 1143, 1142, 1111, 1214, 1141	Toshiba	1323
Replay TV	1312, 1313	Yamaha	1322, 1342
Runco	1124	Zenith	1323, 1412
STS	1132		
Samsung	1234, 1134		
Sanky	1143, 1124		
Sansui	1111, 1211, 1232, 1241, 1244		
Sanyo	1142, 1234, 1214, 1141		
Scott	1231, 1134, 1222, 1133		
Sears	1121, 1122, 1142, 1111, 1132, 1214, 1141		
Semp	1134		
Sharp	1143		
Shintom	1212		
Shogun	1234		
Singer	1212		
Sony	1121, 1113, 1111, 1114		
Sylvania	1121, 1213, 1111, 1133		
Symphonic	1111		
TMK	1234		
Teac	1111		
Technics	1121, 1224		
Teknika	1121, 1122, 1111		
Thomas	1111		
Tivo	1314		
Toshiba	1134, 1133		
Totevision	1122, 1234		
Unitech	1234		
Vector	1134		
Vector Research	1123		
Video Concepts	1134		
Videosonic	1234		
Wards	1144, 1121, 1143, 1142, 1213, 1234, 1111, 1132, 1212		
White Westinghouse	1232, 1212, 1242		
XR-1000	1121, 1111, 1212		
Yamaha	1123		
Zenith	1124, 1111, 1232, 1114, 1244		

**Setup Codes for DVD Players
(Use with VCR/DVD key)**

Apex	1431
Denon	1322
Fisher	1424
GE	1331
Hitachi	1423
Hiteker	1431