



URC-3505  
700461

# ZAPPER™

## Universal Remote

USER GUIDE & CODE BOOK

Retain For Future Reference



### Contents

<b>ABOUT YOUR ZAPPER</b> Features and Functions	Front Page
<b>INSTALLING THE BATTERIES</b>	Front Page
<b>SETTING UP THE ZAPPER</b>	Front Page
<b>TROUBLE-SHOOTING</b> Searching For Your Code Code Blink Out Helpful Hints Consumer Help-Line	Front Page Front Page Front Page Front Page
<b>ADVANCED OPERATION</b> Controlling Colour & Brightness Punch-Through	Front Page Back Page
<b>SET-UP CODES</b>	Back Page

### About Your ZAPPER

Thank you for purchasing the ONE FOR ALL 3 "ZAPPER" universal remote control (URC-3505). Your ZAPPER package contains:

- The ZAPPER Remote Control
- THE ZAPPER User Guide & Code Book

The User Guide & Code Book explains in simple steps how to set up and operate your new universal remote control. You may need this guide again in the future, so please be sure to keep it.


Your ZAPPER needs two new "AAA/LR03" batteries.


Your ZAPPER is designed to let you use one remote to operate your Television, Video Recorder and Satellite Receiver/Cable Box. The illustration below and the chart on the next page describe the features and functions of the ZAPPER universal remote control.


### Features and Functions


Key	Function
-----	----------


**LED**  
**LED**  
The LED (Light Emitting Diode) flashes red to show the remote is working.

 **SETUP**  
The SETUP key is used to set up your ZAPPER and to access special features.

 **POWER**  
The Power key controls the same features as on your original remote control.

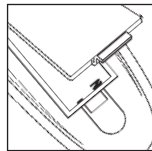
 **Device Keys**  
The TV, VCR and SAT keys select the home entertainment device to be controlled. For example, pressing the TV key allows the remote to control the functions of your Television. After pressing VCR, you can operate your Video Recorder. After pressing SAT, you can operate your Satellite Receiver or Cable Converter.

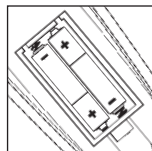
 **Volume, Programme +/-, Mute**  
The Volume, Programme and Mute keys control the most frequently used functions of your devices. They operate just as those on your original remote control. These keys are also used to set up the Zapper for your device.

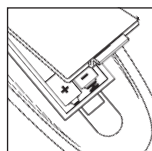
 **Video Recorder Keys**  
After pressing the VCR key, the Video Recorder keys operate the functions of your Video Recorder. To prevent accidental recording, the Record key must be pressed **twice**.

### Installing The Batteries

The ZAPPER needs two new AAA/LR03 alkaline batteries.

**1**  Remove the battery cover from the back of the ZAPPER.


**2**  Match the batteries to the +/- marks inside the battery case, then insert the batteries.


**3**  Press the battery cover back into place.

 
**Important note:**  
- In order to avoid having to reprogramme your ZAPPER after you remove the batteries, you will need to insert new batteries within 15 minutes. Also, it is best that you do not use rechargeable batteries.

### Setting Up The ZAPPER

To set up the ZAPPER for your Television:


**1** Turn on your **TV** (or VCR or SAT).  
**2**  Find your Television code in the Set-Up Code section (see reverse). Codes are listed by brand name. The most popular codes are listed first.


**3**  Press and release the **TV** (or VCR or SAT) key on the ZAPPER. Then **press and hold the SETUP** key until the light blinks twice (the light will blink once, then twice).


**4**  **Enter your 5-digit code** according to the chart below. The red light will blink twice.

 **Volume+** = 1

 **Volume-** = 2

 **Programme+** = 3

 **Programme-** = 4

**5**  Now, aim the ZAPPER at your Television and press **POWER**. If your Television switches off, your ZAPPER is ready to operate your Television.

**Important notes:**  
- To set up your Video Recorder or Satellite Receiver, follow the same instructions above, only press the VCR or SAT key during step 3.  
- To set up your Cable Box, follow the instructions above by pressing the SAT key during step 3.  
- If your device does not respond, follow steps 1-5 with each code listed for your brand. If none of the codes listed for your brand operate your device, follow the Search Method described in the next section. The Search Method can be used even if your brand is not listed at all.  
- Remember, to control your device after you have programmed it with the ZAPPER, you must press the device key first (TV, VCR or SAT).  
- Write the codes for your TV, VCR and Satellite/Cable in the boxes provided for easy future reference.

TV Code

VCR Code


SAT/Cable Code


### Trouble-Shooting

 
#### Searching for Your Code


If your TV, VCR, Satellite or Cable Box does not respond to the ZAPPER after trying all the codes listed for your brand, try searching for your code:

**1** Turn on your **TV** (VCR or SAT).

**2**  Press the **TV** (or VCR or SAT) key on the ZAPPER. Then, **press and hold the SETUP** key until the light blinks twice (the light will blink once, then twice).

**3**  Next, press the **Programme-** key three times.

**4**  Alternate between **TV** and **POWER** until your Television turns off (or between VCR or SAT and POWER until your device turns off). You may have to press these keys many times, so be patient. Remember, you must aim the ZAPPER at your device the entire time you are searching for your code.

**5**  When your device turns off, press and release **SETUP**. Don't forget, press SETUP as soon as your device turns off.

The ZAPPER is now ready to run your device. When you want to control your device, press the device key first.


#### Important notes:

- To search for the code for your Video Recorder, Satellite or Cable Box, follow the same instructions above, only press the VCR or SAT key during steps 2 and 4.
- If your Video's original remote control does not have a power key, press PLAY instead of POWER when searching for your code.
- During step 4, you may have to press these keys many times (up to 150!), so be patient. Remember, you must aim the ZAPPER at your device the entire time you are searching for your code.


#### Code Blink Out


After you have used the Search Method, you can find out which code the ZAPPER is using by blinking back the code. It's handy to know your Television, Video, Satellite or Cable code for future reference. Remember, you can only blink back your code after the ZAPPER is operating your TV, VCR, Satellite or Cable Box.


To blink out your code:


**1**  Press the **TV** (or VCR or SAT) key on the ZAPPER. Then, **press and hold the SETUP** key until the light blinks twice (the light will blink once, then twice).


**2**  Next, press **Programme-**, **Programme-**, **Programme+**.

**3**  For the first digit of your 5-digit code, press **Volume+** and count the red blinks.

**4**  For the second digit, press **Volume-** and count the red blinks.

**5**  For the third digit, press **Programme+** and count the red blinks.

**6**  For the fourth digit, press **Programme-** and count the red blinks.

**7**  For the fifth digit, press **PLAY** and count the red blinks.

Now you have your 5-digit code. Write your code in the boxes provided previously for easy future reference.

#### Important notes:

- To blink out the code for your Video Recorder, Satellite Receiver or Cable Box, follow the same instructions above, only press the VCR or SAT key during step 1.

### Helpful Hints

Problem:	Solution:
Red light does not blink when you press a key?	Replace batteries with 2 fresh, new AAA/LR03 alkaline batteries.
The ONE FOR ALL does not respond after pressing a key?	Make sure you are using new batteries and are aiming the ONE FOR ALL at your device.
The ONE FOR ALL does not operate your device?	A) Try all the codes listed for your brand. B) Try the search method.
Your brand is not listed in the ONE FOR ALL code section?	Try the search method.
The ONE FOR ALL is not performing commands properly?	You may be using the wrong code. Start the search method over again to locate the proper code.
Your TV switches to programme 1 when you press the power key before switching off, OR you must press Power twice to switch on your TV?	Press TV, then press SETUP until the light blinks twice. Then press: (Programme-) (Programme+) (Programme-)

### Consumer Help-Line

If you have any questions about the operation of your new ONE FOR ALL Universal Remote Control, you may call our consumer help-line for assistance. Before calling, please read this manual carefully to find the answer to your question. If you cannot find a solution in this manual, please complete the information below on all your equipment before calling. This way we can better serve you.

In the UK: phone: 0800 - 966 194  
fax: +31 53 432 9816  
e-mail: ofahelp@ueic.com  
Mon-Fri: 11:00-7:00

In Ireland: phone: 1-800 553 118  
fax: +31 53 4329816  
e-mail: ofahelp@ueic.com  
Mon-Fri: 10:00-20:00  
Sat: 10:00-16:00

In Australia: phone: 1-800 064 472  
e-mail: ofahelp@ueic.com

Your ONE FOR ALL model number: URC-3505

Date of purchase: / /  
day/month/year

Your device:  
(The first row is an example of how to complete this table)

TYPE	BRAND	MODEL NR.	REMOTE MODEL NR.
TV	Sony	KVX-2950B	RMT-V131B

### Advanced Operation




#### Controlling Colour & Brightness

Depending on the functions of your original remote control, the ZAPPER can operate the colour and brightness settings of your Television.

To adjust the colour:

   Press **SETUP** followed by **Volume+** (for colour up) or **Volume-** (for colour down).

To adjust the brightness:

   Press **SETUP** followed by **Programme+** (for brightness up) or **Programme-** (for brightness down).



