

## Setup Codes for URC 4063

### Set-Up Codes for TVs

Mark 003  
 Admiral 093, 016, 180, 165, 179  
 Adventura 046  
 Aiko 092  
 Akai 030, 056, 145, 151  
 Alleron 179  
 Ambassador 177  
 Amstrad 171, 177  
 Anam 180  
 Anam National 055  
 AOC 030, 019, 185, 137, 003, 180, 056  
 Archer 003  
 Audiovox 180, 003  
 Belcor 019, 030  
 Bell & Howell 016, 154, 179, 180  
 Blue Star 282  
 BPL 282  
 Bradford 180  
 Brockwood 019  
 Broksonic 236, 463, 003, 180  
 Candle 030, 056, 186, 046  
 Carver 054, 187  
 Celebrity 000  
 Citizen 092, 060, 030, 056, 280, 186, 046, 039  
 Clairtone 185  
 Concerto 056  
 Contec 180, 185  
 Craig 180  
 Crown 180, 039  
 Curtis Mathes 047, 060, 054, 154, 030, 039  
 CXC 180  
 Daewoo 451, 092, 019, 039  
 Daytron 019, 056, 092  
 Dumont 017, 019  
 Electroband 000, 185  
 Electrohome 150, 056, 000, 154, 185, 039  
 Emerson 463, 236, 180, 177, 179, 280, 178, 282, 154, 019, 039, 185  
 Envision 030  
 Finlux 179  
 Fisher 154, 159  
 Fujitsu 179  
 Funai 171, 179, 180  
 Futuretech 180  
 GE 047, 451, 051, 021, 027, 282, 178, 135, 174  
 Gibraltar 019, 030, 017  
 Goldstar 060, 056, 030, 019, 178  
 Goodmans 179  
 Granada 145, 151, 178  
 Grandin 282, 180  
 Grunpy 179, 180  
 Hallmark 178, 179, 236, 019  
 Harvard 180, 236, 178, 179  
 HCM 282  
 Hinari 179  
 Hisawa 282  
 Hitachi 151, 145, 056  
 Hypson 282  
 Ima 180  
 Infinity 054  
 Janeil 046  
 JBL 054, 046  
 JCB 000  
 JVC 053  
 Kaisui 282  
 KEC 180, 060  
 Kenwood 030, 019  
 Kloss 046, 024, 030  
 KTV 180, 030, 280, 185, 039  
 Logik 016, 180, 236  
 Luxman 056  
 LXI 047, 054, 154, 178, 156  
 Magnavox 054, 096, 030, 186, 187, 024, 171, 179  
 Majestic 016, 017  
 Marantz 054, 030, 096, 187  
 Matsui 177, 039  
 Megatron 178, 145, 003, 151  
 MEI 185  
 Memorex 150, 154, 056, 016, 178  
 MGA 150, 030, 019, 178  
 Midland 047, 051, 017, 135, 039  
 Minutz 021, 027  
 Mitsubishi 150, 019, 178, 093  
 Motorola 093, 055, 054, 150, 051  
 MTC 060, 056, 030, 019, 185  
 Multitech 180, 179  
 NAD 156, 166, 178, 019  
 NEC 030, 056, 019  
 Nesco 179  
 Nikko 092, 030, 178  
 NTC 092  
 Onwa 180  
 Optimus 166, 154, 150, 165  
 Optonica 093, 165  
 Orion 236, 463, 180, 179  
 Panasonic 250, 051, 055, 054  
 Penney 047, 051, 060, 019, 018, 030, 156, 021, 027, 178, 003, 135, 039, 250  
 Philco 054, 096, 030, 019, 187  
 Philips 054, 096, 030, 019, 187  
 Pilot 030, 019, 039, 060, 178, 051  
 Pioneer 166  
 Portland 092, 019, 039

Priceclub 060  
 Prism 051, 055  
 Proscan 047  
 Proton 466, 178, 003  
 Pulsar 017, 092, 019  
 Pulser 019, 017, 092  
 Quasar 250, 051, 055  
 RadioShack 180, 165, 039, 056, 047, 030  
 RCA 047, 018, 135, 090, 019, 174, 093  
 Realistic 154, 165, 056, 030, 019, 178, 180, 039  
 Rhapsody 185  
 Runco 060, 494, 030, 017  
 Saisho 177  
 Sampo 030, 039  
 Samsung 060, 427, 056, 030, 019, 178  
 Samsux 039  
 Sanyo 154, 159, 146  
 Scimitsu 019  
 Scotch 178  
 Scott 236, 019, 178, 180, 179  
 Sears 047, 054, 154, 171, 056, 156, 178, 179, 146, 451  
 SEI 177  
 Sharp 093, 491, 165, 039  
 Shogun 019  
 Signature 2000 016, 047, 054, 019  
 Simpson 186, 187, 030  
 Sinudyne 177  
 Sony 000, 080  
 Soundesign 178, 180, 179, 186  
 Spectricon 003, 137, 180, 030, 019, 056  
 Squareview 171  
 SSS 019, 180, 236  
 Starlite 180, 236, 019  
 Supra 039  
 Supre-Macy 046, 039, 186  
 Supreme 000  
 Sylvania 054, 096, 030, 187, 186  
 Symphonic 171, 179, 180  
 Tandy 093, 165, 039, 054, 047  
 Tatung 055, 003, 051  
 Technics 250, 051, 055  
 Technol Ace 179  
 Techwood 051, 056, 003, 055, 250  
 Teknika 092, 054, 060, 056, 019, 016, 180, 179, 186, 039  
 Tera 178  
 TMK 156, 177, 178, 236  
 Tomashi 282  
 Toshiba 156, 154, 060  
 Tosonic 185  
 Totevision 039  
 Triumph 177  
 Universal 027, 021, 047  
 Vector Research 030  
 Victor 053  
 Vidikron 054  
 Vidtech 019, 178  
 Viking 046  
 Wards 054, 016, 096, 030, 174, 056, 165, 019, 021, 027, 020, 178, 179, 080  
 Yamaha 030, 019  
 Zenith 017, 092, 016  
 Zonda 003

### Set-Up Codes for VCRs

Admiral 048  
 Action 317  
 Adventura 000  
 Aiko 278  
 Aiwa 000, 307, 406, 468  
 Akai 041, 061, 315  
 Akiba 072  
 Alba 020, 278  
 American High 035, 081  
 Amstrad 000, 325  
 Anitech 072  
 ASA 037, 081  
 Asha 240  
 Asuka 037  
 Audiovox 037, 038  
 Baird 000, 041, 104  
 Basic Line 072, 020, 278  
 Beaumark 240  
 Bell & Howell 104, 048, 046  
 Blaupunkt 162, 034  
 Brandt Elect-ronique 041  
 Broksonic 184, 121, 211, 295, 361  
 Bush 072, 278  
 Calix 037  
 Candle 037, 038  
 Canon 035  
 Capehart 020  
 Carver 081  
 CCE 278, 072  
 CGE 000  
 Cimline 072  
 Citizen 037, 278, 240, 035, 000  
 Clatronics 020  
 Colt 072  
 Condor 020  
 Craig 240, 072, 037, 047, 271

Crown	072, 020, 278
Curtis	
Mathes	035, 060, 202, 041
Cybernex	240
Daewoo	278, 020, 045, 046
Dansai	072
Daytron	020, 278
De Graaf	042
Decca	081, 000
Dual	041
Dumont	038, 240, 045
Dynatech	000
Electro-	
home	037, 240, 043
Electro-	
phonic	037
Emerex	032
Emerson	278, 184, 479, 000, 002, 121, 211, 037, 043, 061, 208, 295, 361
Ferguson	041
Fidelity	000
Finlandia	081, 110, 104
Finlux	000, 042, 104, 081
Firstline	072, 043, 045, 037
Fisher	104, 046, 047, 066, 054
Frontech	020
Fuji	033, 035, 032, 034
Funai	000, 278, 072, 325, 240
GAB	072
Garrard	000, 325
GE	060, 202, 035,
GEC	081
Go Video	232, 350, 240
Goldstar	037, 038, 278
Goodmans	278, 000, 020, 072, 037, 062
Gradiente	000
Granada	048, 035
Grandin	072, 000, 037
Grundig	081
Harley	
Davidson	000
Harman/	
Kardon	038
Harvard	072
Harwood	072
Head-	
quarter	046
Hi-Q	047
Hinari	072, 240
Hitachi	042, 000, 041
Imperial	000
Interfunk	081
ITT	041, 104, 046, 240
Jensen	041, 067
JVC	067, 008, 041
Kaisui	072
KEC	037, 278
Kenwood	067, 008, 041, 038
KLH	072
Kodak	035, 037
Lloyd's	000, 208, 072, 038
Logik	072
Luxor	043, 104, 046, 062
LXI	037, 000
Magnavox	035, 081, 039, 110, 149
Magnin	240
Marantz	035, 081, 110
Marta	037
Matsushita	035, 081
Matsui	208, 295
MEI	035
Memorex	000, 035, 048, 104, 037, 039, 240, 047, 046, 307
Metz	162, 454
MGA	043, 061
MGN	
Technology	240
Minolta	042
Mitsubishi	043, 061, 067, 008, 173
Motorola	035, 048
MTC	000, 240
Multitech	000, 072
NEC	038, 041, 067, 008, 104
Nikko	037
Noblex	240
Nokia	104, 240, 046, 041
Olympus	035
Optimus	048, 037, 104
Optonica	062
Orion	184, 278, 479, 121, 211, 295, 208
Panasonic	162, 035, 454
Penney	035, 037, 240, 042, 162, 038, 454
Pentax	042
Philco	035, 081
Phillips	081, 035, 062, 110
Pilot	037
Pioneer	067, 162
Portland	020
Profitronic	240
Proline	000
Proscan	060, 202
Protec	072
Pulsar	039, 240, 278
Quarter	046
Quartz	046
Quasar	162, 035
RadioShack	000, 035, 037, 048
Radix	037
Randex	037

RCA	060, 202, 042, 035, 149, 048, 240
Realistic	000, 035, 048, 240, 104, 037, 046, 047, 066, 062
Ricoh	035, 034
Runco	039
Samsung	240, 045
Sanky	048, 039
Sansui	041, 000, 067, 072, 271
Sanyo	104, 047, 046, 240
Scott	184, 043, 045, 211, 121
Sears	104, 035, 000, 037, 042, 046, 047, 066, 054
SEI	081
Semp	045
Sharp	048, 062
Shintom	072, 000, 240
Shogun	240
Singer	072, 037, 240
Sony	032, 033, 034, 000, 035
STS	042
Sylvania	081, 035, 043, 110, 000
Symphonic	000
Tatung	041, 067, 000
TEAC	000, 041
Technics	162, 035
Teknika	035, 000, 037
Thomas	000
TMK	240
Toshiba	043, 045, 066
Totevision	240, 037
Triumph	208
Unitech	240
Vector	045
Vector Research	038
Video Concepts	045, 061
Videosonic	240, 000, 072
Videotronic	035
Wards	048, 000, 035, 042, 047, 060, 202, 072, 081, 240, 149, 062
White Westinghouse	278
XR-1000	000, 035, 072
Yamaha	038
Zenith	000, 039

## Set-Up Codes for TV/VCR Combos

American	
High	035*
Brocksonic	002, 294, 479
Colt	072
Curtis	
Mathes	035*
Daewoo	278
Emerson	002, 294, 479
Funai	000
GE	035*, 060*, 048*, 240
Hitachi	035*, 000
HQ	000
Lloyds	000
MGA	240
Magnavox	000, 035*, 081*
Magnin	240
Memorex	037, 162*
Mitsubishi	048*
Orion	002, 294, 479
Panasonic	035*, 162*
Penney's	035*, 240, 162*
Quasar	035*, 162*
RCA	060*, 035*, 048*
Sansui	000, 479
Sanyo	240
Sears	000, 037
Symphonic	000
Zenith	000

## Set-Up Codes for Cable Converters

ABC	001, 003, 007, 008, 011, 013, 014, 017
Allegro	153, 315
Antronix	022
Archer	022, 153
Belcor	056
Cable Star	056
Cabletenna	022
Cableview	022
Century	153
Citizen	153, 315
Colour Voice	025
Comtronics	040
Contec	019
Eastern	002
Everquest	015, 040
Focus	400
GC	
Electronics	056
Garrard	153
Gemini	015
General	
Instruments	011, 476
Goldstar	040, 144
Hamlin	009, 020, 034, 259
Hitachi	011
Hytex	007
Jasco	153, 315
Jerrold	003, 011, 012, 014, 015, 476
Movie Time	063, 156
NSC	063, 156
Novaplex	618
Oak	007, 019

Optimus	021
Panasonic	021, 107
Philips	025, 153
Pioneer	144
Popular	
Mechanics	400
RCA	021
RadioShack	015, 315
Recoton	400
Regal	020, 259
Regency	002
Rembrandt	011
SL Marx	040
Samsung	040, 144
Scientific	
Atlanta	008, 017, 477
Signal	015, 040
Signature	011
Sprucer	021
Starcom	003, 015
Stargate	015, 040
Starquest	015
Sylvania	001
TV86	063
Tandy	258
Televiow	040
Texscan	001
Tocom	012, 013
Tusa	015
Unika	022, 153
United Artists	007
United Cable	003
Universal	022, 056, 153
Videoway	250
Viewstar	063, 258
Zenith	525
Zentek	400

### Set-Up Codes for Satellites

Channel	
Master	018
Chaparral	053
Citoh	164
Drake	018, 064
Echostar	775, 269, 280
ExpressVu	775
General	
Instruments	547, 038, 050, 361
HTS	775
Homecable	238
Hughes	
Network	
Systems	749
IQ	210
Janeil	152
Jerrold	361, 627
Legend	269
Macom	018, 050
Memorex	269
Panasonic	152, 701
Primestar	627, 361
RCA	566
Realistic	052
STS	210

### Set-Up Codes for CD Players

Aiwa	124, 157
California	
Audio Lab	029
Carver	57, 179
DKK	000
Denon	003
Emerson	305
Fisher	048, 088, 179
Garrard	393
Genexxa	032, 305
Hitachi	032
JVC	072
Kenwood	028, 037, 048, 190
Krell	157
LXI	305
Linn	157
MCS	029
Magnavox	157, 305
Marantz	029, 157
Mission	157
NSM	157
Onkyo	101
Optimus	000, 032, 037, 048, 145, 179, 305, 468
Panasonic	029
Philips	157
Pioneer	032, 305, 468
Proton	157
QED	157
Quasar	029
RCA	053, 179, 305
Realistic	179
Rotel	157
SAE	157
Sansui	157, 305
Sanyo	179
Scott	305
Sears	305
Sharp	037
Sony	000, 185, 490, 604, 605
Soundesign	145
TEAC	393
Technics	029, 303
Victor	072
Wards	157
Yamaha	036, 187