

MANUFACTURER'S CODES

Setup Codes for Cable Converters:

ABC	0003,0008,0017
Allegro	0315
Americast	0899
Archer	0797
Bell South	0899
Citizen	0315
Contec	0019
Emerson	0797
Gemini	0797
General Instrument	0476,0810,0276
GoldStar	0144
Goodmind	0797
Hamlin	0009
Jasco	0315
Jerrold	0003,0476,0012,0810,0276
Memorex	0000
Motorola	1106
Oak	0019
Panasonic	0000,0107
Paragon	0000
Philips	0305,0317
Pioneer	0144,0877,0533
Pulsar	0000
Quasar	0000
Radio Shack	0315,0797,0883
Runco	0000
Samsung	0144
Scientific Atlanta	0008,0477,0877,0017
Starcom	0003
Stargate	0797
Tocom	0012
Toshiba	0000
Universal	0077
Zenith	0525,0000,0899

Setup Codes for DVD Players:

Aiwa	0641
Apex	0672
B & K	0655,0662
Denon	0490,0634
Fisher	0670
GE	0522
Gradiente	0704
Harman/Kardon	0582
Hitachi	0664
Hitek	0672
JVC	0558,0623
Kenwood	0534,0682
Konka	0711,0719,0720,0721
Magnavox	0503,0675
Marantz	0539
Mitsubishi	0521
Onkyo	0503,0627
Optimus	0571
Oritron	0651
Panasonic	0490,0677,0632,0678,0679
Philips	0503,0539
Pioneer	0525,0571,0632
Princeton	0674
Proscan	0522
RCA	0522,0571
Samsung	0573
Sharp	0630
Sherwood	0633
Sony	0533
Technics	0490
Techwood	0692
Theta Digital	0571
Toshiba	0503
Yamaha	0490,0545
Zenith	0503,0591

Setup Codes for Satellite Receivers:

AlphaStar	0772
EchoStar	0775,1005
ExpressVu	0775
General Instrument	0361,0627,0869,0071
HTS	0775
Hitachi	0819
Hughes Net. Sys.	0749
JVC	0775
Jerrold	0361,0627

MANUFACTURER'S CODES (continued)

Setup Codes for Satellite Receivers:

Magnavox	0724,0722
Memorex	0724
Next Level	0869
Panasonic	0701
Philips	0724,0722,1076
Primestar	0361,0627
RCA	0566,0143,0392
Radio Shack	0869
Samsung	1109
Sony	0639
Star Choice	0869
Toshiba	0749,0790
Uniden	0724,0722
Zenith	0856

Setup Codes for TVs:

A-Mark	0003
AOC	0030,0019,0185,0003,0052
Abex	0032
Admiral	0093,0463
Adventura	0046
Aiko	0092
Akai	0030
Alaron	0179
Ambassador	0177
America Action	0180
Ampro	0751
Anam	0180
Anam National	0055
Archer	0003
Audiovox	0451,0180,0623,0092,0003
Baysonic	0180
Belcor	0019
Bell & Howell	0154,0016
Bradford	0180
Brockwood	0019
Broksonic	0236,0463,0003
CCE	0217
CXC	0180
Candle	0030,0056,0046,0186
Carnivale	0030
Carver	0054
Celebrity	0000
Cineral	0451,0092
Citizen	0060,0030,0056,0092,0039,0280,0046,0186
Clairtone	0185
Concerto	0056
Contec	0180,0185,0157
Craig	0180
Crosley	0054
Crown	0180,0039
Curtis Mathes	0047,0747,1147,1347,0054,0154,0051,0451,0093,0060,0030,0056,0145,0016,0166,0466,0039
Daewoo	0451,0019,0623,0624,0092,0039
Daytron	0019
Denon	0145
Dumont	0017,0019
Dwin	0720,0774
Electroband	0000,0185
Electrohome	0381,0389
Emerson	0154,0236,0463,0180,0178,0179,0019,0623,0624,0177,0185,0282,0039,0280,0038
Envision	0030
Fisher	0154,0159
Fujitsu	0179,0683
Funai	0180,0179,0171
Futurtech	0180
GE	0047,0747,1147,1347,0051,0451,0093,0178,0021,0055,0282,0135,0027,0279
Gibraltar	0017,0030,0019
GoldStar	0030,0178,0056,0019,0032,0001
Gradiente	0053,0056,0392
Grumpy	0180,0179
Hallmark	0178
Harley Davidson	0179
Harman/Kardon	0054,0078
Harvard	0180
Hitachi	0056,0145,0016,0151,0032,0038,0279
Infinity	0054
Inteq	0017
JBL	0054

JCB	0000
JVC	0053
Janeil	0046
KEC	0180
KTV	0180,0030,0185,0039,0280,0217
Kaypani	0052
Kenwood	0030,0019
Kloss	0046,0024,0078
Konka	0707,0628,0632,0638,0703
LG	0056
LXI	0047,0747,0054,0154,0156,0178
Logik	0016
Luxman	0056
MEI	0185
MGA	0150,0030,0178,0019
MTC	0060,0030,0056,0019,0185
Magnavox	0054,1254,0030,0179,0187,0096,0020,0186,0386,0024
Majestic	0016
Marantz	0054,0030
Matsushita	0250
Megatron	0178,0145,0003
Memorex	0154,0250,0463,0150,0178,0179,0056,0016
Midland	0047,0747,0017,0051,0135,0039,0032
Minutz	0021
Mitsubishi	0093,0150,0178,0019
Motorola	0093,0055
Multitech	0180,0217
NAD	0156,0178,0166
NEC	0030,0056,0019,0497
NTC	0092
Nikko	0030,0178,0092
Noblex	0430
Noshi	0018
Onwa	0180
Optimus	0154,0250,0166
Optonica	0093,0165
Orion	0236,0463,0179
Panasonic	0051,0250,0055
Penney	0047,0747,1347,0156,0051,0060,0030,0178,0021,0056,0019,0018,0135,0039,0003,0027,0032
Philco	0054,0463,0030,0145,0019,0096,0020
Philips	0054
Pilot	0030,0019,0039
Pioneer	0166,0679,0038
Portland	0019,0092,0039
Princeton	0717
Prism	0051
Proscan	0047,0747
Proton	0178,0466,0003,0052
Pulsar	0017,0019
Quasar	0051,0250,0055,0165
RCA	0047,0747,1047,1147,1247,1347,1447,0090,0051,0093,0019,0679,0018,0135,0038
Radio Shack	0047,0747,0154,0180,0030,0178,0056,0019,0165,0039,0032
Realistic	0154,0180,0030,0178,0056,0019,0165,0039,0032
Rhapsody	0185
Runco	0017,0030,0603,0497
SSS	0180,0019
Sampo	0030,0039,0052,0032
Samsung	0060,0030,0178,0056,0019,0032
Samsux	0039
Sansei	0451
Sansui	0463
Sanyo	0154,0159,0146
Scimitsu	0019
Scotch	0178
Scott	0236,0180,0178,0179,0019
Sears	0047,0747,0054,0154,0156,0178,0179,0056,0171,0159,0146
Semivox	0180
Semp	0156
Sharp	0093,0688,0165,0039,0386,0157
Shogun	0019
Signature	0016
Simpson	0187,0186
Sony	0000,0080,0111
Soundesign	0180,0178,0179,0186
Spectricon	0003
Squareview	0171
Starlite	0180

Supre-Macy	0046
Supreme	0000
Sylvania	0054,0030,0096,0020,0381
Symphonic	0171
TMK	0178,0056,0177
TNCi	0017
Tandy	0093
Tatung	0055,0003
Technics	0051,0250
TechnolAce	0179
Techwood	0051,0056,0003
Teknika	0054,0180,0150,0060,0179,0056,0019,0016,0092,0039,0186
Telefunken	0056
Toshiba	0154,0156,0060,1256
Tosonic	0185
Totevision	0039
Trical	0157
Universal	0027
Vector Research	0030
Victor	0053
Vidikron	0054
Vidtech	0178,0019
Viking	0046
Wards	0054,0030,0178,0021,0179,0056,0019,0016,0165,0096,0020,0080,0027,0111
White Westinghouse	0463,0623,0624
Yamaha	0030,0019
Zenith	0017,0463,0624,0016,0092
Zonda	0003

Setup Codes for VCRs:

Admiral	0048,0209
Adventura	0000
Aiko	0278
Aiwa	0037,0000,0307
Akai	0041,0106,0061,0053
America Action	0278
American High	0035
Asha	0240
Audiovox	0037
Beaumarck	0240
Bell & Howell	0104
Broksonic	0184,0121,0209,0002,0479,0295,0361
CCE	0072,0278
Calix	0037
Canon	0035
Capchart	0020
Carver	0081
Cineral	0278
Citizen	0037,0278
Colt	0072
Craig	0037,0047,0240,0072,0271
Curtis Mathes	0035,0060,0760,0162,0041
Cybermex	0240
Daewoo	0045,0278,0020,0561
Daytron	0020
Denon	0042
Dynatech	0000
Electrohome	0037
Electrohome	0037
Emrex	0032
Emerson	0037,0184,0000,0121,0043,0209,0002,0278,0479,0561,0061,0208,0212,0068,0036,0295,0361,0088,0294
Fisher	0047,0104,0054,0066
Fuji	0035,0033
Funai	0000
GE	0035,0060,0760,0048,0240,0202,0761
Garrard	0000
Go Video	0432,0526,0643
GoldStar	0037,0038
Gradiente	0000,0008
HI-Q	0047
Harley Davidson	0000
Harman/Kardon	0081,0038
Harwood	0072,0068
Headquarter	0046
Hitachi	0000,0042,0041,0105
Hughes Net. Sys.	0042
JVC	0067,0041,0008
Jensen	0041
KEC	0037,0278
KLH	0072

Kenwood	0067,0041,0038
Kodak	0035,0037
LXI	0037
Lloyd's	0000,0208
Logik	0072
MEI	0035
MGA	0240,0043,0061
MGN Technology	0240
MTC	0000,0240
Magnasonic	0278
Magnavox	0035,0039,0081,0000,0149,0110
Magnin	0240
Marantz	0035,0081
Marta	0037
Matsushita	0035,0162,0454
Memorex	0035,0037,1037,0048,0039,0047, 0162,1162,1262,0000,0240,0104, 0209,0454,0479,0046,0307
Minolta	0042,0105
Mitsubishi	0048,0067,0043,0061
Motorola	0035,0048
Multitech	0000,0072
NAD	0058
NEC	0067,0104,0041,0038,0040
Nikko	0037
Nikon	0034,0253
Noblex	0240
Olympus	0035
Optimus	0037,0048,1048,0162,1062,1162, 1262,0104,0454,0432,0058
Optonica	0062
Orion	0184,0209,0002,0479,0295
Panasonic	0035,0225,0162,1062,1162,1262, 1362,0454,0616,0077
Penney	0035,0037,0042,0240,0038,0054, 0040
Pentax	0042,0105
Philco	0035,0209,0479
Philips	0035,0081,1081,1181,0618,0062, 0110
Pilot	0037
Pioneer	0067,0058
Polk Audio	0081
Portland	0020
Profitronic	0240
Proscan	0060,0760,0202,0761
Protec	0072
Pulsar	0039
Quarter	0046
Quartz	0046
Quasar	0035,0162,1162,0454,0077
RCA	0035,0060,0760,0048,0042,0240, 0149,0106,0202,0761,0105,0077, 0058,0060
Radio Shack	1037,0000
Radix	0037
Randex	0037
Realistic	0035,0037,0048,0047,0000,0104, 0046,0062,0066
ReplayTV	0614,0616
Ricoh	0034,0253
Runco	0039
STS	0042
Samsung	0045,0240,0053
Samtron	0643
Sanky	0048,0039
Sansui	0000,0067,0209,0041,0479,0271
Sanyo	0047,0240,0104,0046
Scott	0184,0045,0121,0043,0212,0210
Sears	0035,0037,0047,0000,0042,0104, 0046,0105,0054,0066
Semp	0045
Sharp	0048,0062
Shintom	0072
Shogun	0240
Singer	0072
Sony	0035,0032,1032,0000,0636,0033, 0034,0253
Sumpak	0253
Sylvania	0035,0081,0000,0043,0110
Symphonic	0000
TMK	0240,0208,0036
Tatung	0041
Teac	0000,0041
Technics	0035,0162
Teknika	0035,0037,0000
Thomas	0000
Tivo	0618,0636

Toshiba	0045,0043,0212,0066,0210
Totevision	0037,0240
Unitech	0240
Vector	0045
Vector Research	0038,0040
Video Concepts	0045,0061,0040
Videosonic	0240
Wards	0035,0060,0760,0048,0047,0081, 0000,0042,0240,0072,0149,0062, 0212
White Westinghouse	0209,0072,0278
XR-1000	0035,0000,0072
Yamaha	0038
Zenith	0039,0000,0209,0479,0033,0034, 0637

Setup Codes for TV/VCR Combos:

Broksonic	0002, 0479 (for TV use 0463)
Citizen	0278
Colt	0072
Curtis Mathes	0035 (for TV use 0051)
Daewoo	0278 (for TV use 0624)
Emerson	0002, 0278 (for TV use 0624), 0294 (for TV use 0236), 0479 (for TV use 0463)
Funai	0000
GE	0035 (for TV use 0051), 0048 (for TV use 0093), 0060 (for TV use 0047), 0240
GoldStar	0037 (for TV use 0056)
Harley Davidson	0000
Hitachi	0000
Lloyd's	0000
Magnasonic	0278
Magnavox	0000, 0081 (for TV use 0054)
Magnin	0240
Memorex	0037, 0162 (for TV use 0250), 1037, 1162, 1262
MGA	0240
Mitsubishi	0048 (for TV use 0093)
Optimus	0162 (for TV use 0250), 1162, 1262
Orion	0000, 0479 (for TV use 0463)
Panasonic	0035 (for TV use 0051), 0162 (for TV use 0250), 1162, 1262
Penney	0035 (for TV use 0051), 0037 (for TV use 0056), 0240
Quasar	0035 (for TV use 0051), 0162 (for TV use 0250)
Radio Shack	1037
RCA	0035 (for TV use 0051), 0048 (for TV use 0093), 0060 (for TV use 0047), 0240
Sansui	0000, 0479 (for TV use 0463)
Sanyo	0240
Sears	0000, 0037 (for TV use 0056)
Sharp	0048 (for TV use 0093)
Sony	0000, 0032 (for TV use 0000)
Sylvania	0081 (for TV use 0054)
Symphonic	0000
Thomas	0000
White Westinghouse	0278 (for TV use 0624)
Zenith	0000, 0637 (for TV use 0624)