


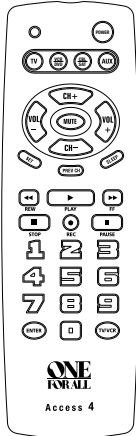

Access 4



Feature – Function

The **Red Light (LED)** flashes red to show that the remote is working.

The **POWER** key operates the POWER ON and OFF for your TV, VCR, DVD and Cable Converter.

The **TV, VCR/DVD, CBL/SAT,** and **AUX** keys are used to select the home entertainment component you want to control.

The **CH ▲/▼** (Channel Up/Down) keys operate the CHANNEL UP/DOWN feature of your home entertainment components.

The **VOL +/-** (Volume Up/Down) and **MUTE** keys operate the VOLUME UP/DOWN and MUTE of your home entertainment components.

The **SET** key is used to program your *One For All Access 4*.

The **PREV CH** (Previous Channel) key operates the same as the Last Channel or Recall key on your original remote.

The **SLEEP** key accesses the sleep function of your TV or Cable Converter, provided the component has a SLEEP TIMER function.

The **REC** (Record), **PAUSE**, **REW** (Rewind), **PLAY**, **FF** (Fast Forward), **STOP** and **TV/VCR** operate the same as the keys on your original VCR remote. As a safety feature on the *One For All Access 4*, you must press the **REC** key twice.

The **DIGIT** keys (**0-9**) operate the same as the digit keys on your original remote.

The **ENTER** key operates the same as the ENTER key on your original remote.

Installing the Batteries

Your *One For All Access 4* requires four (4) new AAA alkaline batteries. To install the batteries:

- On the back of the *One For All Access 4*, pull back on the tab and lift the battery cover off.
- Match the + and - marks on the batteries to the + and - marks in the battery case, then insert the batteries.
- Press the battery cover back into place.
- Test the unit by pressing **POWER**. If the batteries are inserted correctly, the red light (LED) will blink once.

NOTE: Removing the batteries for more than 30 minutes will require you to reprogram your remote.

Setting Up Your Components

Programming the *One For All Access 4* to operate your TV:

Locate the brand name of your TV and then write it in the space below.

TV Brand: _____

Locate the brand name of your TV in the "SETUP CODES FOR TVs" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *One For All Access 4* to operate your TV.

To program the *One For All Access 4* to operate your TV:

- Turn on your TV.
- Press **TV** and release. Press and hold **SET** until the *One For All Access 4*'s red light blinks twice, then release **SET**.
- Enter the first four-digit TV code listed for your brand in the "SETUP CODES FOR TVs" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.
- Aim the *One For All Access 4* at your TV and press **POWER**. Your TV should turn off. If your TV does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your TV.
- Your *One For All Access 4* is now programmed to operate your TV. Write your TV code in the boxes to the left for future reference.

Remember, if you want to use your *One For All Access 4* to operate your TV, press the **TV** key first.

SETUP CODES FOR TVs

AOC	0030, 0019, 0185
Admiral	0093, 0463
Aiko	0092
Akai	0030
Alaron	0179
Ambassador	0177

America Action	0180
Ampro	0751
Anam	0180
Anam National	0055
Apex Digital	0748, 0765, 0767
Audiovox	0451, 0180, 0092, 0623
Baysonic	0180
Belcor	0019
Bell & Howell	0154, 0016
Bradford	0180
Brockwood	0019
Broksonic	0236, 0463
CXC	0180
Candle	0030, 0056
Carnivale	0030
Carver	0054
Celebrity	0000
Changhong	0765
Cineral	0451, 0092
Citizen	0060, 0030, 0056, 0092
Clairtone	0185
Concerto	0056
Contec	0180, 0185
Craig	0180
Crosley	0054
Crown	0180
Curtis Mathes	0047, 0054, 0154, 0451, 0093, 0060, 0030, 0145, 0056, 0016, 0166, 0466, 0747, 1147, 1347

Daewoo	0019
Daytron	0145
Danon	0017, 0019
Dumont	0720, 0774
Dwin	0000, 0185
Electroband	0154, 0236, 0463, 0180, 0282, 0178, 0019, 0179, 0177, 0185, 0623
Emerson	0030

Envision	0030
Fisher	0154, 0159
Fujitsu	0179, 0683
Funai	0180, 0179, 0171
Futuretech	0180
GE	0047, 0051, 0451, 0282, 0178, 0021, 0055, 0747, 1147, 1347

Gibraltar	0017, 0030, 0019
GoldStar	0030, 0178, 0019
Gradiente	0053, 0056
Grundy	0180, 0179
Hallmark	0178
Harley Davidson	0179
Harman/Kardon	0054
Harvard	0180
Havermy	0093
Hitachi	0145, 0056, 0016, 0151

Infinity	0054
Inteq	0017
JBL	0054
JCB	0000
JVC	0053
KEC	0180
KTV	0180, 0030, 0185
Kenwood	0030, 0019
Konka	0628, 0632, 0638, 0703, 0707

LG	0056
LXI	0047, 0054, 0154, 0156, 0178, 0747

Logik	0016
Luxman	0056
MEI	0185
MGA	0150, 0030, 0178, 0019
MTC	0060, 0030, 0019, 0056, 0185

Magnavox	0054, 0030, 0179, 0187, 1254
----------	------------------------------

Majestic	0016
Marantz	0054, 0030
Matsushita	0250
Megatron	0178, 0145
Memorex	0154, 0250, 0463, 0150, 0178, 0179, 0016

Midland	0047, 0017, 0051, 0747
Minutz	0021
Mitsubishi	0093, 0150, 0178, 0019
Motorola	0093, 0055
Multitech	0180

NAD	0156, 0178, 0166
NEC	0030, 0019, 0056
NTC	0092
Nikko	0030, 0178, 0092
Noshi	0018
Orwa	0180

Optimus	0154, 0250, 0166
Optonica	0093, 0165
Orion	0236, 0463, 0179
Panasonic	0250, 0051, 0055
Penney	0047, 0156, 0051, 0060,

Philco	0054, 0463, 0030, 0145, 0019
--------	------------------------------

Philips	0054, 1354
Pilot	0030, 0019
Pioneer	0166, 0679
Portland	0019, 0092
Princeton	0717
Prism	0051
Proscan	0047, 0747
Proton	0178, 0466
Pulsar	0017, 0019
Quasar	0250, 0051, 0165, 0055
RCA	0047, 0019, 0018, 0090, 0679, 0747, 1047, 1147, 1247, 1347, 1447

Radio Shack	0047, 0154, 0165, 0180, 0030, 0178, 0019, 0056, 0747
-------------	--

Realistic	0154, 0165, 0180, 0030, 0178, 0019, 0056
Rhapsody	0185
Runco	0017, 0030, 0603
SSS	0180, 0019
Sampo	0030

Samsung	0060, 0030, 0178, 0019, 0056
Sansai	0451
Sansui	0463
Sanyo	0154, 0159
Scimitus	0019
Scotch	0178
Scott	0236, 0180, 0178, 0019, 0179

Sears	0047, 0054, 0154, 0156, 0178, 0179, 0056, 0159, 0171, 0747
Semivox	0180
Semp	0156
Sharp	0093, 0165, 0688
Shogun	0019
Signature	0016
Simpson	0187
Sony	0000

Soundesign	0180, 0178, 0179
Squareview	0171
Starlite	0180
Supreme	0000
Sylvania	0054, 0030, 0171
Symphonic	0180, 0171
TMK	0178, 0056, 0177
TNCI	0017
Tandy	0093
Tatung	0055
Technics	0250, 0051
Technol Ace	0179
Techwood	0051, 0056
Teknika	0054, 0180, 0150, 0060, 0019, 0179, 0056, 0016, 0092

Telefunken	0056
Toshiba	0154, 0156, 0060, 1256
Tosonic	0185
Vector Research	0030
Victor	0053
Vidikron	0054
Vidtech	0178, 0019
Wards	0054, 0165, 0030, 0178, 0021, 0019, 0179, 0056, 0016

Waycon	0156
White Westinghouse	0463, 0623
Yamaha	0030, 0019
Zenith	0017, 0463, 0016, 0092

Fisher	0047, 0104
Fuji	0035, 0033
Funai	0000
GE	0060, 0035, 0240, 0760
Garrard	0000
Go Video	0279, 0432, 0526
GoldStar	0037, 0038
Gradiente	0000
Hi-Q	0047
Harley Davidson	0000
Harman/Kardon	0081, 0038
Harwood	0072
Headquarter	0046
Hitachi	0000, 0042, 0041
Hughes Network Systems	0042
JVC	0067, 0041
Jensen	0041
KEC	0037, 0278
KLH	0072
Kenwood	0067, 0041, 0038
Kodak	0035, 0037
LXI	0037
Lloyd's	0000, 0208

CCE	0072, 0278
Calix	0037
Canon	0035
Capehart	0020
Carver	0081
Cineral	0278
Citizen	0037, 0278
Colt	0072
Craig	0037, 0047, 0240, 0072, 0271
Curtis Mathes	0060, 0035, 0162, 0041, 0760

Cybernex	0240
Daewoo	0045, 0278, 0020
Daytron	0020
Denon	0042
Electrohome	0000
Electrohome	0037
Emerex	0032
Emerson	0037, 0184, 0000, 0121, 0043, 0209, 0002, 0278, 0208, 0479

Fisher	0047, 0104
Fuji	0035, 0033
Funai	0000
GE	0060, 0035, 0240, 0760
Garrard	0000
Go Video	0279, 0432, 0526
GoldStar	0037, 0038
Gradiente	0000
Hi-Q	0047
Harley Davidson	0000
Harman/Kardon	0081, 0038
Harwood	0072
Headquarter	0046
Hitachi	0000, 0042, 0041
Hughes Network Systems	0042
JVC	0067, 0041
Jensen	0041
KEC	0037, 0278
KLH	0072
Kenwood	0067, 0041, 0038
Kodak	0035, 0037
LXI	0037
Lloyd's	0000, 0208

Locate the brand name of your VCR/DVD and then write it in the space below.
VCR/DVD Brand: _____
Locate the brand name of your VCR/DVD in the "SETUP CODES FOR VCR/DVDs" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your <i>One For All Access 4</i> to operate your VCR/DVD.

To program the <i>One For All Access 4</i> to operate your VCR/DVD:
1. Turn on your VCR/DVD and insert a tape/disc.
2. Press VCR/DVD and release. Press and hold SET until the

Logik	0072
MEI	0035
MGA	0240, 0043
MGN Technology	0240
MTC	0240, 0000
Magnavox	0035, 0039, 0081, 0000, 0149
Magnin	0240
Marantz	0035, 0081
Marta	0037
Matsushita	0035, 0162, 0454
Memorex	0035, 0162, 0037, 0048, 0039, 0047, 0240, 0000, 0104, 0209, 0046, 0307, 0454, 0479, 1037, 1162, 1262
Minolta	0042
Mitsubishi	0067, 0043
Motorola	0035, 0048
Multitech	0000, 0072
NEC	0104, 0067, 0041, 0038
Nikko	0037
Noblex	0240
Olympus	0035
Optimus	1062, 0162, 0037, 0048, 0104, 0432, 0454, 1048, 1162, 1262
Orion	0184, 0209, 0002, 0479
Panasonic	1062, 0035, 0162, 0225, 0454, 0616, 1162, 1262
Penney	0035, 0037, 0240, 0042, 0038
Pentax	0042
Philco	0035, 0209, 0479
Philips	0035, 0081, 0618, 1081, 1181
Pilot	0037
Pioneer	0067
Polk Audio	0081
Portland	0020
Profitronic	0240
Proscan	0060, 0760
Protec	0072
Pulsar	0039
Quarter	0046
Quartz	0035, 0162, 0454, 1162
Quasar	0060, 0240, 0042, 0149, 0106, 0760
RCA	0000, 1037
Radio Shack	0037
Radix	0037
Randex	0037
Realistic	0035, 0037, 0048, 0047, 0000, 0104, 0046
ReplayTV	0614, 0616
Runco	0039
STS	0042
Samsung	0240, 0045
Sanky	0048, 0039
Sansui	0000, 0067, 0209, 0041, 271, 0479
Sanyo	0047, 0240, 0104, 0046
Scott	0184, 0045, 0121, 0043
Sears	0035, 0037, 0047, 0000, 0042, 0104, 0046
Semp	0045
Sharp	0048
Shintom	0072
Shogun	0240
Singer	0072
Sonic Blue	0614, 0616
Sony	0035, 0032, 0000, 0033, 0636, 1032
Sylvania	0035, 0081, 0000, 0043
Symphonic	0000
TMK	0240, 0208
Tatung	0041
Teac	0000, 0041
Technics	0035, 0162
Teknika	0035, 0037, 0000
Thomas	0000
Tivo	0618, 0636
Toshiba	0045, 0043
Television	0037, 0240
Unitech	0240
Vector	0045
Vector Research	0038
Video Concepts	0045
Videomagic	0037
Videosonic	0240
Villain	0000
Wards	0060, 0035, 0048, 0047, 0081, 0240, 0000, 0042, 0072, 0149, 0760
White Westinghouse	0209, 0072
XR-1000	0035, 0000, 0072
Yamaha	0038
Zenith	0039, 0000, 0209, 0033, 0479

For All Access 4's red light blinks twice, then release **SET**.

- Enter the first four-digit VCR/DVD code listed for your brand in the "SETUP CODES FOR VCR/DVDs" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.

- Aim the *One For All Access 4* at your VCR/DVD and press **POWER**. Your VCR/DVD should turn off. If your original VCR/DVD remote control did not have a **POWER** key, press **PLAY**. Your VCR/DVD should start to play. If your VCR/DVD does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your VCR/DVD.

- Your *One For All Access 4* is now programmed to operate your VCR/DVD. Write your VCR/DVD code in the boxes to the left for future reference.

NOTE: If your original cable converter remote control did not have an "ON" key, press **CHA** on the *One For All Access 4* to turn your Cable Converter ON.

Remember, if you want to use your *One For All Access 4* to operate your Cable Converter or Satellite Receiver, press the **CBL/SAT** key first.

SETUP CODES FOR CABLE CONVERTERS

ABC	0003, 0008, 0014, 0007, 0001, 0011, 0013, 0017
Allegro	0153, 0315
Americast	0899
Antronix	0022, 0207
Apache	0770
Archer	0022, 0153, 0207, 0797
BBT	0267
Belcor	0056
Bell & Howell	0014
Bell South	0899
Cable Star	0056
Cabletenna	0022
Cableview	0022
Century	0153
Citizen	0153, 0315
Colour Voice	0025, 0031
Comband	0232
Comtronics	0040, 0060
Contec	0019
Digi	0637
Director	0476
Eastern	0002
Emerson	0797
Everquest	0015, 0040
Focus	0400
GC Electronics	0056, 0207
GE	0232
Garrard	0153
Gemini	0015, 0070, 0242, 0797
General Instrument	0476, 0003, 0276, 0011, 0810
GoldStar	0144, 0040
Goodmind	0770, 0797
Hamlin	0009, 0020, 0034, 0259, 0273
Hitachi	0011
Hytex	0007
Jasco	0015, 0153, 0315
Jerrold	0476, 0003, 0276, 0012, 0014, 0015, 0011, 0024, 0810
Linsay	0440
Magnavox	0027
Memorex	0000
Motorola	0476, 1106, 0276, 0810
Movie Time	0063, 0156
NSC	0063, 0070, 0156
Nexus	0770
Novaplex	0618
Oak	0019, 0007
Optimus	0021
Panasonic	0000, 0107, 0021
Panther	0637
Paragon	0000
Philips	0305, 0317, 0025, 0027, 0031, 0153, 0242, 0290
Pioneer	0877, 0144, 0533, 0023
Popular Mechanics	0400
Prelude	0770
Pulsar	0000
Quasar	0000
RCA	0021
RadioShack	0015, 0315, 0797, 0883
Realistic	0207
Reclon	0400
Regal	0020, 0259, 0273
Regency	0002
Rembrandt	0011, 0070
Runco	0000
SL Marx	0040
Samsung	0144, 0040
Scientific Atlanta	0877, 0008, 0006, 0017, 0477
Seam	0510
Signal	0015, 0040
Signature	0011
Sprucer	0021
StarSight	0422, 0542
Starcom	0003, 0015
Stargate	0015, 0040, 0770, 0797
Starquest	0015
Supercable	0276
Sylvania	0001
TFC	0310
TV86	0063
Tandy	0258
TeleCaption	0221

Televion	0040
Texscan	0001
Timeless	0418
Tocom	0012, 0013
Torx	0003
Toshiba	0000
Tusa	0015
Unika	0022, 0153, 0207
United Artists	0007
Universal	0022, 0056, 0153, 0191, 0207
ViewMaster	0883
Viewstar	0027, 0060, 0063, 0258
Zenith	0000, 0525, 0899, 0054
Zentek	0400

SETUP CODES FOR RECEIVERS SATELLITES

AlphaStar	0772
Crossdigital	1109
DishPro	1005, 0775
Echostar	1005, 0775
Expressvu	0775
GE	0566
GOI	0775
General Instrument	0869, 0361, 0627
HTS	0775
Hitachi	0819
Hughes Network Systems	0749
JVC	0775
Jerrold	0637
Magnavox	0724, 0722
Memorex	0724
Mitsubishi	0749
Motorola	0869
Next Level	0869
Panasonic	0701
Paysat	0724
Philips	0749, 0724, 1076, 0722
Primestar	0361, 0627
Proscan	0392
RCA	0392, 0566, 0855, 0143
RadioShack	0869
SKY	0856
Samsung	1109
Sony	0639
Star Choice	0869
Toshiba	0749, 0790
Uniden	0724, 0722
Zenith	0856

Programming the AUX key:

The **AUX** key can be setup to control a second TV, VCR, or Cable Converter. If you would like to set up the **AUX** key for a second TV, follow the instructions listed below. If you would like the **AUX** key to control a second VCR or Cable Converter, follow the instructions in the "Re-assigning Device Keys" section to re-assign the **AUX** key to accept VCR or Cable Converter codes. If you are setting up a second TV:

Locate the brand name of your 2nd TV and then write it in the space below.

2nd TV Brand: _____

Locate the brand name of your 2nd TV in the "SETUP CODES FOR TVs" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *One For All Access 4* to operate your 2nd TV.

To program the *One For All Access 4* to operate your 2nd TV:

- Turn on your 2nd TV.
- Press **AUX** and release. Press and hold **SET** until the *One For All Access 4*'s red light blinks twice, then release **SET**.
- Enter the first four-digit TV code listed for your brand in the "SETUP CODES FOR TVs" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.
- Aim the *One For All Access 4* at your 2nd TV and press **POWER**. Your 2nd TV should turn off. If your 2nd TV does not respond, repeat steps

2-4, trying each code listed for your brand until you find the one that operates your 2nd TV.

- Your *One For All Access 4* is now programmed to operate your 2nd TV. Write your 2nd TV code in the boxes to the left for future reference.



Searching For Your Code

If your TV, VCR or Cable Converter does not respond to the *One For All Access 4* after trying all of the codes listed for your brand, or if your brand is not listed at all, try searching for your code. For example, after trying all of the codes for your TV, you still cannot get the *One For All Access 4* to operate your TV, then:

- Turn on your TV.
- Press **TV** and release. Press and hold **SET** until the *One For All Access 4*'s red light blinks twice, then release **SET**.
- Press **9 - 9 - 1**.
- Slowly alternate between pressing **POWER*** and **TV** until your TV turns OFF. Make sure that the *One For All Access 4* is aimed at your TV during the search. You may have to press this sequence of buttons (**POWER*** then **TV**) up to 100 times to search the entire library of codes.
- When your TV turns OFF, press and release **SET** to lock in the code for your TV. Your *One For All Access 4* is now programmed to operate your TV.

NOTE: To search for the codes of your other components, repeat Steps 1 through 5, only substitute the appropriate device key (**VCR/ DVD, CBL/SAT or AUX**) for the component you are searching for.

***If you are searching for your VCR/DVD code, you may want to use the PLAY key instead of the POWER key to search for your code. When your VCR/DVD starts to play, press SET to lock in your code.**

Learning The Codes Programmed Into The One For All Access 4

If you have set up the *One For All Access 4* using the "Searching For Your Code" procedure, you may need to find out which four-digit code is operating your equipment. Use this procedure after you have set up your components to find out which four-digit code is operating your equipment. For example, to find out which code is operating your TV after setting up your TV using the "Searching for Your Code" procedure:

- Press **TV** and release. Press and hold **SET** until the *One For All Access 4*'s red light blinks twice, then release **SET**.
- Press **9 - 9 - 0**.
- For the first digit of your four-digit code, press 1, wait 3 seconds and count the number of times the red light (LED) blinks on the *One For All Access 4*. If the light does not blink when you press the number 1, the digit is zero.
- For the second digit, press 2, wait 3 seconds and count the number of times the red light (LED) blinks on the *One For All Access 4*. If the light does not blink when you press the number 2, the digit is zero.

- For the third digit, press 3, wait 3 seconds and count the number of times the red light (LED) blinks on the *One For All Access 4*. If the light does not blink when you press the number 3, the digit is zero.

- For the fourth and final digit, press 4, wait 3 seconds and count the number of times the red light (LED) blinks on the *One For All Access 4*. If the light does not blink when you press the number 4, the digit is zero. Now you have your four-digit code.

NOTE: To find out the code for your other components, repeat Steps 1 through 6, only substitute the appropriate device key (**VCR/ DVD, CBL/SAT or AUX**) for the component code you wish to learn.

Re-Assigning Device Keys

You can use the *One For All Access 4* to operate a second TV or a second VCR or any combination of four home entertainment components. For example, you may want your *One For All Access 4* to control 1 TV, 1 Cable Converter and 2 VCRs. To accomplish this, you must re-assign the **AUX** key to operate the desired component, in this case, a second VCR. The chart below shows you how to re-assign a particular device key and then set up your new component.

- On the remote control, press and hold **SET** until the LED blinks twice, then release **SET**.
- Press **9 - 9 - 2**. The LED will blink twice.
- Press **TV** once, then press **VCR/ DVD** once.
- The DVD key is now ready to be programmed for your second TV. (See *Setting Up Your Components*.)

To re-assign other device keys, repeat steps 1 through 4 by substituting the key sequence from the below chart for the most popular components:

To Re-Assign Key Sequence	Perform
VCR/DVD as 2 nd TV key:	SET - 9 - 9 - 2 - TV - VCR
VCR/DVD as 2 nd CBL key:	SET - 9 - 9 - 2 - CBL/ SAT - VCR
VCR/DVD as 2 nd SAT key:	SET - 9 - 9 - 2 - CBL/ SAT - VCR
VCR/DVD as 2 nd AUX key:	SET - 9 - 9 - 2 - AUX - VCR
VCR/DVD back to VCR:	SET - 9 - 9 - 2 - VCR - VCR
AUX as 2 nd TV key:	SET - 9 - 9 - 2 - TV - AUX
AUX as 2 nd CBL key:	SET - 9 - 9 - 2 - CBL/ SAT - AUX
AUX as 2 nd SAT key:	SET - 9 - 9 - 2 - CBL/ SAT - AUX
AUX as 2 nd VCR key:	SET - 9 - 9 - 2 - VCR - AUX
AUX back to DVD:	SET - 9 - 9 - 2 - AUX - AUX

When a re-assignment is done, the LED will blink twice to confirm your choice. At that time, you will need to program the remote control for the new device (see *Setting Up Your Components*).

Volume Lock

The *One For All Access 4™* is set to control the volume of your TV in the TV, VCR/DVD, CBL/SAT, and AUX modes. If you want volume to be controlled by a mode other than TV (e.g., CBL/SAT), change the Volume Lock setting as follows: To Change Volume Lock To Another Mode:

- On the remote control, press and hold **SET** until the LED blinks twice, then release **SET**.

- Enter **9 - 9 - 3** and then press any mode key once (except **TV**). The LED will blink twice.

- Now, whenever you press **VOL+**, **VOL-**, or **MUTE**, volume will be controlled by your mode choice.

Unlocking Volume Control:

NOTE: Perform these instructions when you want independent volume control for each programmed device (e.g., TV volume control in TV mode, CBL/SAT volume in CBL/SAT mode, etc.)

- On the remote control, press and hold **SET** until the LED blinks twice, then release **SET**.
- Enter **9 - 9 - 3** and then press **VOL+**. The LED will blink four times.
- Volume will again be controlled according to its default states.

Trouble Shooting

Problem	Solution
Red light not blinking when you press a key?	Replace the batteries with four (4) new AAA alkaline batteries.
The red light blinks when you press a key but you receive no response from your home entertainment component?	Make sure you press the device key first, then aim your <i>One For All Access 3</i> at your home entertainment component. Also make sure that you are within 15 feet of the component you are trying to operate before using your remote.
The <i>One For All Access 4</i> does not operate your home entertainment components or is not performing commands properly?	Try all of the codes listed for your brand of home entertainment component in the "SETUP CODES" section. Many setup codes may allow for partial functionality, however, only one set up code will operate your home entertainment component correctly. Make sure all of the components that you are setting up can be operated with an infrared remote control.
Problems programming a TV/VCR combo?	Use the VCR set-up codes for your brand. Some combo units, however, may require both a TV code to control volume and a VCR code for the remaining functions.
VCR not recording?	As a safety feature on the <i>One For All Access 4</i> , you must press the REC key twice.
CH▲/▼ (Channel Up/Down) and RECALL not working for your RCA TV?	Due to RCA design (1983-1987), only the original remote control will operate these functions.
Problems changing channels?	If your original remote control required an ENTER keystroke when changing channels, press the ENTER key on the <i>One For All Access 4</i> after you enter the channel number.
Keypad scrambled?	Press and hold SET until the <i>One For All Access 4</i> 's red light blinks twice. Release SET and enter 9-8-7 .
If the above does not work.	Please contact us in any of the following ways: • Please visit : www.oneforall.com • If the above website is not able to provide you with the information you need, please email us at ofasupport@ueic.com

ONE FOR ALL® PRODUCTS 90-DAY Limited Warranty

One For All® warrants, to the original purchaser only, that this product will be free from defects in materials and workmanship, under normal use, for ninety (90) days from the date of original purchase.

This limited warranty is valid only on ONE FOR ALL® product purchased and used in the United States of America or Canada, and does not apply to products used for industrial or commercial purpose.

The limited warranty does not cover damage or failure caused by products or services not supplied by ONE FOR ALL®, or which result from accident, misuse, abuse, neglect, mishandling, misapplication, faulty installation, set-up adjustment, improper maintenance, alteration, maladjustment of consumer controls, modifications, commercial use, or that is attributable to acts of God.

There are no express warranties except as listed above. ONE FOR ALL® SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

To obtain warranty service for a defective product during the warranty period, please return the product, preferably in the original carton, along with your purchase receipt, to the store of original purchase. A note detailing the complaint would be helpful. The store, at its option, will replace or repair this product if found to be defective.

One For All
(330) 405-8655

One For All® is the registered trademark of Universal Electronics Inc. Computime International LTD. is the Licensee of the ONE FOR ALL® brand for the United States of America and Canada.

Copyright 2000 by Universal Electronics Inc. No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated to any language, in any form or by any means, electronic, mechanical, magnetic, optical, manual, or otherwise, without the prior written permission of Universal Electronics Inc.

One For All is designed for compatibility in North America excluding Mexico.

URC-4730 - One For All Access 4

08/02