

Setup Codes for URC 4880

Setup Codes for TVs:

AOC	0030, 0019, 0052	MTC	0060, 0030, 0019, 0056
Admiral	0093, 0463	Magnavox	0054, 0030, 0179, 1254
Aiko	0092	Marantz	0054, 0030
Akai	0030	Matsushita	0250
Alaron	0179	Megatron	0178, 0145
Ambassador	0177	Memorex	0154, 0250, 0463, 0150, 0178, 0056
America Action	0180	Midland	0047, 0017, 0051, 0039, 0135
Ampro	0751	Mitsubishi	0093, 0150, 0178, 0019
Anam	0180	Motorola	0093
Audiovox	0451, 0180, 0092, 0623	Multitech	0180
Baysonic	0180	NAD	0156, 0178, 0166
Belcor	0019	NEC	0030, 0019, 0056
Bell & Howell	0154	NTC	0092
Bradford	0180	Nikko	0030, 0178, 0092
Brockwood	0019	Onwa	0180
Broksonic	0236, 0463	Optimus	0154, 0250, 0166
CXC	0180	Optonica	0093, 0165
Candle	0030, 0056	Orion	0236, 0463, 0179
Carnivale	0030	Panasonic	0051, 0250
Carver	0054	Penney	0047, 0156, 0051, 0060, 0030, 0178, 0019, 0056, 0039, 0135, 1347
Celebrity	0000	Philco	0054, 0463, 0030, 0145, 0019
Cineral	0451, 0092	Philips	0054
Citizen	0060, 0030, 0056, 0039, 0092	Pilot	0030, 0019, 0039
Concerto	0056	Pioneer	0166
Contec	0180	Portland	0019, 0039, 0092
Craig	0180	Prism	0051
Crosley	0054	Proscan	0047
Crown	0180, 0039	Proton	0178, 0031, 0052, 0466
Curtis Mathes	0047, 0054, 0154, 0051, 0451, 0093, 0060, 0030, 0145, 0056, 0039, 0166, 0466, 1147, 1347	Pulsar	0017, 0019
Daewoo	0451, 0019, 0039, 0092, 0623, 0624	Quasar	0051, 0250, 0165
Daytron	0019	RCA	0047, 0051, 0093, 0019, 0090, 0135, 1047, 1147, 1247, 1347, 1447
Denon	0145	Radio Shack	0047, 0154, 0165, 0180, 0030, 0178, 0019, 0056, 0039
Dumont	0017, 0019	Realistic	0154, 0165, 0180, 0030, 0178, 0019, 0056, 0039
Dwin	0720, 0774	Runco	0017, 0030
Electroband	0000	SSS	0180, 0019
Emerson	0154, 0236, 0463, 0180, 0178, 0019, 0179, 0039, 0177, 0623, 0624	Sampo	0030, 0039, 0052
Envision	0030	Samsung	0060, 0030, 0178, 0019, 0056
Fisher	0154	Samsux	0039
Fujitsu	0179, 0683	Sansei	0451
Funai	0180, 0179, 0171	Sansui	0463
Futuretech	0180	Sanyo	0154
GE	0047, 0051, 0451, 0093, 0178, 0135, 1147, 1347	Scimitsu	0019
Gibraltar	0017, 0030, 0019	Scotch	0178
GoldStar	0030, 0178, 0019, 0056	Scott	0236, 0180, 0178, 0019, 0179
Gradiente	0053, 0056	Sears	0047, 0054, 0154, 0156, 0178, 0179, 0056, 0171
Grumpy	0180, 0179	Semivox	0180
Hallmark	0178	Semp	0156
Harley Davidson	0179	Sharp	0093, 0165, 0039
Harman/Kardon	0054	Shogun	0019
Harvard	0180	Sony	0000
Hitachi	0145, 0056, 0151	Soundesign	0180, 0178, 0179
Infinity	0054	Squareview	0171
Inteq	0017	Starlite	0180
JBL	0054	Supreme	0000
JCB	0000	Sylvania	0054, 0030
JVC	0053	Symphonic	0171
KEC	0180	TMK	0178, 0056, 0177
KTV	0180, 0030, 0039	Tandy	0093
Kaypani	0052	Technics	0051, 0250
Kenwood	0030, 0019	Technol Ace	0179
LG	0056	Techwood	0051, 0056
LXI	0047, 0054, 0154, 0156, 0178	Teknika	0054, 0180, 0150, 0060, 0019, 0179, 0056, 0039, 0092
Luxman	0056	Telefunken	0056
MGA	0150, 0030, 0178, 0019	Tera	0031
		Toshiba	0154, 0156, 0060, 1256
		Totevision	0039

Vector Research	0030
Victor	0053
Vidikron	0054
Vidtech	0178, 0019
Wards	0054, 0165, 0030, 0178, 0019, 0179, 0056
White Westinghouse	0463, 0623, 0624
Yamaha	0030, 0019
Zenith	0017, 0463, 0092, 0624

Setup Codes for VCRs:

Admiral	0048, 0209
Adventura	0000
Aiko	0278
Aiwa	0037, 0000
Akai	0041
America Action	0278
American High	0035
Asha	0240
Audiovox	0037
Beaumarck	0240
Bell & Howell	0104
Broksonic	0184, 0121, 0209, 0002, 0479
CCE	0072, 0278
Calix	0037
Canon	0035
Carver	0081
Cineral	0278
Citizen	0037, 0278
Colt	0072
Craig	0037, 0047, 0240, 0072, 0271
Curtis Mathes	0060, 0035, 0041, 0162
Cybernex	0240
Daewoo	0045, 0278
Denon	0042
Dynatech	0000
Electrohome	0037
Electroponic	0037
Emerex	0032
Emerson	0037, 0184, 0000, 0121, 0043, 0209, 0002, 0278, 0479
Fisher	0047, 0104
Fuji	0035, 0033
Funai	0000
GE	0060, 0035, 0048, 0202, 0240
Garrard	0000
Go Video	0526
GoldStar	0037, 0038
Gradiente	0000
HI-Q	0047
Harley Davidson	0000
Harman/Kardon	0081, 0038
Harwood	0072
Hitachi	0000, 0042, 0041
Hughes Network	0042
JVC	0067, 0041
Jensen	0041
KEC	0037, 0278
KLH	0072
Kenwood	0067, 0041, 0038
Kodak	0035, 0037
LXI	0037
Lloyd's	0000
Logik	0072
MEI	0035
MGA	0240, 0043
MGN Technology	0240
MTC	0240, 0000
Magnasonic	0278
Magnavox	0035, 0039, 0081, 0000, 0149

Magnin	0240
Marantz	0035, 0081
Marta	0037
Matsushita	0035, 0162, 0454
Memorex	0035, 0037, 0048, 0039, 0047, 0240, 0000, 0104, 0209, 0454, 1037, 1162, 1262
Minolta	0042
Mitsubishi	0048, 0067, 0043
Motorola	0035, 0048
Multitech	0000, 0072
NEC	0104, 0067, 0041, 0038
Nikko	0037
Noblex	0240
Olympus	0035
Optimus	0037, 0048, 0104, 0162, 0454, 1048, 1062, 1162, 1262
Orion	0184, 0209, 0002, 0479
Panasonic	0035, 0162, 0225, 0454, 0616, 1062, 1162, 1262
Penney	0035, 0037, 0240, 0042, 0038
Pentax	0042
Philco	0035, 0209, 0479
Philips	0035, 0081, 0618
Pilot	0037
Pioneer	0067
Profitronic	0240
Proscan	0060, 0202
Protec	0072
Pulsar	0039
Quasar	0035, 0162, 0454, 1162
RCA	0060, 0035, 0048, 0240, 0042, 0149, 0202
Radio Shack	0000, 1037
Radix	0037
Randex	0037
Realistic	0035, 0037, 0048, 0047, 0000, 0104
ReplayTV	0614, 0616
Runco	0039
STS	0042
Samsung	0240, 0045
Sanky	0048, 0039
Sansui	0000, 0067, 0209, 0041, 0271, 0479
Sanyo	0047, 0240, 0104
Scott	0184, 0045, 0121, 0043
Sears	0035, 0037, 0047, 0000, 0042, 0104
Semp	0045
Sharp	0048
Shintom	0072
Shogun	0240
Singer	0072
Sony	0035, 0032, 0000, 0033
Sylvania	0035, 0081, 0000, 0043
Symphonic	0000
TMK	0240
Tatung	0041
Teac	0000, 0041
Technics	0035, 0162, 0202
Teknika	0035, 0037, 0000
Thomas	0000
Tivo	0618
Toshiba	0045, 0043
Totevision	0037, 0240
Unitech	0240
Vector	0045
Vector Research	0038
Video Concepts	0045
Videosonic	0240
Wards	0060, 0035, 0048, 0047, 0081, 0240, 0000, 0042, 0072, 0149
White Westinghouse	0209, 0278
XR-1000	0035, 0000, 0072
Yamaha	0038
Zenith	0039, 0000, 0209, 0033, 0479

Setup Codes for TV/VCR Combos:

Brocksonic	0002, 0479 (TV:0463)
Citizen	0278
Colt	0072
Curtis Mathes	0035 (TV:0051)
Daewoo	0278 (TV:0624)
Emerson	0002, 0479 (TV:0463), 0278 (TV:0624)
Funai	0000
GE	0060 (TV:0047), 0048 (TV:0093), 0035 (TV:0051), 0240
GoldStar	0037 (TV:0056)
Harley Davidson	0000
Hitachi	0000
Lloyd's	0000
Magnasonic	0278
Magnavox	0000, 0081 (TV:0054)
Magnin	0240
Memorex	1162, 1262, 0162 (TV:0250), 0037 (TV:0056), 1037
MGA	0240
Mitsubishi	0048 (TV:0093)
Optimus	1162, 1262, 0162 (TV:0250)
Orion	0002, 0479 (TV:0463)
Panasonic	1162, 1262, 0162 (TV:0250), 0035 (TV:0051)
Penney	0037 (TV:0056), 0035 (TV:0051), 0240
Quasar	0162 (TV:0250), 0035 (TV:0051)
Radio Shack	1037
RCA	0060 (TV:0047), 0048 (TV:0093), 0035 (TV:0051), 0240
Sansui	0000, 0479 (TV:0463)
Sanyo	0240
Sears	0000, 0037 (TV:0056)
Sharp	0048 (TV:0093)
Sony	0032 (TV:0000)
Sylvania	0081 (TV:0054)
Symphonic	0000
Thomas	0000
White Westinghouse	0278 (TV:0624)
Zenith	0000, 0479 (TV:0463)

Setup Codes for Cable Converters:

ABC	0003, 0008, 0014, 0017, 0007, 0011, 0013
Allegro	0153, 0315
Americast	0899
Antronix	0022
Archer	0153, 0022, 0797
Belcor	0056
Bell & Howell	0014
Bell South	0899
Cable Star	0056
Cabletenna	0022
Cableview	0022
Century	0153
Citizen	0153, 0315
Colour Voice	0025
Comtronics	0040
Contec	0019
Digi	0637
Eastern	0002
Emerson	0797
Everquest	0015, 0040
Focus	0400
GC Electronics	0056
Garrard	0153
Gemini	0015, 0797
General Instrument	0476, 0276, 0011, 0810
GoldStar	0144, 0040
Goodmind	0797
Hamlin	0020, 0259, 0009, 0034
Hitachi	0011

Hytex	0007
Jasco	0015, 0153, 0315
Jerrold	0003, 0012, 0476, 0276, 0014, 0015, 0011, 0810
Linsay	0440
Memorex	0000
Movie Time	0063
NSC	0063
Novaplex	0618
Oak	0019, 0007
Optimus	0021
Panasonic	0000, 0107, 0021
Panther	0637
Paragon	0000
Philips	0153, 0025
Pioneer	0144, 0533, 0877
Popular Mechanics	0400
Pulsar	0000
Quasar	0000
RCA	0021
Radio Shack	0015, 0315, 0797, 0883
Recoton	0400
Regal	0020, 0259
Regency	0002
Rembrandt	0011
Runco	0000
SL Marx	0040
Samsung	0144, 0040
Scientific Atlanta	0008, 0477, 0017, 0877
Signal	0015, 0040
Signature	0011
Sprucer	0021
Starcom	0003, 0015
Stargate	0015, 0040, 0797
Starquest	0015
TV86	0063
Tandy	0258
Television	0040
Timeless	0418
Tocom	0012, 0013
Toshiba	0000
Tusa	0015
Unika	0153, 0022
United Artists	0007
Universal	0153, 0022, 0056, 0191
Viewstar	0063, 0258
Zenith	0000, 0525, 0899
Zentek	0400

Setup Codes for Satellite Receivers:

AlphaStar	0772
Echostar	0775, 1005
Expressvu	0775
General Instrument	0627, 0361, 0869
HTS	0775
Hitachi	0819
Hughes Network	0749
JVC	0775
Jerrold	0627, 0361
Magnavox	0724, 0722
Memorex	0724
Next Level	0869
Panasonic	0701
Philips	0724, 0722
Primestar	0627, 0361
RCA	0566, 0143, 0392, 0855
Radio Shack	0869
Sony	0639

Star Choice	0869
Toshiba	0790
Uniden	0724, 0722
Zenith	0856

Setup Codes for DVD Players:

Denon	0490, 0634
GE	0522
Harman/Kardon	0582
JVC	0558, 0623
Kenwood	0534
Magnavox	0503
Marantz	0539
Mitsubishi	0521
Onkyo	0503, 0627
Optimus	0571
Panasonic	0490, 0632
Philips	0503, 0539
Pioneer	0525, 0571, 0632
Proscan	0522
RCA	0522
Samsung	0573
Sharp	0630
Sherwood	0633
Sony	0533
Technics	0490
Theta Digital	0571
Toshiba	0503
Yamaha	0490, 0545
Zenith	0503, 0591

Setup Codes for LD Players:

Aiwa	0203
Denon	0059, 0172
Funai	0203
Mitsubishi	0059
NAD	0059
Optimus	0059
Panasonic	0204
Pioneer	0059
Quasar	0204
Realistic	0203
Sony	0193, 0201
Technics	0204