



URC 5650 Cinema 5

User Manual

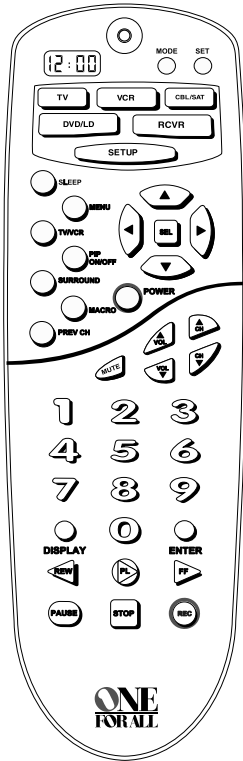 
Previous model name: Big Easy HT Plus

OVERVIEW

Thank you for purchasing the One For All® *Cinema 5* universal remote control. Before you can use your new remote, you will need to program it to operate the specific home entertainment components you wish to control. Follow the instructions detailed in this manual to set up your *Big Easy HT Plus* and enjoy your new remote control.

FEATURES AND FUNCTIONS

Here are the features and functions of the *Cinema 5* universal remote control. Use the drawing to locate each feature of the remote, then refer to the chart for a description of what function each feature performs.



FEATURES AND FUNCTIONS

 
MODE The **MODE** key is used to switch the clock display between month, day, second and advancing the setting in the clock setting mode.

SET The **SET** key is used to enter, advance and return from the clock setting mode.

The Light (**LED**) flashes red to show that the remote is working and is sending a signal.

SETUP The **SETUP** key is used to program your *Cinema 5*.

POWER The **POWER** key controls power ON and OFF the same as the **POWER** key on your original remote.



The **TV**, **VCR**, **DVD/LD**, **RCVR** and **CBL/SAT** keys are used to select the home entertainment component you want to control. If your component does not respond when you press a key on the remote control, press the appropriate device key (**TV**, **VCR**, **DVD/LD**, **RCVR** or **CBL/SAT**) first to tell the remote control which component you would like the remote to operate.



The **VOL▲** (Volume Up), **VOL▼** (Volume Down) and **MUTE** keys control the volume the same as the Volume Up and Down and Mute keys on your original remote.



The **CH▲** (Channel Up) and **CH▼** (Channel Down) keys change channels the same as the Channel Up and Down keys on your original remote. The **CH▲/▼** keys also control the following functions in other modes: **DVD/LD** mode = Skip Forward/ Skip Reverse, **RCVR** mode = Preset Up/Preset Down.



The Digit keys (**0-9**) control direct channel access the same as the Digit keys on your original remote. The Digit keys (**0-9**) also control the following functions in other modes: **RCVR** mode = Input Selections.



The **ENTER** key operates the same as the Enter key on your original remote. If your original remote control required you to use an **Enter** key to change channels, use the **ENTER** key on the *Cinema 5* after entering your channel number. The **ENTER** key also controls the following functions in other mode: **RCVR** mode = TAPE MON.



The **PREV CH** (Previous Channel) key operates the same as the Last Channel or Recall key on your original remote. The **PREV CH** key also controls the following functions in other modes: **DVD/LD**, **RCVR** mode = Random.



The **CH▲/▼**, **VOL▲/▼**, **MUTE**, **PREV CH** and Digit (**0-9**) keys are made of a phosphorescent material that glows-in-the-dark. Expose the keys to bright light to activate the glow-in-the-dark feature. The length of time the keys remain illuminated will be determined by the length of time the remote is exposed to bright light.



The **SLEEP** key accesses the Sleep Timer of your home entertainment components (**TV**, **CBL/SAT** and **RCVR** modes only). Even if your component does not have a Sleep Timer, the *Cinema 5* may access its own built-in sleep timer.



you

The **REW** (Rewind), **PL** (PLAY), **FF** (Fast Forward) **REC** (Record), **STOP**, and **PAUSE** keys operate the same as the transport keys on your original VCR, Laser Disc and DVD remote. As a safety feature of the *Cinema 5*, must press the **REC** key twice before recording.



The **TV/VCR** key operates the same as the TV/VCR key on your original VCR remote. The **TV/VCR** key also controls the following functions in other modes: **TV** mode = TV/VIDEO, **CBL/SAT** mode = A/B or TV/SAT, **DVD/LD** mode = TV/LD, **RCVR** mode = Input Select.



The **MENU** key operates the same as the MENU or OSD (On Screen Display) key on your original remote. Use **▲**, **▼**, **◀**, **▶** and (Menu Up, Down, Left and Right) to navigate your menus. If your original remote control had a **SELECT** key to select options in your menus, use **SEL**. Please consult your home entertainment component's original owner's manual for more detailed instructions on accessing and navigating your On-Screen menus.



The **◀**, **▶**, **▲** and **▼** (Menu Up, Down, Left and Right) keys are used to navigate your On-Screen menus. The **◀**, **▶**, **▲**, and **▼** keys also control the following functions in other mode: **RCVR** mode = Rear Level +/- and Balance Left/Right.



The **SEL** (Select) key selects options in your On-Screen menus. The **SEL** key also controls the following functions in other modes: **RCVR** mode = Surround Mode, **DVD/LD** mode = Chapter.



The **DISPLAY** key operates the Display function of your home entertainment components.



The **PIP ON/OFF** key accesses your TV's Picture-in-Picture feature. The **PIP ON/OFF** key also controls the following functions in other modes: **DVD/LD** mode = Subtitle On/Off, **CBL/SAT** mode = View.



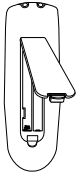
The **SURROUND** key operates the same as the Surround On/Off key on your original remote. The **SURROUND** key also controls the following functions in other modes: **VCR** mode = Auto Tracking, **DVD/LD** mode = Disc, **CBL/SAT** mode = Favorite Channel.

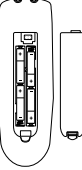


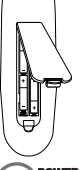
The **MACRO** key can memorize up to 15 keystrokes that can be accessed in sequence with a single key press. The key is not mode specific.


INSTALLING THE BATTERIES

Your *Cinema 5* requires four (4) new AAA alkaline batteries. To install the batteries:

- 

On the back of the *Cinema 5*, pull back on the tab and lift the battery cover off.
- 

Match the + and - marks on the batteries to the + and - marks in the battery case, then insert the batteries.
- 

Press the battery cover back into place.
- 

Test the unit by pressing **POWER**. If the batteries are inserted correctly, the red light will blink.

NOTE:

- Removing the batteries will not require you to reprogram your remote control because the *Cinema 5* has unlimited memory backup.
- You are required to reset the clock after battery replacement.

SETTING UP YOUR COMPONENTS


Programming the *Cinema 5* to operate your TV:

Locate the brand name of your TV and then write it in the space below.

TV Brand:


Locate the brand name of your TV in the "Setup Codes For TVs" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 5* to operate your TV.

To program the *Cinema 5* to operate your TV:


- Turn on your TV.
- 

Press **TV** and release. Press and hold **SETUP** until the Big Easy HT Plus's red light blinks twice, then release **SETUP**.

- Enter the first four-digit TV code listed for your brand in the "Setup Codes For TVs" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.

- 

Aim the *Cinema 5* at your TV and press **POWER**. Your TV should turn off. If your TV does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your TV.

- 

Your *Cinema 5* is now programmed to operate your TV. Write your TV code in the boxes to the left for future reference.

Remember, if you want to use your *Cinema 5* to operate your TV, press the **TV** key first.

Setup Codes For TVs

Abex	0032
Admiral	0093, 0179, 0180, 0016, 0047
Adventura	0046
Aiko	0092
Akai	0030
Alaron	0179
A-Mark	0003
Ambassador	0177
Anam National	0055
Anam	0180
AOC	0030, 0019, 0185, 0003, 0052
Archer	0003
Audiovox	0451, 0092, 0180, 0003
Baysonic	0180
Belcor	0019
Bell & Howell	0154, 0016
Bradford	0180
Brockwood	0019
Broksonic	0003
Candle	0056, 0030, 0186, 0046
Carnivale	0030
Carver	0054
Celebrity	0000
Cineral	0451, 0092
Citizen	0060, 0092, 0030, 0056, 0186, 0280, 0039, 0046
Clairtone	0185
Concerto	0056
Contec	0180, 0185
Craig	0180
Crown	0180, 0039
Curtis Mathes	0030, 0060, 0154, 0039
CXC	0180
Daewoo	0451, 0092, 0019, 0039
Daytron	0019
Denon	0145
Dumont	0017, 0019
Electroband	0000, 0185
Emerson	0463, 0236, 0180, 0019, 0154, 0177, 0178, 0179, 0185, 0280, 0282, 0038, 0039
Envision	0030
Fisher	0154, 0159
Fujitsu	0179
Funai	0171, 0179, 0180
Futuretech	0180
GE	0047, 0051, 0451, 0021, 0027, 0055, 0178, 0282, 0135
Gibraltar	0019, 0030, 0017
Goldstar	0019, 0030, 0178, 0032, 0039
Gradiente	0053, 0056
Grunpy	0179, 0180
Hallmark	0178
Harvard	0180
Hitachi	0145, 0151, 0038, 0056, 0032
Infinity	0054
Janeil	0046
JBL	0054
JCB	0000
JVC	0053
Kaypani	0052
KEC	0180
Kenwood	0019, 0030
Kloss	0024, 0046

KTV	0030, 0180, 0185, 0280, 0032
LG	0056
Logik	0016
Luxman	0056
LXI	0047, 0054, 0154, 0156, 0178
Magnavox	0054, 0096, 0186, 0187, 0020, 0024, 0030, 0386, 0171, 0179
Majestic	0016
Marantz	0054, 0030
Matsushita	0250
Megatron	0145, 0003, 0178
MEI	0185
Memorex	0056, 0150, 0154, 0016, 0178
MGA	0150, 0019, 0030, 0178
Midland	0017, 0047, 0051, 0135, 0032, 0039
Minutz	0021
Mitsubishi	0150, 0093, 0019, 0178
Motorola	0093, 0055
MTC	0060, 0019, 0030, 0056, 0185
Multitech	0180
NAD	0156, 0166, 0178
NEC	0019, 0030, 0056
Nikko	0030, 0092, 0178
Noshi	0018
NTC	0092
Onwa	0180
Optimus	0250, 0154, 0166
Optonica	0093, 0165
Orion	0236, 0436
Panasonic	0250, 0051, 0055
Penney	0047, 0156, 0051, 0030, 0019, 0003, 0018, 0021, 0027, 0060, 0135, 0178, 0032, 0039
Philco	0054, 0145, 0096, 0019, 0020, 0030
Philips	0054
Pilot	0019, 0030, 0039
Pioneer	0166, 0038
Portland	0092, 0019, 0039
Prism	0051
Proscan	0047
Proton	0003, 0052, 0178
Pulsar	0017, 0019
Quasar	0250, 0051, 0055, 0165
RadioShack	0047, 0056, 0154, 0019, 0030, 0165, 0178, 0180, 0032, 0039
RCA	0047, 0018, 0019, 0038, 0090, 0135
Realistic	0056, 0154, 0019, 0030, 0165, 0178, 0180, 0032, 0039
Rhapsody	0185
Runco	0017, 0030
Sampo	0030, 0052, 0032, 0039
Samsung	0060, 0019, 0030, 0056, 0178, 0032, 0039
Samsux	0039
Sansei	0451
Sanyo	0154, 0159
Scimitsu	0019
Scotch	0178
Scott	0236, 0019, 0178, 0179, 0180
Sears	0047, 0054, 0056, 0154, 0156, 0171, 0178, 0159, 0179
Semivox	0180
Semp	0156
Sharp	0093, 0165, 0039, 0386
Shogun	0019
Signature	0016
Simpson	0186, 0187
Sony	0000, 0080
Soundesign	0178, 0179, 0180, 0186
Spectricon	0003
Squareview	0171
SSS	0019, 0180
Starlite	0180
Supre-Macy	0046
Supreme	0000
Sylvania	0054, 0096, 0020, 0030
Symphonic	0171
Tandy	0093
Tatung	0055, 0003
Technics	0250, 0051
Technol Ace	0179
Techwood	0051, 0056, 0003
Teknika	0054, 0056, 0060, 0092, 0150, 0016, 0019, 0179, 0180, 0186, 0039

Telefunken	0056
TMK	0056, 0177, 0178
Toshiba	0156, 0060, 0154
Tosonic	0185
Totevision	0039
Universal	0027
Vector Research	0030
Victor	0053
Vidikron	0054
Vidtech	0019, 0178
Viking	0046
Wards	0016, 0019, 0030, 0054, 0056, 0080, 0096, 0165, 0178, 0179, 0020, 0021, 0027
White Westinghouse	0451, 0463, 0236, 0180
Yamaha	0019, 0030
Zenith	0017, 0092, 0016
Zonda	0003

Programming the *Cinema 5* to operate your VCR:


Locate the brand name of your VCR and then write it in the space below.

VCR Brand:


Locate the brand name of your VCR in the "Setup Codes For VCRs" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 5* to operate your VCR.


To program the *Cinema 5* to operate your VCR:

1. Turn on your VCR and insert a tape.

2.  Press **VCR** and release. Press and hold **SETUP** until the *Cinema 5* red light blinks twice, then release **SETUP**.

3. Enter the first four-digit VCR code listed for your brand in the "Setup Codes For VCRs" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.

4.  Aim the *Cinema 5* at your VCR and press **POWER**. Your VCR should turn off. If your original VCR remote control did not have a **POWER** key, press **PL** (Play). Your VCR should start to play. If your VCR does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your VCR.

5.  Your *Cinema 5* is now programmed to operate your VCR. Write your VCR code in the boxes to the left for future reference.

Remember, if you want to use your *Cinema 5* to operate your VCR, press the **VCR** key first.

Setup Codes For VCRs

Admiral	0048, 0121, 0184, 0039, 0060, 0202
Adventura	0000
Aiko	0278
Aiwa	0037, 0000
Akai	0041, 0061, 0106
American High	0035
Asha	0240
Audiovox	0037
Beaumarck	0240
Bell & Howell	0104
Broksonic	0184, 0209, 0479, 0002, 0121, 0295, 0361
Calix	0037
Canon	0035
Capehart	0020
Carver	0081
CCE	0072, 0278
Cineral	0278
Citizen	0037, 0278
Colt	0072
Craig	0072, 0240, 0037, 0047, 0271
Curtis Mathes	0035, 0041, 0060, 0202
Cybernex	0240
Daewoo	0278, 0020, 0045
Daytron	0020
Denon	0042
Dynatech	0000

Electrohome	0037
Electroponic	0037
Emerex	0032
Emerson	0209, 0184, 0479, 0278, 0000, 0002, 0036, 0037, 0043, 0061, 0068, 0121, 0184, 0208, 0212, 0295, 0361
Fisher	0104, 0047, 0054, 0066
Fuji	0033, 0035
Funai	0000
Garrard	0000
GE	0060, 0202, 0035, 0048, 0240
Goldstar	0037, 0038
Go-Video	0432, 0526
Gradiente	0000, 0008
Harley Davidson	0000
Harman/Kardon	0038
Harwood	0072, 0068, 0072
Headquarter	0046
HI-Q	0047
Hitachi	0041, 0105, 0000, 0042
Jensen	0041
JVC	0008, 0041, 0067
KEC	0037, 0278
Kenwood	0038, 0041, 0067
KLH	0072
Kodak	0035, 0037
Lloyd's	0000, 0208
Logik	0072
LXI	0037
Magnasonic	0278
Magnavox	0035, 0081, 0000, 0039, 0110, 0149
Magnin	0240
Marantz	0035, 0081
Marta	0037
Matsushita	0162, 0035, 0454
MEI	0035
Memorex	0162, 0240, 0035, 0037, 0104, 0000, 0039, 0046, 0047, 0048
MGA	0043, 0061, 0240
MGN Technology	0240
Minolta	0042, 0105
Mitsubishi	0043, 0048, 0061, 0067
Motorola	0035, 0048
MTC	0240, 0000
Multitech	0000, 0072
NEC	0038, 0040, 0041, 0067, 0104
Nikko	0037
Nikon	0034, 0253
Noblex	0240
Olympus	0035
Optimus	0162, 0048, 0037, 0104, 0454
Optonica	0062
Orion	0209, 0184, 0479, 0002, 0295
Panasonic	0162, 0035, 0077, 0225, 0454
Penney	0035, 0037, 0038, 0040, 0042, 0054, 0240
Pentax	0042, 0105
Philco	0035, 0209, 0479
Philips	0035, 0081, 0062, 0110
Pilot	0037
Pioneer	0067, 0162
Portland	0020
Proscan	0060, 0202
Protec	0072
Pulsar	0039
Quarter	0046
Quartz	0046
Quasar	0162, 0035, 0077, 0454
RadioShack	0000, 0037
Radix	0037
Randex	0037
RCA	0060, 0202, 0240, 0042, 0035, 0048, 0077, 0105, 0106, 0149
Realistic	0000, 0035, 0037, 0046, 0047, 0048, 0062, 0066, 0104
Ricoh	0034, 0253
Runco	0039
Samsung	0240, 0045
Sanky	0048, 0039
Sansui	0000, 0041, 0067, 0271, 0479
Sanyo	0104, 0046, 0047, 0054, 0240
Scott	0043, 0045, 0121, 0184, 0210, 0212
Sears	0000, 0035, 0037, 0042, 0046, 0047, 0054,

Semp	0045
Sharp	0048, 0062
Shintom	0072
Shogun	0240
Singer	0072
Sony	0032, 0033, 0034, 0000, 0035, 0253
STS	0042
Sunpak	0253
Sylvania	0035, 0081, 0043, 0000, 0110
Symphonic	0000
Tatung	0041
TEAC	0000, 0041
Technics	0162, 0035
Teknika	0000, 0035, 0037
Thomas	0000
TMK	0240, 0036, 0208
Toshiba	0043, 0045, 0066, 0210, 0212
Totevision	0037, 0240
Unitech	0240
Vector Research	0038, 0040
Vector	0045
Video Concepts	0040, 0045, 0061
Videosonic	0240
Wards	0000, 0035, 0042, 0047, 0048, 0060, 0062, 0072, 0081, 0149, 0212, 0240
White Westinghouse	0278, 0479, 0209, 0184
XR-1000	0000, 0035, 0072
Yamaha	0038
Zenith	0039, 0000, 0033, 0034

Setup Codes For TV/VCR Combos

American High	0035*
Brocksonic	0002, 0294, 0479
Colt	0072
Curtis Mathes	0035*
Daewoo	0278*
Emerson	0002, 0294, 0479
Funai	0000
GE	0035*, 0060*, 0048*, 0240
Hitachi	0035*, 0000
HQ	0000
Lloyds	0000
Magnavox	0000, 0035*, 0081*
Magnin	0240
Memorex	0037, 0162*
MGA	0240
Mitsubishi	0048*
Orion	0002, 0294, 0479
Panasonic	0035*, 0162*
Penney's	0035*, 0240, 0162*
Quasar	0035*, 0162*
RCA	0035*, 0060*, 0048*
Sansui	0000, 0479
Sanyo	0240
Sears	0000, 0037
Sony	0032*
Symphonic	0000
Zenith	0000

NOTE: If your TV/VCR is working on one of the codes highlighted with an asterisk (*), you may need to program a separate TV code in order to control the volume. Check the list of codes below and follow the instructions detailed in the "Programming the Big Easy HT Plus to Operate Your TV" section to program the supplied TV code.

TV/VCRs working on VCR code 0032 may require TV code 0000 for volume control.

TV/VCRs working on VCR code 0035 may require TV code 0051 for volume control.

TV/VCRs working on VCR code 0048 may require TV code 0093 for volume control.

TV/VCRs working on VCR code 0060 may require TV code 0047 for volume control.

TV/VCRs working on VCR code 0081 may require TV code 0054 for volume control.

TV/VCRs working on VCR code 0162 may require TV code 0250 for volume control.

TV/VCRs working on VCR code 0278 may require TV code 0451 for volume control.

Programming the *Cinema 5* to operate your DVD or Laser Disc Player: Locate the brand name of your DVD or Laser Disc Player and then write it in the space below.

DVD/LD Brand:

Locate the brand name of your DVD or Laser Disc Player in the "Setup Codes For DVD or Laser Disc Players" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 5* to operate your DVD or Laser Disc Player.

To program the *Cinema 5* to operate your DVD or Laser Disc Player:

1. Turn on your DVD or Laser Disc Player and insert a disc.
2. Press **DVD/LD** and release. Press and hold **SETUP** until the *Cinema 5*'s red light blinks twice, then release **SETUP**.
3. Enter the first four-digit DVD or Laser Disc Player code listed for your brand in the "Setup Codes For DVD or Laser Disc Players" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.
4. Aim the *Cinema 5* at your DVD or Laser Disc Player and press **POWER**. Your DVD or Laser Disc Player should turn off. If your DVD or Laser Disc Player does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your DVD or Laser Disc Player.

5. Your *Cinema 5* is now programmed to operate your DVD or Laser Disc Player. Write your DVD or Laser Disc Player code in the boxes to the left for future reference.

Remember, if you want to use your *Cinema 5* to operate your DVD or Laser Disc Player, press the **DVD/LD** key first.

Setup Codes for DVD Players

JVC	0558
Kenwood	0534
Mitsubishi	0521
Panasonic	0490
Philips	0539
Pioneer	0525
RCA	0522
Sony	0533
Toshiba	0503
Zenith	0503

Setup Codes for Laser Disc Players

Mitsubishi	0059
NAD	0059
Pioneer	0059
Sony	0193, 0201

Programming the *Cinema 5* to operate your Receiver/Tuner:

Locate the brand name of your Receiver/Tuner and then write it in the space below.

Receiver/Tuner Brand:

Locate the brand name of your Receiver/Tuner in the "Setup Codes For Receivers/Tuners" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 5* to operate your Receiver/Tuner.

To program the *Cinema 5* to operate your Receiver/Tuner:

1. Turn on your Receiver/Tuner.
2. Press **RCVR** and release. Press and hold **SETUP** until the *Cinema 5*'s red light blinks twice, then release **SETUP**.
3. Enter the first four-digit Receiver/Tuner code listed for your brand in the "Setup Codes For Receivers/Tuners" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.

4. Aim the *Cinema 5* at your Receiver/Tuner and press **POWER**. Your Receiver/Tuner should turn off. If your Receiver/Tuner does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your Receiver/Tuner.

5. Your *Cinema 5* is now programmed to operate your Receiver/Tuner. Write your Receiver/Tuner code in the boxes to the left for future reference.

Remember, if you want to use your *Cinema 5* to operate your Receiver/Tuner, press the **RCVR** key first.

Setup Codes For Receivers/Tuners

ADC	0531
Aiwa	0121, 0158, 0189
Capetronic	0531
Carver	0008, 0042, 0189, 0360
Casio	0195
Clarinette	0195
Denon	0004
Emerson	0424
Fisher	0042, 0219, 0360
Garrard	0424, 0463
Harman/Kardon	0110
JVC	0074
Kenwood	0027, 0313, 0314, 0077, 0186
Koss	0424
Linn	0189
Lloyd's	0195
LXI	0181
Magnavox	0189, 0195, 0531
Marantz	0039, 0189
MCS	0039
Modulaire	0195
NAD	0320
Nakamichi	0347
Onkyo	0135
Optimus	0042, 0080, 0177, 0181, 0186, 0219, 0531, 0670
Panasonic	0039
Penney	0195
Philips	0189
Pioneer	0014, 0080, 0150, 0531, 0630
Quasar	0039
RCA	0054, 0360, 0531
Realistic	0163, 0181, 0195
Sansui	0189
Sanyo	0219
Scott	0163, 0322
Sharp	0186
Sherwood	0491, 0502
Sony	0158, 0474
Soundesign	0670
TEAC	0163, 0463
Technics	0039, 0309, 0518
Victor	0074
Wards	0014, 0042, 0054, 0080, 0158, 0189
Yamaha	0176, 0186
Yorx	0195

Programming the *Cinema 5* to operate your Cable Converter or Satellite:
 Locate the brand name of your Cable Converter or Satellite and then write it in the space below.




Cable Converter Brand:

or

Satellite Brand:

Locate the brand name of your Cable Converter or Satellite in the "Setup Codes For Cable Converters or Satellites" section. The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program your *Cinema 5* to operate your Cable Converter or Satellite.

To program the *Cinema 5* to operate your Cable Converter or Satellite:

1. Turn on your Cable Converter or Satellite.
2.  Press **CBL/SAT** and release. Press and hold **SETUP** until the *Cinema 5*'s red light blinks twice, then release **SETUP**.
3. Enter the first four-digit Cable Converter or Satellite code listed for your brand in the "Setup Codes For Cable Converters or Satellites" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.
4.  Aim the *Cinema 5* at your Cable Converter or Satellite and press **POWER**. Your Cable Converter or Satellite should turn off. If your Cable Converter or Satellite does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your Cable Converter or Satellite.
5.  Your *Cinema 5* is now programmed to operate your Cable Converter or Satellite. Write your Cable Converter or Satellite code in the boxes to the left for future reference.

Remember, if you want to use your *Cinema 5* to operate your Cable Converter or Satellite, press the **CBL/SAT** key first.

Setup Codes for Cable Converters

ABC	0003, 0008, 0014, 0007, 0001, 0011, 0013, 0017
Allegro	0153, 0315
Antronix	0022, 0207
Archer	0797, 0153, 0022, 0207
Belcor	0056
Cable Star	0056
Cabletenna	0022
Cableview	0022
Century	0153
Citizen	0153, 0315
Colour Voice	0025, 0031
Comtronics	0040
Contec	0019
Digi	0637
Eastern	0002
Emerson	0797
Everquest	0015, 0040
Focus	0400
Garrard	0153
GC Electronics	0056, 0207
Gemini	0015
General Instrument	0476, 0003, 0014, 0011
Goldstar	0144, 0040
Goodmind	0797
Hamlin	0259, 0009, 0020, 0034
Hitachi	0011
Hytex	0007
Jasco	0153, 0315
Jerrold	0476, 0003, 0014, 0011, 0012, 0015
Linsay	0440
Magnavox	0027
Memorex	0000
Movie Time	0063, 0156
Novaplex	0618
NSC	0063, 0156
Oak	0007, 0019






Optimus	0021
Panasonic	0021, 0107, 0000
Panther	0637
Paragon	0000
Philips	0153, 0025, 0027, 0031
Pioneer	0753, 0144, 0023
Popular Mechanics	0400
Prelude	0770
Pulsar	0000
RadioShack	0015, 0315, 0797
RCA	0021
Realistic	0207
Recoton	0400
Regal	0259, 0020
Regency	0002
Rembrandt	0011
Runco	0000
Samsung	0144, 0040
Scientific Atlanta	0477, 0008, 0017
Seam	0510
Signal	0015, 0040
Signature	0011
SL Marx	0040
Sprucer	0021
Starcom	0003, 0015
Stargate	0770, 0015, 0040
Starquest	0015
Sylvania	0001
Tandy	0258
Television	0040
Texscan	0001
TFC	0310
Timeless	0418
Tocom	0012, 0013
Toshiba	0000
Tusa	0015
TV86	0063
Unika	0153, 0022, 0207
United Artists	0007
United Cable	0003
Universal	0153, 0022, 0056, 0191, 0207
Videoway	0250
Viewstar	0063, 0027, 0258
Zenith	0525, 0000
Zentek	0400

Setup Codes for Satellites

AlphaStar DBS	0772
Chaparral	0053, 0216
Echostar DBS	0775
Echostar	0159, 0269, 0280
Express Vu DBS	0775
General Instrument	0361
Hitachi DBS	0819
Homecable	0238
HTS DBS	0775
Hughes Network Systems DBS	0749
IQ Prism	0210
IQ	0210
Janeil	0152
Jerrold Primestar	0627
Jerrold	0361
Legend	0269
Magnavox DBS	0722, 0724
Memorex DBS	0724
Memorex	0269
Panasonic	0152
Panasonic DBS	0701
Philips DBS	0722, 0724
Primestar	0361, 0627
RCA DSS	0566
Realistic	0052
Sony DBS	0639
Star Choice DBS	0869
Star Trak	0180
STS	0210
Toshiba DBS	0790
Toshiba	0082
Uniden DBS	0724
Uniden	0052, 0074, 0076, 0238

SEARCHING FOR YOUR CODE

If your TV, VCR or Cable Converter does not respond to the *Cinema 5* after trying all of the codes listed for your brand, or if your brand is not listed at all, try searching for your code. For example, after trying all of the codes for your TV, you still cannot get the *Cinema 5* to operate your TV, then:



1.  Press **TV** and release. Press and hold **SETUP** until the *Cinema 5*'s red light blinks twice, then release **SETUP**.

2. **9-9-1** Press **9-9-1**.
3.  Slowly alternate between pressing **POWER*** and **TV** until your TV turns OFF. Make sure that the *Cinema 5* is aimed at your TV during the search. You may have to press this sequence of buttons (**POWER*** then **TV**) up to 100 times to search the entire library of codes.

4.  When your TV turns OFF, press and release **SETUP** to lock in the code for your TV. Your *Cinema 5* is now programmed to operate your TV.

*Some VCR, LD or DVD player do not have POWER key on the original remote. If so turn on the VCR/DVD/LD player manually, insert a tape or CD and start playing. Start the code search process and use STOP key instead of POWER. When the device responds, press and release the SETUP key to lock in the code. RED LED will blink twice.

NOTE: To search for the codes of your other components, repeat Steps 1 through 5, only substitute the appropriate device key (VCR, DVD/LD, RCVR or CBL/SAT) for the component you are searching for.

RETRIEVE THE CODES PROGRAMMED IN THE *Big Easy HT Plus*

If you have set up the *Cinema 5* using the "SEARCHING FOR YOUR CODE" procedure, you may want to figure out which four-digit code is operating your equipment. Use this procedure after you have set up your components to find out which four-digit code is operating your equipment. For example, to find out which code is operating your TV after setting up your TV using the "SEARCHING FOR YOUR CODE" procedure:

1.  Press **TV** and release. Press and hold **SETUP** until the *Cinema 5*'s red light blinks twice, then release **SETUP**.

2. **9-9-0** Press **9-9-0**.
3. **1** For the first digit of your four-digit code, press **1** and count the number of times the red light (LED) blinks on the *Cinema 5*. If the light does not blink when you press the number **1**, the digit is zero.
4. **2** For the second digit, press **2** and count the number of times the red light (LED) blinks on the *Cinema 5*. If the light does not blink when you press the number **2**, the digit is zero.
5. **3** For the third digit, press **3** and count the number of times the red light (LED) blinks on the *Cinema 5*. If the light does not blink when you press the number **3**, the digit is zero.
6. **4** For the fourth and final digit, press **4** and count the number of times the red light (LED) blinks on the *Cinema 5*. If the light does not blink when you press the number **4**, the digit is zero. Now you have your four-digit code.




NOTE: To find out the code for your other components, repeat Steps 1 through 6, only substitute the appropriate device key (VCR, DVD/LD, RCVR or CBL/SAT) for the component code you wish to learn.

SETTING UP OTHER COMPONENTS

In addition to the components labeled on the device keys (TV, VCR, DVD/LD, CBL/SAT, etc.), the *Cinema 5* can also operate the following components: Cassette Decks, Video Accessories, Amplifier and Miscellaneous Audio Components (Graphic Equalizers and Digital Music Service Boxes).

The Setup Codes for these components can be accessed under the following device keys:

- | | |
|----------------------|----------------------------|
| Cassette Decks: | Use the VCR Key |
| Video Accessories: | Use the CBL/SAT Key |
| Amplifier: | Use the RCVR Key |
| Miscellaneous Audio: | Use the RCVR Key |
- For example, to set up a Cassette Player on the VCR key:

1. Turn on your Cassette Player and insert a tape.
2.  Press **VCR** and release. Press and hold **SETUP** until the *Cinema 5*'s red light blinks twice, then release **SETUP**.

3. Enter the first four-digit Cassette Player code listed for your brand in the "Setup Codes For Audio Cassettes" section. If you perform this procedure correctly, the red light will blink twice when you enter the final digit of your code.
4.  Aim the *Cinema 5* at your Cassette Player and press **PL** (Play). Your Cassette Player should play your tape. If your Cassette Player does not respond, repeat steps 2-4, trying each code listed for your brand until you find the one that operates your Cassette Player.
5. Your *Big Easy HT Plus* is now programmed to operate your Cassette Player.

Remember, if you want to use your *Cinema 5* to operate your Cassette Player, press the **VCR** key first.

Setup Codes For Audio Cassette Decks

Aiwa	0029, 0197
Carver	0029
Denon	0076
Harman/Kardon	0182
JVC	0244, 0273
Kenwood	0070
Magnavox	0029
Marantz	0029
Onkyo	0135, 0282
Optimus	0027, 0220
Philips	0029
Pioneer	0027, 0099, 0220
Sansui	0029
Sony	0170, 0243, 0291
Technics	0229
Victor	0273
Wards	0027
Yamaha	0094, 0097

Setup Codes For Video Accessories

Archer	0160
GC Electronics	0160
Jebsee	0160
Rabbit	0081
RadioShack	0160
Roctec	0456
SuperGuide	0169
TeleCaption	0171

Setup Codes For Integrated Amplifier/Preamplifiers/Amplifiers

Carver	0269
Curtis Maths	0300
Denon	0160
GE	0078
JVC	0331
Linn	0269
Luxman	0165
Magnavox	0269
Marantz	0269, 0321
Nakamichi	0321
Optimus	0013, 0300, 0395
Panasonic	0308
Pioneer	0013, 0300
Realistic	0395

Sansui	0321
Sony	0220, 0689
Soundesign	0078
Technics	0308
Victor	0331
Wards	0013, 0078
Yamaha	0354

Setup Codes For Miscellaneous Audio

Aiwa	0010, 0159
Fisher	0052
Harman/Kardon	0477
Jerrold	0459, 0520
JVC	0073
Nikko	0376
Paramount Pictures	0317
RCA	0056
Schneider	0376
Scientific Atlanta	0460
Sony	0010, 0159
Soundesign	0376
SSI	0317
Starcom	0459
Yorx	0376

RE-ASSIGNING DEVICE KEYS




You can use the *Cinema 5* to operate a second TV or a second VCR or any combination of five home entertainment components. For example, you may want your *Cinema 5* to control 1 TV, 1 Cable Converter, 1 Receiver and 2 DVD Players. To accomplish this, you must re-assign one of the device keys to operate the desired component, in this case, a second DVD. The chart below shows you how to re-assign a particular device key and then set up your new component.

TV to VCR	SETUP* + 992 + VCR + TV + TV + SETUP* + VCR code
TV to DVD/LD	SETUP* + 992 + DVD/LD + TV + TV + SETUP* + DVD or LD Player code
TV to RCVR	SETUP* + 992 + RCVR + TV + TV + SETUP* + Audio code
TV to CBL/SAT	SETUP* + 992 + CBL/SAT + TV + TV + SETUP* + Cable/DBS code
VCR to TV	SETUP* + 992 + TV + VCR + VCR + SETUP* + TV code
VCR to DVD/LD	SETUP* + 992 + DVD/LD + VCR + VCR + SETUP* + DVD or LD Player code
VCR to RCVR	SETUP* + 992 + RCVR + VCR + VCR + SETUP* + Audio code
VCR to CBL/SAT	SETUP* + 992 + CBL/SAT + VCR + VCR + SETUP* + Cable/DBS code
DVD/LD to TV	SETUP* + 992 + TV + DVD/LD + DVD/LD + SETUP* + TV code
DVD/LD to VCR	SETUP* + 992 + VCR + DVD/LD + DVD/LD + SETUP* + VCR code
DVD/LD to RCVR	SETUP* + 992 + RCVR + DVD/LD + DVD/LD + SETUP* + Audio code
DVD/LD to CBL/SAT	SETUP* + 992 + CBL/SAT + DVD/LD + DVD/LD + SETUP* + Cable/DBS code
RCVR to TV	SETUP* + 992 + TV + RCVR + RCVR + SETUP* + TV code
RCVR to VCR	SETUP* + 992 + VCR + RCVR + RCVR + SETUP* + VCR code
RCVR to DVD/LD	SETUP* + 992 + DVD/LD + RCVR + RCVR + SETUP* + DVD or LD Player code
RCVR to CBL/SAT	SETUP* + 992 + CBL/SAT + RCVR + RCVR + SETUP* + Cable/DBS code
CBL/SAT to TV	SETUP* + 992 + TV + CBL/SAT + CBL/SAT + SETUP* + TV code
CBL/SAT to VCR	SETUP* + 992 + VCR + CBL/SAT + CBL/SAT + SETUP* + VCR code
CBL/SAT to DVD/LD	SETUP* + 992 + DVD/LD + CBL/SAT + CBL/SAT + SETUP* + DVD or LD code
CBL/SAT to RCVR	SETUP* + 992 + RCVR + CBL/SAT + CBL/SAT + SETUP* + Audio code

***NOTE:** Here (*) you must hold **SETUP** until the *Cinema 5*'s red light blinks twice.

PROGRAMMING THE MACRO KEY



The *Cinema 5* has a Macro key (**MACRO**) that allow the user to play back a series of keystrokes, at any time, with the press of the key. For example, to set up a sequence that will turn on your components and change the components to the proper inputs:

-  Press and hold **SETUP** until the *Cinema 5*'s red light blinks twice, then release **SETUP**.
- 9-9-5** Press **9-9-5**. The *Cinema 5*'s red light will blink twice.
-  Press and release the **MACRO** key. This will be the key that will play back the series of keystrokes assigned to that key.
- Begin entering the sequence of keystrokes, up to 15, that you wish to be played back when you press the **MACRO** key. To play back the macro you need to press the **MACRO** key. For example: **RCVR + POWER + TV + POWER + TV/VCR** (To change the input on the TV to VIDEO 1) + **CBL/SAT + POWER**.
-  Once your sequence is entered, press and hold **SETUP** until the *Cinema 5*'s red light blinks twice.

Now, using the example above, whenever the programmed **MACRO** key is pressed, the Receiver would power ON, the TV will power ON and change the input to VIDEO 1 and then the Satellite would power ON.



VOLUME LOCK

Volume Lock allows the user to designate which component will control the volume in the **TV**, **DVD/LD** and **CBL/SAT** modes. To set the Volume Lock to the TV mode:

-  Press and hold **SETUP** until the *Cinema 5*'s red light blinks twice, then release **SETUP**.
- 9-9-3** Press **9-9-3**. The *Cinema 5*'s red light will blink twice.
-  Press and release **TV**. The *Cinema 5*'s red light will blink twice.



Now, whenever you press **VOL▲**, **VOL▼** or **MUTE** in the **VCR**, **DVD/LD** and **CBL/SAT** modes your TV will control the volume. If you would like to change the Volume Lock setting to the **VCR**, **DVD/LD** or **CBL/SAT** modes repeat steps 1-3, only substitute the appropriate device key. Setting the Volume Lock to the **TV**, **VCR**, **DVD/LD** or **CBL/SAT** mode will not effect the volume control in the **RCVR** mode.

You can also change the Volume Lock setting so that an Audio component controls the volume in all device modes. To change the Volume Lock setting on the *Cinema 5* to the **RCVR** mode:

-  Press and hold **SETUP** until the *Cinema 5*'s red light blinks twice, then release **SETUP**.
- 9-9-3** Press **9-9-3**. The *Cinema 5*'s red light will blink twice.
-  Press and release **RCVR**. The *Cinema 5*'s red light will blink twice.

Now, whenever you press **VOL▲**, **VOL▼** or **MUTE** your Audio component will control the volume in all device modes.

You can also change the Volume Lock setting so that each component controls its own volume. However, some components do not have volume control. Using this setting may eliminate volume control in some device modes. To change the Volume Lock setting on the *Cinema 5* so each mode controls its own volume:


-  Press and hold **SETUP** until the *Cinema 5*'s red light blinks twice, then release **SETUP**.
- 9-9-3** Press **9-9-3**. The *Cinema 5*'s red light will blink twice.
-  Press and release **VOL▲**. The *Cinema 5*'s red light will blink twice.


Now, whenever you press **VOL▲**, **VOL▼** or **MUTE** on the *Cinema 5* each component will control its own volume, provided each component has volume control.

USING THE SLEEP KEY

The **SLEEP** key allows you to access the sleep timer of your TV, Cable Converter/DBS Satellite or Audio component. You can access your TV, Cable Converter, DBS Satellite or Audio component's Sleep Timer by pressing the **SLEEP** key. Most Sleep Timers advance in increments of 10 or 15 minutes, however, for specific instructions on setting your components Sleep Timer, please consult your original owner's manual.


Even if your original Cable Converter remote control did not have a sleep timer, your *Cinema 5* has its own built-in sleep timer. If your Cable Converter does not have a sleep timer, press the **SLEEP** key to activate the *Cinema 5*'s built-in sleep timer. For example:

- 

Press and release the **CBL/SAT** key then press the **SLEEP** key once to set the *Cinema 5*'s built-in sleep timer for 15 minutes. The red light will blink once.
- 

Each additional press of the **SLEEP** key will add 15 more minutes to the Sleep Timer, up to a maximum of 60 minutes. The LED will blink twice when the sleep timer is set for 30 minutes, 3 times for 45 minutes, or 4 times for 60 minutes.

NOTE: The sleep timer starts 10 seconds after the last press of the **SLEEP** key. Once you have activated the *Cinema 5*'s built-in sleep timer, you must keep the remote control aimed directly at the component.

- 


To de-activate the built-in sleep timer, press **POWER**.


NOTE: Plugging your TV into the outlet on the back of the Cable Converter may allow you to turn both your Cable Converter and your TV ON and OFF.


SETTING THE CLOCK

CHANGING CLOCK DISPLAY MODE

The clock is preset to display the hour and minute. To change the display mode :

- 

Press **MODE** key, the display will change to month and day. The display will return to hour and minute if no key is pressed within 2 seconds.
- 


Press **MODE** key again within 2 seconds, it will display second on the right two digits.
- 

Press **MODE** key again, it will be go back to display hour and minute.

NOTE : At any of the above modes, press **SET** key will enter the clock setting mode.



SETTING UP THE CLOCK


Follow below steps to set the current time and day.



- 


Press **SET** key to enter clock setting mode.

Note : If the **SET** key is pressed at hour and minute or at month and day display mode, the display will show hour and minute for two seconds and then display month and day for the next two seconds , then back and repeat again. If the **SET** key is pressed at second display mode, the display will remain to display the second.



- 





Press **SET** key to enter month setting mode.
- 


Press **MODE** key to advance the month.
- 


After setting the month, press **SET** key to enter day setting mode.
- 

Press **MODE** key to advance the day.

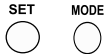
- 



After setting the day, press **SET** key to enter hour setting mode with A or P in the rightmost digit to indicate AM or PM, press **MODE** key to advance the hour.
- 
- 


After setting the hour, press **SET** key to enter minute setting mode.
- 

Press **MODE** key to advance the minute.

NOTES:

- At each of the setting mode, continue to press the **MODE** key more than 1 second will let advancing automatically.
 - If minute is not advancing in the set sequence, press **SET** key in the minute setting mode, it will exit clock setting mode and commence time keeping.
 - Advancing minute will reset second to 00 and suspend timekeeping.
- 

After finish the minute, to exit the clock setting mode, press **SET** and then **MODE** key to commence timekeeping.
 - 

If required to set month, day or hour again after setting the minute, press **SET** key twice and repeat step 2-9.

TROUBLE SHOOTING

Problem	Solution
Red light does not blink when you press a key?	Replace the batteries with four (4) new AAA alkaline batteries.
The Big Easy HT Plus does not operate your home entertainment components or is not performing commands properly?	Try all of the codes listed for your brand of home entertainment component in the "Setup Codes" section. Many setup codes may allow for partial functionality, however, only one setup code will operate your home entertainment component correctly. Make sure that all of the components you are setting up can be operated with an infrared remote control.
Problems programming a TV/VCR combo?	Try the VCR set-up codes for your brand. However, some combo units may require both a TV code for volume control and a VCR code for the remaining functions.
VCR not recording?	As a safety feature on the <i>Cinema 5</i> , you must press the REC key twice.
CH ▲/▼ and PREV CH not working for your RCA TV?	Due to RCA design (1983-1987), only the original remote control will operate these functions.
Problems changing channels?	If your original remote control required an Enter keystroke when changing channels, press the ENTER key on the <i>Cinema 5</i> after you enter the channel number.
The red light blinks when you press a key but you receive no response from your home entertainment component?	Make sure you are aiming your <i>Cinema 5</i> at your home entertainment component and that you are within 15 feet before using your remote.

World Wide Web: <http://www.hudsonag.com>

**One For All® Products
LIMITED WARRANTY**

One For All ("OFA") warrants, to the original purchaser only, that this product will be free from defects in materials and workmanship, under normal use, for ninety (90) days from the date of original purchase. This warranty does not cover damage or failures caused by products or services not supplied by OFA, or which result from accident, misuse, abuse, neglect, mishandling, misapplication, faulty installation, set-up adjustment, improper maintenance, alteration, maladjustment of consumer controls, modifications, commercial use, or that is attributable to acts of God.

There are no express warranties except as listed above. OFA SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

To obtain warranty service for a defective product during the warranty period, please return the product, preferably in the original carton, along with your purchase receipt, to the store of original purchase. A note detailing the complaint would be helpful. The store, at its option, will replace or repair this product if found to be defective.

One For All
(330)-405-8655

As you add new components to your home entertainment system, One For All® has a remote control that will fit your needs.

One For All® is a trademark of Universal Electronics Inc.

Copyright 1999 by Universal Electronics Inc. No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated to any language, in any form or by any means, electronic, mechanical, magnetic, optical, manual, or otherwise, without the prior written permission of Universal Electronics Inc.

This One For All® product is designed for compatibility in North America excluding Mexico.

URC-5650 *Cinema 5*

1/01