




ACCESS 5 UNIVERSAL REMOTE CONTROL

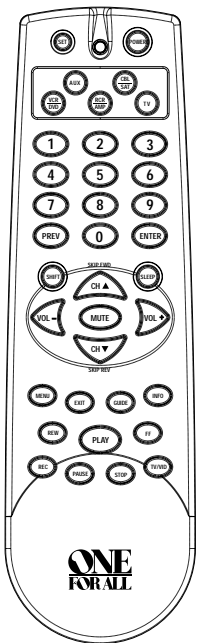

USER'S GUIDE

Press VCR/DVD, AUX, RCR/AMP, CBL/SAT, or TV once to select a home entertainment device to control.

Use the keypad (0 ~ 9) to directly select channels (for example, 09 or 31).

Press MUTE once to turn sound off or on.

Press PREV once to recall the last-viewed channel and to page back one screen on the main menu.

Press ENTER once after entering channel numbers on some TVs.

Press SLEEP to activate your device's sleep timer (not available for all devices).

Press SHIFT and use the Up/Down/Left/Right cursor keys to move the cursor in the program guide and menu screens.

Press SHIFT and MUTE to select a menu item.

Use VOL+ (or VOL-) to raise (or lower) the sound volume.

Use CH▲ (or CH▼) to select the next higher (or lower) channel.

When controlling a DVD/CD player, use SKIP FORWARD (or SKIP REV) to skip to the next (or previous) DVD chapter/CD track.

Press MENU once to display your selected device's main menu.

Use EXIT to exit from your selected device's menu or guide.

Use GUIDE to display your selected device's program guide.

Use INFO to display the current channel and program information.

Use the transport keys to control your VCR, CD or DVD player, or VOD. To record a program, press the record key (●) twice.

Use TV/VID to switch the TV's input to view TV or video programs.

INSTALLING BATTERIES

- On the remote control's back, push the tab and lift off the battery cover.
- Obtain two (2) new AAA alkaline batteries. Match the + and - marks on the batteries to the + and - marks in the battery case, then insert the new batteries.
- Press the battery cover back into place. The tab should click when the cover is locked.
- Test the unit by pressing POWER and any mode key (e.g., TV). If batteries are inserted correctly, the LED will blink once.

NOTE: When batteries need replacement, the remote control will stop operating. Remove the old batteries and insert new ones within 30 minutes to ensure all of your programming information is restored.

PROGRAMMING DEVICE CONTROL

The One For All Access 5 remote control is preprogrammed at the factory to operate an RCA TV and VCR, a Motorola (GI) cable box, a Pioneer audio tuner, and a Radio Shack X-10 home automation unit. To control devices other than the default brands, perform the following steps; otherwise skip this section:

NOTE: For TV/VCR Combo control, see the next section.

- Turn on a device (e.g., VCR) and, if applicable, insert media, (e.g., cassette or disc).
- On the remote control, press a device key once (i.e., VCR/DVD, AUX, RCR/AMP, CBL/SAT, or TV). Press and hold SETUP until the LED blinks twice, then release SETUP.
- Use the *Manufacturer's Codes* to locate the the type of device and brand name and then enter the first four-digit code for your device. If performed correctly, the LED will blink twice.

NOTE: If the LED did not blink twice, then repeat steps 2 through 3 and try entering the same code again.

- Aim the remote control at the device and press POWER once. The device should turn off. If it does not respond, repeat steps 2-3, trying each code for your brand until you find one that works. If it still does not work, try *Searching For Your Code*.

NOTE: If the device does not have a POWER key, press the ► (Play) key.

- Repeat steps 1 through 4 for each device you want to control.

PROGRAMMING TV/VCR COMBO CONTROL

Perform the following instructions to control a TV/VCR Combo:

- Turn on the TV/VCR Combo and insert a video cassette.
- On the remote control, press VCR/DVD. Press and hold SETUP until the LED blinks twice, then release SETUP.

NOTE: Please read steps 2-4 completely before proceeding. Highlight or write down the codes and device you wish to program before moving on to step 2.

NOTE: If the LED did not blink twice, then repeat steps 2 through 3 and try entering the same code again.

- Aim the remote control at the device and press POWER once. It should turn off. If the device does not respond, repeat steps 2-3, trying each code for your brand until you find one that works. If it still does not work, try *Searching For Your Code*.

NOTE: If the device does not have a POWER key, press the ► (Play) key.

SEARCHING FOR YOUR CODE

If your device does not respond to the remote control after trying all codes listed for your brand, or if your brand is not listed at all, try searching for your code. For example, to search for a code for your TV:

- On the remote control, press TV once.
- Press and hold SETUP until the LED blinks twice, then release SETUP.
- Enter 9 - 9 - 1. The LED will blink twice.
- Aim the remote control at the the TV and slowly alternate between pressing POWER and TV. Stop when the TV turns off.
- To lock in the code, press and hold SETUP until the LED blinks twice, then release SETUP.
- To search for the codes of your other devices, repeat steps 1 through 5, but substitute the appropriate device key for the device you are searching for.

NOTE: In the search mode, the remote control will send IR codes from its library to the selected device, starting with the most popular code first.

CHECKING THE CODES

If you have set up the remote control using the *Searching For Your Code* procedure, you may need to find out which four-digit code is operating your equipment:

For example, to find out which code is operating your TV:

- On the remote control, press TV once.
- Press and hold SETUP until the LED blinks twice, then release SETUP.
- Enter 9 - 9 - 0. The LED will blink twice.
- To view the code for the first digit, press 1 once. Wait 3 seconds, count the LED blinks (e.g., 3 blinks = 3) and write down the number.
- Repeat step 4 three more times for remaining digits. Use 2 for the second digit, 3 for the third digit, and 4 for the fourth digit.
- To check for codes of other devices, repeat steps 1 through 5, but substitute the appropriate device key for each device you are checking. As before, write down each four-digit code.

RE-ASSIGNING DEVICE KEYS

The One For All Access 5 can be set to control a second TV, VCR, DVD player, or audio device.

For example, to control a TV, a cable box, and two VCRs, you will need to re-assign the unused AUX key to operate the second VCR as follows:

- On the remote control, press and hold SETUP until the LED blinks twice, then release SETUP.
- Enter 9 - 9 - 2. The LED will blink twice.
- Press VCR once, then press AUX once.
- The AUX key is now ready to be programmed for your second VCR. See *Programming Device Control*.

To re-assign other device keys, repeat steps 1 through 4 by substituting the key sequence from the below chart for the most popular devices:

To Re-Assign Key Sequence	Perform
VCR/DVD as 2nd TV key:	SETUP - 9 - 9 - 2 - TV - VCR/DVD
VCR/DVD as 2nd CBL/SAT key:	SETUP - 9 - 9 - 2 - CBL/SAT - VCR/DVD
VCR/DVD as 2nd RCR/AMP key:	SETUP - 9 - 9 - 2 - RCR/AMP - VCR/DVD

VCR/DVD back to VCR/DVD:	SETUP - 9 - 9 - 2 - VCR/DVD - VCR/DVD
RCR/AMP as 2nd TV key:	SETUP - 9 - 9 - 2 - TV - RCR/AMP
RCR/AMP as 2nd VCR/DVD key:	SETUP - 9 - 9 - 2 - VCR/DVD - RCR/AMP
RCR/AMP as 2nd CBL/SAT key:	SETUP - 9 - 9 - 2 - CBL/SAT - RCR/AMP
RCR/AMP back to RCR/AMP:	SETUP - 9 - 9 - 2 - RCR/AMP - RCR/AMP
AUX as 2nd TV key:	SETUP - 9 - 9 - 2 - TV - AUX
AUX as 2nd VCR/DVD key:	SETUP - 9 - 9 - 2 - VCR/DVD - AUX
AUX as 2nd CBL/SAT key:	SETUP - 9 - 9 - 2 - CBL/SAT - AUX
AUX back to AUX:	SETUP - 9 - 9 - 2 - AUX - AUX

When a re-assignment is done, the LED will blink twice to confirm your choice. At that time, you will need to program the remote control for the new device (see *Programming Device Control*).

CHANGING VOLUME LOCK

The One For All Access 5 is set to control the volume of your TV in the TV, VCR/DVD, CBL/SAT, RCR/AMP, and AUX modes. If you want volume to be controlled by a mode other than TV (e.g., CBL/SAT), change the Volume Lock setting as follows:

To Change Volume Lock To Be Controlled By Another Mode:

- On the remote control, press and hold SETUP until the LED blinks twice, then release SETUP.
- Enter 9 - 9 - 3 and then press any mode key once (except TV). The LED will blink twice.
- Now, whenever you press VOL+, VOL-, or MUTE, volume will be controlled by your mode choice.

Unlocking Volume Control:

NOTE: Perform these instructions when you want independent volume control for each programmed device (e.g., TV volume control in TV mode, CBL/SAT volume in CBL/SAT mode, etc.)

- On the remote control, press and hold SETUP until the LED blinks twice, then release SETUP.
- Enter 9 - 9 - 3 and then press VOL+. The LED will blink four times.
- Volume will again be controlled according to its default states.

TROUBLESHOOTING

For assistance, please contact us in any of the following ways:

- Consumer Help Line: (330) 405-8612
- Internet: <http://www.oneforall.com>

- PROBLEM:** If you own a satellite that uses code 0775 (Express Vu and EchoStar) and your exit key does not work, perform the following sequence to activate this feature/function.
- SOLUTION:**
- Press the CBL/SAT key
 - Press and hold the SET key until the red LED blinks twice
 - Press 9-9-4, the red LED will blink twice
 - Press SET and release (one blink on LED)
 - Press 3-3-6
 - Press the EXIT key, the red LED will blink twice.

The Exit key will now correctly perform the exit feature/function on your satellite.

PROBLEM: LED does not blink when you press a key.

SOLUTION: Replace batteries with two new AAA alkaline batteries.

PROBLEM: LED blinks when you press a key, but home entertainment device does not respond.

SOLUTION: Make sure the remote control is aimed at your home entertainment device and is not farther than 15 feet away.

PROBLEM: The unit does not control home entertainment devices or commands are not working properly.

SOLUTION: Try all listed codes for the device brands being set up. Make sure they can be operated with an infrared remote control.

PROBLEM: TV/VCR combo does not respond properly.

SOLUTION: Use the VCR codes for your brand. Some combo units may require both a TV code and a VCR code for full operation.

PROBLEM: Changing channels does not work properly.

SOLUTION: If original remote control required pressing ENTER to change channels, press ENTER on the remote control after entering the channel number.

PROBLEM: Tried "Search Method" and still could not find a working code.

SOLUTION: Clear the device key as follows: Press and hold SETUP until the LED blinks twice, then release. Next enter 9 - 9 - 2. Then press the device key to be cleared twice. Now repeat the "Search Method."

PROBLEM: Remote control does not turn on Sony or Sharp TV/VCR Combo.

SOLUTION: For power on, these products require programming TV codes. For Sony, use TV code 0000 and VCR code 0032. For Sharp, use TV code 0093 and VCR code 0048.

PROBLEM: CH▲ and CH▼ do not work for your RCA TV.

SOLUTION: Due to RCA design (1983-1987), only the original remote control will operate these functions.

LIFETIME WARRANTY

One For All, ("OFA") warrants this product to be free from defects in materials and workmanship, under normal use, throughout the period of the product's ownership by the original purchaser. This warranty does not cover damage or failures caused by products or services not supplied by OFA, or which result from accident, misuses, abuse, neglect, mishandling, misapplication, faulty installation, set-up adjustment, improper maintenance, alteration, maladjustment of consumer controls, modifications, commercial use, or that is attributable to acts of God.

There are no express warranties except as listed above. OFA SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF WARRANTY. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

To obtain warranty service for a defective product, please return the product, preferably in the original carton, along with your purchase receipt, to the store of original purchase for the first 90 days. A note detailing the complaint would be helpful. The store, at its option, will replace or repair this product if found to be defective.

If the unit has been purchased more than 90 days ago, pls return it to Impact Distribution Services, 6262 Patterson Pass Road, Suite C, Livermore, CA 94550 together with the original receipt and \$3.95 to cover postage and handling. It will be repaired or replaced at the manufacturer's option. The manufacturer reserves the right to substitute a currently manufactured model with equal or superior features.

ADDITIONAL INFORMATION

ONE FOR ALL® is the registered trademark of Universal Electronics Inc. Computime International Ltd. is the Licensee of the ONE FOR ALL® brand for USA and Canada.

Copyright 2001 by Universal Electronics Inc. No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated to any language, in any form or by any means, electronic, mechanical, magnetic, optical, manual, or otherwise, without the prior written permission of Universal Electronics Inc.

One For All® Access 5 is compatible for use in North America excluding Mexico.

INTRODUCTION

The One For All Access 5 Universal Remote Control is designed to operate five home entertainment devices, including TV, video, and audio components.

The remote control requires two fresh AAA alkaline batteries (not included) and easy programming to control your devices. For best results, please read and perform all instructions listed here. Also, keep these instructions for future reference.

FEATURES AND FUNCTIONS

Use the *Key Charts* to learn how to use the universal functions of the One For All Access 5 Universal Remote Control.

Key Charts

- Use SETUP for all programming sequences.
- The LED (red light) blinks to show that the remote control is working and is sending signals.
- Press POWER once to turn on or off the selected device.