



URC-6510
700927

ZAPPER

Universal Remote

USER GUIDE & CODE BOOK

Retain For Future Reference



Contents

ABOUT YOUR ZAPPER Features and Functions	Front Page
INSTALLING THE BATTERIES	Front Page
SETTING UP THE ZAPPER Direct Set-Up Search Method	Front Page Front Page Front Page
ADVANCED OPERATION Controlling Colour & Brightness Scan	Front Page Front Page
TROUBLE-SHOOTING Helpful Hints Consumer Help-Line	Front Page Front Page
SET-UP CODES Quick Set-Up Codes	Back Page Back Page Back Page

About Your ZAPPER

Thank you for purchasing the ZAPPER universal remote control (URC-6510). Your ZAPPER package contains:

- The ZAPPER Remote Control
- The ZAPPER User Guide & Code Book

The User Guide & Code Book explains in simple steps how to set up and operate your new universal remote control. **You may need this guide again in the future, so please be sure to keep it.**

Your ZAPPER needs 2 new "AAA/LRO3" batteries.

Your ZAPPER is designed to let you use one remote to operate your Television. The illustration on the left and the chart below describe the features and functions of the ZAPPER universal remote control.

Features and Functions

Key	Function
	LED The LED (Light Emitting Diode) flashes red to show the remote is working.
	MAGIC The MAGIC key is used to set up your ZAPPER and to access special features.
	Power The Power key turns your devices both on and off.
	Mute The Mute key operates the same function it did on your original remote control. It is also used to activate the Scan feature (see Scan).
	Volume+/-, Programme +/- The Volume and Programme keys control the two most frequently used functions of your devices. They operate just as those on your original remote control. These keys are also used to program the ZAPPER for your devices and to control the Colour and Brightness settings of your television (Advanced Operation).

Installing The Batteries

The ZAPPER needs 2 new "AAA/LRO3" alkaline batteries.

- Remove the battery cover from the back of the ZAPPER by pressing down on the tab.
- Match the batteries to the +/- marks inside the battery case, then insert the batteries.
- Press the battery cover back into place.

Important notes:
- In order to avoid having to reprogram your ZAPPER after you remove the batteries, you will need to insert new batteries within 5 minutes.
- Also, it is best that you do not use rechargeable batteries.
- **On the inside of the battery compartment door you will find a label on which to write your set-up code after your ZAPPER is set up for your television. Please write down your code for easy, future reference.**

Setting Up The ZAPPER

Direct Set-Up

To set up the ZAPPER for your Television follow the instructions below. To set up your Television:

- Turn on your Television.
- Find your Television code in the Set-Up Code section (see reverse). Codes are listed by brand name. The most popular codes are listed first.
- Press and hold the **MAGIC key until the light blinks twice** (the light will blink once then twice).
- Enter your **5-digit code** according to the chart below. The red light will blink twice.

Volume +		=	1
Volume -		=	2
Programme +		=	3
Programme -		=	4
- Now, aim the ZAPPER at your Television and press **POWER**. If your Television switches off, your ZAPPER should be ready to operate your device.
- Turn your device back on and try all the remote's functions to ensure they are working properly. If the functions do not work properly, repeat steps 1-6 using another code listed under your brand.

Important notes:
- Some codes are quite similar. If your television does not respond or is not functioning properly with one of the codes, follow steps 1-6 with each code listed for your brand.
- If none of the codes listed for your brand operate your television, follow the Search Method described in the next section. The Search Method can be used even if your brand is not listed at all.
- **Write the code for your TV in the boxes provided below and inside the battery compartment for easy future reference.**

TV Code

Searching for Your Code

If your Television does not respond to the ZAPPER after trying all the codes listed for your brand, try searching for your code. To search for your TV code:

- Turn on your TV and aim your ONE FOR ALL at your television.
- Press and hold the **MAGIC key until the light blinks twice** (the light will blink once then twice).
- Next, press the **Programme(-) key three times**.
- Next, alternate between **Programme(-)** and **POWER** until your Television turns off. You may have to press these keys many times, so be patient. Remember, you must aim the ZAPPER at your device the entire time you are searching for your code.
- When your device turns off, press and release **MAGIC**. Don't forget, press MAGIC as soon as your device turns off.
- The ZAPPER should now be ready to operate your Television. Turn your device back on and try all the remote's functions to ensure they are working properly. If some of the ZAPPER'S commands are not operating correctly, try the search method again, you may be using the wrong code.

Important notes: During step 4, you may have to press these keys many times (up to 150!), so be patient. Remember, you must aim the ZAPPER at your device the entire time you are searching for your code.

Code Blink Out

After you have used the Search Method, you can find out which code the ZAPPER responded to by blinking back the code. It's handy to know your Television code for future reference. Remember, you can only blink back your code after the ZAPPER is operating your device.

To blink out your TV code:

- Press and hold the **MAGIC key until the light blinks twice** (the light will blink once then twice).
- Next, press **Programme(-)**, **Programme(-)**, **Programme(+)**.
- For the first digit of your 5-digit code, press **Volume + (▲)** and count the red blinks.
- For the second digit, press **Volume - (▼)** and count the red blinks.
- For the third digit, press **Programme(+)** and count the red blinks.
- For the fourth digit, press **Programme(-)** and count the red blinks.
- For the fifth digit, press **MUTE** and count the red blinks.
Now you have your 5-digit code. Write your code in the boxes provided previously for easy, future reference.

Advanced Operation

Controlling Colour & Brightness

Depending on the functions of your original remote control, the ZAPPER can operate the colour and brightness settings of your Television.

- Colour up = Press then hold
- Colour down = Press then hold
- Brightness up = Press then hold
- Brightness down) = Press then hold

Scan

Your ZAPPER comes with a special Scan function which lets you "scan" through every programme available on your TV.

To scan the programmes on your TV:

- Aim the ZAPPER at your TV. Press and release **MAGIC** then press the **MUTE** key.
- The ZAPPER will send the command to advance through all the programmes available on your Television stopping at each programme for about three seconds. Remember, you must aim the ZAPPER at your device the entire time you are using scan.
- When you find a programme you would like to watch, simply press the **Volume + (▲)** on the ZAPPER keypad to stop the Scan feature.

Important notes: - Scan may not function with television that did not have a programme +/- key on the original remote.

Trouble-Shooting

Helpful Hints

Problem:	Solution:
Red light does not blink when you press a key?	Replace batteries with 2 new "AAA/LRO3" alkaline batteries
The ONE FOR ALL does not respond after pressing a key?	Make sure you are using new batteries and are aiming the ONE FOR ALL at your device.
The ONE FOR ALL does not operate your television?	A) Try all the codes listed for your brand. B) Try the search method.
Your brand is not listed in the ONE FOR ALL code section?	Try the search method.
The ONE FOR ALL is not performing commands properly?	You may be using the wrong code. Try Direct Set-Up again trying each code listed under your brand or start the search method over again to locate the proper code.
Your TV switches to programme 1 when you press the power key before switching off OR you must press Power twice to switch on your TV?	Press MAGIC until the light blinks twice. Then press: (Programme-) (Programme+) (Programme-)
You cannot reach channel 10 and above on your TV.	If your original remote did not have channel +/- keys, the Zapper may not operate this function.

If you have any questions about the operation of your new ONE FOR ALL Universal Remote Control, you may call our consumer help-line for assistance. Before calling, please read this manual carefully to find the answer to your question. If you cannot find a solution in this manual, we ask that you complete the chart below on your television before calling. **Please ensure you have this information ready upon speaking to our customer service department even if done via fax or e-mail.**

In the UK: phone: 0800 966 194
fax: +31 53 432 9816
e-mail: ofahelp@ueic.com
Hours: 9 am - 7 pm Mon-Fri / 9 am - 3 pm Sat

In Ireland: phone: 1-800 553 118
fax: +31 53 432 9816
e-mail: ofahelp@ueic.com
Hours: 9 am - 7 pm Mon-Fri / 9 am - 3 pm Sat

In Australia: phone: 1-800 064 472
e-mail: ofahelp@ueic.com

We need to know:

- **Your ONE FOR ALL model number: URC-6510**
- **Date of purchase:** / /
day/month/year
- **Your Television:**
(The first row is an example of how to complete this table)

TYPE	BRAND	MODEL NR.	REMOTE MODEL NR.	OFA CODE
TV	Sony	KVX-2950B	RMT-V131B	11133

Type numbers can be found in your equipment's owner's manual, on the front of the device or on the factory plate behind the device.

