

ONE
FOR ALL[®]



ZAPPERTM

URC-6512
701594

UK Universal remote

D

F

E

P

I

NL



Table of Contents

UK

| | |
|-------------------------------------|----|
| PICTURE OF THE ZAPPER REMOTE | 3 |
| INSTALLING THE BATTERIES | 4 |
| FEATURES AND FUNCTIONS | 4 |
| SETTING UP THE ZAPPER | |
| Direct Set-Up | 5 |
| Search Method | 7 |
| Code Blink Out | 8 |
| SET-UP CODES | |
| Television | 59 |
| ADVANCED OPERATION | |
| Controlling Colour & Brightness | 9 |
| Scan | 9 |
| TROUBLE-SHOOTING | |
| Helpful Hints | 10 |

About Your ZAPPER

Thank you for purchasing the ZAPPER universal remote control (URC-6512). Your ZAPPER package contains:

- The ZAPPER remote control
- The ZAPPER User Guide & Code Book

The User Guide & Code Book explains in simple steps how to set up and operate your new universal remote control. **You may need this guide again in the future, so please be sure to keep it.**

Your ZAPPER needs 2 new "AAA/LR03" batteries.

Your ZAPPER is designed to let you use one remote to operate your Television.



Installing The Batteries

The ZAPPER needs 2 new "AAA/LRO3" alkaline batteries.

- 1 Remove the battery cover from the back of the ZAPPER by pressing down on the tab.
- 2 Match the batteries to the +/- marks inside the battery case, then insert the batteries.
- 3 Press the battery cover back into place.

Important notes:

- In order to avoid having to reprogram your ZAPPER after you remove the batteries, you will need to insert new batteries within 5 minutes. Also, it is best that you do not use rechargeable batteries.
- **On the inside of the battery compartment door you will find a label on which to write your set-up code after your ZAPPER is set up for your television. Please write down your code for easy, future reference.**

Features and Functions

 


See picture of the ZAPPER remote on page 3.



- 1 **MAGIC**
The MAGIC key is used to set up your ZAPPER and to access special features.
- 2 **Power**
The POWER key operates the same function it did on your original remote control. The LED (Light Emitting Diode) flashes red to show the remote is working.
- 3 **Mute**
The Mute key operates the same function it did on your original remote control. It is also used to activate the Scan feature (see page 9).
- 4 **Volume +/-, Programme +/-**
The Volume and Programme keys operate just as those on your original remote control. These keys are also used to program the ZAPPER for your devices and to control the Colour and Brightness settings of your television (see page 9).



Setting Up The ZAPPER


Direct Set-Up

To set up the ZAPPER for your Television follow the instructions below. To set up your Television:

-  Find your Television code in the Set-Up Code section (page 59-68). Codes are listed by brand name. The most popular codes are listed first.
-  Press and hold the **MAGIC key until the POWER key (LED) blinks twice** (the POWER key (LED) will blink once then twice).
-  **Enter your 5-digit code** according to the chart below. The POWER key (LED) will blink twice.

| | | | |
|----------|---|---|---|
| Volume + |  | = | 1 |
| Volume - |  | = | 2 |


| | | | |
|-------------|---|---|---|
| Programme + |  | = | 3 |
| Programme - |  | = | 4 |

-  Now, aim the ZAPPER at your Television and press **POWER**. If your Television switches off, your ZAPPER should be ready to operate your device.
- Turn your device back on and try all the remote's functions to ensure they are working properly. If the functions do not work properly, repeat steps 1-5 using another code listed under your brand.
- Write the codes for your TV in the boxes provided on page 6 and inside the battery compartment for easy future reference.**

Important notes:

- Some codes are quite similar. If your television does not respond or is not functioning properly with one of the codes, follow steps 1-5 with each code listed for your brand.
- If none of the codes listed for your brand operate your television, follow the Search Method described in the next section. The Search Method can be used even if your brand is not listed at all.
- **Write the code for your TV in the boxes provided below and inside the battery compartment for easy future reference.**

TV Code

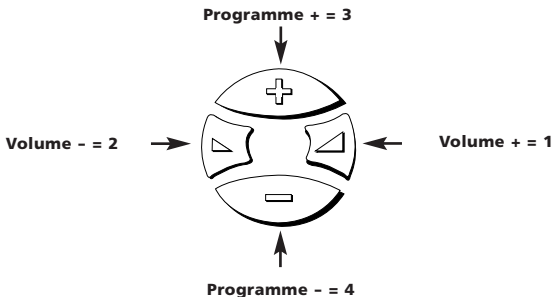





Example: To enter the Sony TV code 24432, you would press Volume(-), Programme(-), Programme(-), Programme(+), Volume(-).

If your television does not respond to the ZAPPER after you have tried all the codes listed for your brand, try the Search Method described on page 7.

Make sure you write your correct 5 digit code in the boxes provided inside the battery compartment and in the boxes provided on this page.

Search Method

If your Television does not respond to the ZAPPER after trying all the codes listed for your brand, try searching for your code. To search for your TV code:

- 1** Turn on your TV and aim your ONE FOR ALL at your television.
- 2**  Press and hold the **MAGIC key until the POWER key (LED) blinks twice** (the POWER key (LED) will blink once then twice).
- 3**  Next, press the **Programme(-) key three times**.
- 4**  Next, alternate between **Programme(-)** and **POWER** until your Television turns off. You may have to press these keys many times, so be patient. Remember, you must aim the ZAPPER at your device the entire time you are searching for your code.
- 5**  When your device turns off, press and release **MAGIC**. Don't forget, press MAGIC as soon as your device turns off.


 





The ZAPPER should now be ready to operate your Television. Turn your device back on and try all the remote's functions to ensure they are working properly. If some of the ZAPPER'S commands are not operating correctly, try the search method again, you may be using the wrong code.

Important notes: During step 4, you may have to press these keys many times (up to 150!), so be patient. Remember, you must aim the ZAPPER at your device the entire time you are searching for your code.

Code Blink Out

After you have used the Search Method, you can find out which code the ZAPPER responded to by blinking back the code. It's handy to know your Television code for future reference. Remember, you can only blink back your code after the ZAPPER is operating your device.

To blink out your TV code:









-  Press and hold the **MAGIC** key until the **POWER key (LED) blinks twice** (the POWER key (LED) will blink once then twice).
-  Next, press **Programme(-), Programme(-), Programme(+)**.
-  For the first digit of your 5-digit code, press **Volume + (▲)** and count the red blinks.
-  For the second digit, press **Volume - (▼)** and count the red blinks.
-  For the third digit, press **Programme(+)** and count the red blinks.
-  For the fourth digit, press **Programme(-)** and count the red blinks.
-  For the fifth digit, press **MUTE** and count the red blinks.

Write the codes for your TV in the boxes provided on page 6 and inside the battery compartment for easy future reference.

Advanced Operation

Controlling Colour & Brightness

Depending on the functions of your original remote control, the ZAPPER can operate the colour and brightness settings of your Television.



| | | | | |
|-------------------|-------|---|-----------|---|
| Colour up = | Press |  | then hold |  |
| Colour down = | Press |  | then hold |  |
| Brightness up = | Press |  | then hold |  |
| Brightness down = | Press |  | then hold |  |

Note: You have 5 seconds to press the Volume or Channel keys for colour or brightness adjustment after pressing MAGIC.

Scan

Your ZAPPER comes with a special Scan function which lets you "scan" through every programme available on your TV.

To scan the programmes on your TV:

-  Aim the ZAPPER at your TV. Press and release MAGIC then press the MUTE key.
 The ZAPPER will send the command to advance through all the programmes available on your Television stopping at each programme for about three seconds. Remember, you must aim the ZAPPER at your device the entire time you are using scan.
- When you find a programme you would like to watch, simply press **any key** to stop the Scan feature.

Important notes: Scan may not function with a television that did not have a programme +/- key on the original remote.

Trouble-Shooting

Helpful Hints

| Problem: | Solution: |
|---|--|
| Your brand is not listed in the ONE FOR ALL code section? | Try the search method. |
| The ONE FOR ALL does not operate your television? | A) Try all the codes listed for your brand. B) Try the search method. |
| The ONE FOR ALL is not performing commands properly? | You may be using the wrong code. Try Direct Set-Up again trying each code listed under your brand or start the search method over again to locate the proper code. |
| Your TV switches to programme 1 when you press the power key before switching off OR you must press Power twice to switch on your TV? | Press MAGIC until the light blinks twice. Then press: (Programme-) (Programme+) (Programme-) |
| You cannot reach channel 10 and above on your TV. | If your original remote did not have channel +/- keys, the ZAPPER may not operate this function. |
| The ONE FOR ALL does not respond after pressing a key? | Make sure you are using new batteries and are aiming the ONE FOR ALL at your device. |
| POWER key (LED) does not blink when you press a key? | Replace batteries with 2 new "AAA/LR03" alkaline batteries |

Televisions

Fernseher

Téléviseurs

Televisores

Televisões

Televisori

Televisies

| | | | | |
|---------|--------------|-------|-------|-------|
| 4510991 | A.R. Systems | 22311 | | |
| 4511271 | Abex | 11311 | | |
| 4512089 | Acec | 11141 | | |
| 4510010 | Admiral | 12224 | 12242 | 23313 |
| | | 14222 | 21131 | |
| 4510012 | Adyson | 14232 | 14231 | |
| 4511080 | Agashi | 14231 | 21131 | |
| 4510015 | AGB | 31121 | | |
| 4510997 | Agef | 12224 | | |
| 4510017 | Aiko | 14231 | 11132 | 22414 |
| | | 11314 | 23412 | 12131 |
| | | 22332 | 21131 | 14232 |
| 4510018 | Aim | 21213 | | |
| 4510020 | Akai | 22332 | 14211 | 22414 |
| | | 23412 | 11314 | 11132 |
| | | 12131 | 14233 | 13314 |
| | | 31121 | 32233 | 31341 |
| | | 32122 | 24311 | 14232 |
| | | 32424 | 14231 | 21131 |
| | | 24111 | 13413 | 22432 |
| | | 32243 | | |
| 4510021 | Akiba | 14233 | 21233 | 24124 |
| 4510023 | Akura | 14233 | 21233 | 21221 |
| | | 11132 | 22323 | 23241 |
| | | 13334 | 21131 | 33241 |
| 4511267 | Alaron | 14231 | | |
| 4510024 | Alba | 14233 | 14334 | 11132 |
| | | 23313 | 22413 | 22314 |
| | | 22414 | 14231 | 14424 |
| | | 13314 | 32122 | 24324 |
| | | 11321 | 33241 | 32114 |
| 4510026 | Alcyon | 12141 | | |
| 4510029 | Allorgan | 14143 | 21323 | 14232 |

| | | | | |
|---------|----------------|-------|-------|-------|
| 4510041 | Amplivision | 14232 | 23211 | 22111 |
| | | 22413 | | |
| 4510042 | Amstrad | 13412 | 11132 | 31121 |
| | | 21131 | 14233 | 22414 |
| | | 23412 | 13334 | 22333 |
| | | 23241 | 33131 | |
| 4511094 | Anam | 11132 | | |
| 4510044 | Anglo | 11132 | 21131 | |
| 4510045 | Anitech | 11132 | 12141 | 21131 |
| 4510047 | Ansonic | 22413 | 21321 | 12323 |
| | | 11132 | 22423 | 13314 |
| | | 23234 | 21114 | 14424 |
| | | 11141 | 23341 | |
| 4510050 | Apollo | 24232 | | |
| 4510053 | Arc en Ciel | 23144 | 12342 | 14121 |
| | | 31431 | 22142 | 14123 |
| 4510054 | Arcam | 14231 | 23144 | 14232 |
| 4510057 | Aristona | 31341 | 11141 | |
| 4510059 | Arthur Martin | 13314 | 23211 | |
| 4510060 | ASA | 12332 | 22233 | 12123 |
| | | 12331 | 12224 | |
| 4510062 | Asberg | 12141 | | |
| 4511095 | Asora | 11132 | | |
| 4510070 | Asuka | 14233 | 21131 | 14231 |
| | | 21233 | 14232 | |
| 4510072 | Atlantic | 14231 | 14143 | 21114 |
| | | 22111 | | |
| 4510074 | Atori | 11132 | | |
| 4510075 | Auchan | 13314 | 23211 | |
| 4510080 | Audiosonic | 12342 | 14232 | 22413 |
| | | 22212 | 21131 | 14233 |
| | | 23341 | | |
| 4510081 | Audioton | 14232 | 22413 | 21131 |
| 4510084 | Ausind | 12141 | | |
| 4510085 | Autovox | 12224 | 14143 | 14342 |
| | | 12141 | 14232 | 14424 |
| 4511156 | AWA | 11134 | 11321 | 11132 |
| | | 13242 | 22423 | 23241 |
| | | 14231 | 32243 | |
| 4511081 | Ayomi | 14343 | | |
| 4511098 | AYR | 31224 | | |
| 4510091 | Baird | 12342 | 14112 | 22224 |
| | | 13443 | 14111 | 12131 |
| | | 12132 | 14232 | 14211 |
| 4510093 | Bang & Olufsen | 31422 | 12224 | |
| 4510094 | Barco | 22441 | 13314 | |
| 4510097 | Basic Line | 14233 | 11132 | 22423 |
| | | 13314 | 21233 | |

| | | | | |
|---------|------------|-------|-------|-------|
| 4510098 | Bastide | 14232 | | |
| 4510099 | Baur | 13213 | 21344 | 31224 |
| | | 14114 | 22332 | 24432 |
| 4511082 | Bazin | 14232 | | |
| 4511079 | Beaumarck | 13413 | | |
| 4510103 | Beko | 22413 | 32243 | |
| 4510105 | Beon | 23313 | 11311 | |
| 4510106 | Best | 22212 | 22413 | 23322 |
| 4510107 | Bestar | 22413 | 22423 | |
| 4510108 | Binatone | 14232 | | |
| 4510110 | Black Star | 14424 | | |
| 4510111 | Blacktron | 21233 | | |
| 4510112 | Blackway | 21233 | | |
| 4510113 | Blaupunkt | 31224 | 14114 | 14131 |
| | | 14222 | 22124 | 24111 |
| 4510114 | Blue Sky | 14233 | 21233 | 24124 |
| | | 24324 | 33241 | |
| 4510115 | Blue Star | 21233 | | |
| 4510118 | Bondstec | 14424 | | |
| 4510119 | Boots | 14232 | | |
| 4510121 | BPL | 21233 | | |
| 4510123 | Brandt | 12342 | 23144 | 14342 |
| | | 22142 | 14121 | 14123 |
| | | 21244 | 22144 | 31431 |
| | | 32412 | | |
| 4510126 | Brinkmann | 23313 | | |
| 4511030 | Brionvega | 12224 | 22333 | |
| 4510128 | Britannia | 14231 | 14232 | |
| 4511444 | Brother | 21131 | | |
| 4510133 | Bruns | 12224 | 21332 | |
| 4510134 | BSR | 13314 | 21323 | |
| 4510138 | BTC | 14233 | | |
| 4510139 | Bush | 14233 | 14334 | 13314 |
| | | 11132 | 11321 | 21233 |
| | | 22314 | 22414 | 22423 |
| | | 21131 | 22332 | 24324 |
| | | 14211 | 32122 | 21323 |
| | | 14232 | 33241 | |
| 4510149 | Capsonic | 21131 | | |
| 4511455 | Carad | 32313 | | |
| 4510150 | Carena | 24124 | | |
| 4510151 | Carrefour | 11321 | 12123 | 11432 |
| 4510153 | Carver | 13333 | | |
| 4510998 | Cascade | 11132 | | |
| 4511231 | CCE | 14232 | | |
| 4510161 | Century | 12224 | 14222 | 14424 |
| | | 14343 | | |

| | | | | |
|---------|----------------|-------|-------|-------|
| 4510162 | CGE | 12133 | 12141 | 14424 |
| | | 13314 | 21221 | 23313 |
| | | 22413 | | |
| 4510167 | Cimline | 11132 | 14334 | 14233 |
| 4510168 | Citizen | 31224 | | |
| 4510169 | City | 11132 | | |
| 4511073 | Clarivox | 23313 | 12123 | |
| 4510172 | Clatronic | 14233 | 21131 | 22413 |
| | | 22414 | 14232 | 12141 |
| | | 14424 | 11132 | 12323 |
| | | 22111 | 32114 | |
| 4510173 | Clayton | 23112 | | |
| 4511308 | CMS hightec | 14232 | | |
| 4510186 | Concorde | 11132 | | |
| 4510187 | Condor | 14231 | 14424 | 21233 |
| | | 22111 | 22413 | 11132 |
| | | 12323 | 23234 | 23313 |
| 4510188 | Conic | 11311 | | |
| 4510191 | Contec | 14231 | 11132 | 13242 |
| | | 11134 | 11321 | |
| 4510192 | Continental | | | |
| | Edison | 12342 | 14342 | 14121 |
| | | 14123 | 23144 | 22142 |
| | | 21244 | 24324 | 31431 |
| 4510194 | Cosmel | 11132 | 22212 | |
| 4510195 | Crezar | 14222 | | |
| 4510196 | Crosley | 12224 | 14424 | 12133 |
| | | 12141 | 13314 | 14222 |
| 4510197 | Crown | 11132 | 22413 | 12141 |
| | | 23322 | 32114 | 23313 |
| | | 14211 | 24324 | 11422 |
| 4510200 | CS Electronics | 14424 | 14231 | 14233 |
| 4510201 | CTC | 14424 | | |
| 4510202 | Curtis Mathes | 12242 | 13212 | |
| 4510203 | Cybertron | 14233 | | |
| 4511309 | Daas | 21332 | | |
| 4510205 | Daewoo | 11132 | 14231 | 22423 |
| | | 14233 | 14232 | 32411 |
| 4510206 | Dainichi | 14233 | 14231 | |
| 4510207 | Dansai | 21131 | 11311 | 11314 |
| | | 14231 | 11132 | |
| 4511160 | Dansette | 23241 | | |
| 4511083 | Dantax | 22413 | | |
| 4511102 | Datsura | 14211 | | |
| 4510210 | Daytron | 11132 | 22423 | |
| 4510216 | de Graaf | 14211 | 11341 | 13314 |
| 4510214 | Decca | 12131 | 31121 | 14232 |
| 4510999 | Denko | 21131 | | |
| 4510217 | Denon | 13212 | | |

| | | | |
|-------------------|-------|-------|-------|
| 4511103 DER | 14112 | 13443 | |
| 4510220 Desmet | 22111 | | |
| 4510232 Dixi | 11132 | 21332 | 14424 |
| | 14232 | | |
| 4510235 Domland | 23133 | | |
| 4510239 DTS | 11132 | | |
| 4510240 Dual | 14232 | 11432 | 22224 |
| | 21114 | 22311 | 23133 |
| | 23144 | 21344 | 13314 |
| 4510243 Dumont | 12224 | 12331 | 12323 |
| | 14222 | 14232 | 12123 |
| | 12131 | | |
| 4511162 Dux | 11141 | | |
| 4510252 Elbe | 23414 | 14343 | 21114 |
| | 22333 | 21321 | 22413 |
| | 13314 | 14233 | 23234 |
| | 32313 | | |
| 4510254 Elcit | 12224 | 14424 | 31121 |
| | 12323 | 13314 | |
| 4510255 Elekta | 21131 | 21233 | |
| 4510259 Elin | 14231 | 12332 | 12331 |
| | 22332 | 24111 | 13314 |
| | 11132 | | |
| 4510260 Elite | 14233 | | |
| 4510261 Elman | 12323 | | |
| 4510263 Elta | 11132 | 21131 | 14231 |
| 4510265 Emerson | 13412 | 14222 | 12224 |
| | 13413 | 14424 | 22414 |
| | 12123 | 21233 | 22111 |
| 4510267 Emperor | 21233 | | |
| 4510271 Erres | 11141 | | |
| 4510273 Etron | 11132 | 13314 | |
| 4511632 Eurofeel | 21131 | | |
| 4510278 Euroman | 14231 | 21131 | 14232 |
| | 23322 | 22413 | |
| 4510280 Europhon | 31121 | 12323 | 14222 |
| | 14232 | 14424 | 13314 |
| 4510291 Expert | 14143 | 23211 | 21114 |
| | 13314 | | |
| 4511001 Exquisit | 14424 | | |
| 4510294 Fenner | 22423 | 11132 | |
| 4510296 Ferguson | 12132 | 21244 | 14111 |
| | 13443 | 22144 | 14343 |
| | 14112 | 12342 | 31411 |
| | 32412 | | |
| 4510299 Fidelity | 14112 | 14231 | 22414 |
| | 13314 | 21131 | |
| 4511164 Filsai | 14232 | | |
| 4510301 Finlandia | 14211 | 22233 | 22332 |

| | | | |
|----------------------------|-------|-------|-------|
| 4510302 Finlux | 12332 | 12331 | 22233 |
| | 14232 | 12131 | 13314 |
| | 12141 | 31121 | 12123 |
| | 12224 | 12323 | 23234 |
| | 32424 | 24341 | 24311 |
| 4510304 Firstline | 21323 | 22112 | 14231 |
| | 22423 | 23112 | 14424 |
| | 11132 | 13314 | 12323 |
| | 14232 | 23234 | 14343 |
| | 12131 | 14334 | 33241 |
| | 14211 | 32411 | |
| 4510305 Fisher | 12331 | 14232 | 11321 |
| | 11432 | 14211 | 22413 |
| | 31334 | 21332 | 11342 |
| | 12224 | 13242 | 22332 |
| | 13314 | 21344 | 12131 |
| 4510307 Flint | 24124 | 12131 | 14233 |
| 4511002 FNR | 12323 | | |
| 4510308 Forgestone | 14112 | | |
| 4510309 Formenti | 12224 | 14222 | 14231 |
| | 22111 | 13314 | 12141 |
| 4510310 Fortress | 12242 | 12224 | |
| 4510313 Fraba | 22413 | | |
| 4511106 Friac | 11132 | 12323 | 23322 |
| 4510319 Frontech | 14424 | 21131 | 24111 |
| | 14232 | 11132 | |
| 4510322 Fujitsu | 14143 | 12131 | 12323 |
| | 14232 | 13314 | 11132 |
| | 22311 | | |
| 4511457 Fujitsu General | 11132 | 14232 | |
| 4510323 Funai | 21131 | 21323 | |
| 4510326 Galaxi | 12323 | | |
| 4510327 Galaxis | 22413 | 23313 | 12323 |
| 4510331 GBC | 14222 | 13314 | 11132 |
| | 22423 | 14233 | |
| 4510333 GE | 31411 | 12342 | 13413 |
| | 21233 | 21244 | 22144 |
| | 22224 | | |
| 4511003 Geant Casino | 13314 | 23211 | |
| 4510335 GEC | 11334 | 12131 | 13314 |
| | 22332 | 31121 | 14232 |
| 4510336 Geloso | 14222 | 14424 | 11132 |
| | 13314 | 22423 | |
| 4510337 General | 12342 | 21244 | 24224 |
| 4510338 General Technic | 11132 | | |
| 4510339 Genexxa | 14233 | 23241 | |
| 4510341 Germanvox | 14222 | | |

4510345 Goldhand 14231
 4510346 Goldline 22212
 4510347 GoldStar 22413 11311 21313
 11132 22432 14232
 14424 14231 13314
 13413 22332 11341
 4510349 Goodmans 11321 12131 11132
 21131 31121 21313
 22423 24324 22341
 22414 31341 22224
 14334 11314 24311
 31411 11311 14232
 32411 22144
 4510350 Gorenje 22413 23322
 4510351 GPM 14233
 4511248 Gradiente 11422 13333
 4510352 Graetz 22332 22414
 4510353 Granada 23211 14313 11141
 11342 12131 13213
 12341 14211 14232
 12141 11321 22214
 31121 24232 22144
 31411
 4510354 Grandin 21233 14233 23211
 11132 22111 13314
 24124 32114 32313
 4511107 Gronic 12323 14232
 4510355 Grundig 31224 14114 24324
 12123 12141 14342
 31341
 4510359 Halifax2 1131 14231 14232
 4510360 Hampton 14231 14232
 4511108 Hanimex 21323
 4510362 Hanseatic 21321 21233 13314
 22332 23133 14222
 22111 11432 23341
 22413 11132 21323
 14232 21221 12224
 4510363 Hantarex 11132 14222 21331
 12323
 4511084 Harwood 11132 23241 11311
 4510370 HCM 21131 11132 21233
 23241 14232 14233
 23313
 4510372 Hema 14232 11132
 4510374 Hifivox 12342 14121 23144
 31431
 4511682 Highline 21131
 4511110 Hikona 14233

4510377 Hinari 14211 11321 14233
 11132 13314 22341
 22314 23434 24324
 14334 21323
 4510380 Hisawa 21233 14233 23211
 24124
 4511004 Hit 12224
 4510381 Hitachi 14312 11321 11341
 11334 24232 13314
 22224 14121 14123
 14232 11311 21221
 31121 12131 13212
 12332 13413 31341
 4511684 Hitachi Fujian 12341
 4511170 Hitsu 11132 24124 14233
 4511085 Hornyphone 11141
 4510384 Hoshai 14233 24124
 4511086 Huanyu 22423 14231
 4510388 Hygashi 14232 14231
 510389 Hyper 11132 14231 14232
 14424
 4510390 Hypersonic 22332
 4510391 Hypson 21131 14232 21233
 24124 23211 14343
 4510393 ICE 21131 14232 22414
 14233 14231 11132
 4511006 Ices 14233 14231
 4510395 Imperial 14424 22413 23313
 13314 12133 12141
 14121
 4510396 Indesit 14342 14222
 4511343 Ingelen 24324 32313
 4510398 Ingersoll 11132
 4510401 Inno Hit 11132 12131 14233
 21313 14232 12141
 31121 14424
 4511312 Interactive 23234
 4510404 Interbuy 11132 21131 14424
 4510405 Interfunk 11141 12224 21214
 22124 13314 22332
 22413 12342 31431
 4510408 Intervision 21233 14232 24124
 22414 22432 24111
 22413 23133 24324
 14233 12323 13314
 21131 14424
 4510410 Irradio 11132 14233 14424
 21313 12141
 4510412 Isukai 14233 21233

4510413 ITC 14232
 4510414 ITS 22414 14233 21233
 21131 14231
 4510415 ITT 13314 24311 22332
 24232 14112 22233
 22214 14211
 4510416 ITT Nokia 22332 13314 24232
 24311 22233 14211
 22214 32243 32313
 32424
 4510417 ITV 21131 14424
 4511314 Jean 11321
 4510420 JEC 11314
 4510425 JVC 11422 13443 11321
 14111 14112 22414
 14233 32243
 4510427 Kaisui 14233 21233 14231
 24124 14232 11132
 4510428 Kamp 14231
 4510429 Kapsch 14143 13314 22332
 21114 12331
 4510430 Karcher 23322 22413 21233
 12323 32313 21131
 4511283 Kawasho 14231
 4511177 KB Aristocrat 13314
 4510432 Kendo 22333 14334 14424
 12323 23341 22413
 23234 32313 22432
 4510433 Kennedy 14143 14222 13314
 23414
 4510437 Kingsley 14231
 4510438 Kneissel 23414 21114 21321
 22413 14343 23234
 32313
 4510441 Kolster 12323
 4510442 Konka 14233 22414
 4511315 Kontakt 24324
 4510444 Korting 12224 23322 22413
 22111
 4511181 Kotron 23241 21131
 4511350 Kraking 14343
 4511287 KTV 14232
 4511117 Kyoshu 21131 23241 11311
 23313
 4510451 Kyoto 23112 11311 13314
 4511451 Lemair 23234
 4510454 Lenco 11132 12331 13314
 4510456 Lenoir 11132
 4510458 Lesa 14424

4510461 Leyco 21131 12131 21323
 32114
 4511072 LG 22413 21313 11311
 11132 22432 14232
 14424 14231 13314
 13413 22332
 4511008 Liesenkotter 22124 11141
 4510463 Lifetec 11132 21131 22423
 14233 33241
 4511240 Lloyd's 11132
 4510471 Lloydtron 11311
 4510472 Loewe 12224 21321 22413
 4510474 Logik 11134 14112 22414
 4511456 Logix 33241
 4510478 Luma 14143 22333 13314
 21114 23234 22423
 11132
 4511009 Lumatron 14143 22333 13314
 21114 22332 14232
 21131 12132
 4510481 Lux May 11132
 4510485 Luxor 14342 21313 24311
 24341 22332 14211
 13314 22233 24232
 4511241 LXI 13413
 4510490 Magnadyne 12224 14424 31121
 12323 13314
 4510491 Magnafon 31121 14222 12141
 12323 14231
 4510492 Magnavox 11321
 4511071 Magnum 33131
 4510495 Mandor 21131
 4510496 Manesth 14334 14232 21131
 22111 21221 11314
 21323
 4510497 Manhattan 33241
 4510503 Marelli 12224
 4510504 Mark 14232 14231 22423
 11132
 4511342 Masuda 14233 11132 22414
 4510508 Matsui 14334 13412 11132
 22314 11134 12131
 11321 31341 24324
 14232 21323 22414
 23412 23434 32114
 24124 31121 11314
 13314 14211 11342
 14114 22144
 4510513 McMichael 11334

| | | | | |
|---------|-------------|-------|-------|-------|
| 4510517 | Mediator | 31341 | 11141 | |
| 4510518 | Medion | 33241 | | |
| 4511121 | Megas | 32313 | | |
| 4511291 | Megatron | 13212 | 13413 | |
| 4510487 | Melectronic | 22233 | 12342 | 22224 |
| | | 11432 | 14424 | 12332 |
| | | 12331 | 22423 | 11132 |
| | | 14232 | 24311 | 24341 |
| | | 14231 | 23234 | |
| 4511010 | Melvox | 23211 | | |
| 4510520 | Memorex | 11132 | 13413 | 14433 |
| 4510521 | Memphis | 22212 | 12131 | 11132 |
| | | 23112 | | |
| 4510522 | Mercury | 11132 | | |
| 4510525 | Metz | 12224 | 14114 | 31224 |
| | | 23444 | 14344 | 14222 |
| | | 21214 | 22344 | 23121 |
| 4510526 | MGA | 13413 | | |
| 4511317 | Micromaxx | 33241 | | |
| 4511295 | Midland | 11311 | | |
| 4510531 | Minerva | 24324 | 31224 | 14114 |
| | | 12123 | 12141 | 14342 |
| 4510532 | Minoka | 23241 | | |
| 4510535 | Mitsubishi | 12341 | 12242 | 13413 |
| | | 12224 | 11321 | 14342 |
| | | 22323 | 14112 | |
| 4510538 | Mivar | 21321 | 21313 | 21314 |
| | | 22413 | 12141 | 14231 |
| 4511186 | Monaco | 11132 | | |
| 4510541 | Motion | 12141 | | |
| 4511297 | Motorola | 12242 | | |
| 4510543 | MTC | 22413 | 14231 | |
| 4511786 | MTEC | 11311 | | |
| 4511187 | Multi- | | | |
| | broadcast | 14112 | | |
| 4510545 | Multi- | | | |
| | standard | 12323 | | |
| 4511452 | Multitec | 33241 | | |
| 4510547 | Multitech | 14232 | 11132 | 14231 |
| | | 14424 | 12323 | 22413 |
| 4510551 | Murphy | 12331 | 14231 | 12131 |
| | | 13314 | | |
| 4511791 | Musikland | 14233 | | |
| 4510553 | NAD | 22332 | 13413 | |
| 4511125 | Nakimura | 22423 | | |
| 4512099 | NAT | 14313 | 22221 | |
| 4510562 | National | 14342 | 14313 | 22221 |

| | | | | |
|---------|------------|-------|-------|-------|
| 4510564 | NEC | 13333 | 11321 | 22111 |
| | | 24124 | 11132 | 22423 |
| | | 14232 | 11134 | |
| 4510565 | Neckermann | 22413 | 24432 | 14131 |
| | | 31341 | 13314 | 22124 |
| | | 23313 | 12224 | 14222 |
| | | 14424 | 14232 | 23234 |
| 4510566 | NEI | 22212 | 22414 | |
| 4510567 | Nesco | 14424 | | |
| 4510568 | Network | 11311 | 22212 | |
| 4511012 | Neufunk | 11132 | 31341 | 32313 |
| 4510572 | New Tech | 11132 | 31341 | 22224 |
| | | 14232 | 24111 | |
| 4510571 | New World | 14233 | | |
| 4510574 | Nicamagic | 14231 | | |
| 4510576 | Nikkai | 12131 | 14233 | 14232 |
| | | 21131 | 11311 | 11314 |
| | | 22212 | 14231 | 11132 |
| | | 11321 | | |
| 4510577 | Nikko | 13413 | | |
| 4511249 | Noblex | 21131 | | |
| 4510578 | Nobliko | 12323 | 12141 | 12123 |
| | | 14231 | | |
| 4510579 | Nogamatic | 23144 | 12342 | 14121 |
| | | 31431 | | |
| 4510580 | Nokia | 22332 | 13314 | 24311 |
| | | 24341 | 24232 | 22214 |
| | | 14211 | 22423 | 32424 |
| | | 32243 | 22233 | |
| 4510582 | Nordmende | 12342 | 21244 | 23144 |
| | | 14121 | 22224 | 14123 |
| | | 14222 | 31431 | 31411 |
| | | 14114 | 22144 | |
| 4511013 | Novatronic | 12332 | 22423 | |
| 4510588 | Oceanic | 13314 | 23211 | 22332 |
| | | 21323 | 14211 | |
| 4512100 | Odeon | 21131 | | |
| 4510590 | Okano | 22413 | 21131 | 12131 |
| 4511014 | Omega | 21131 | | |
| 4510595 | Onwa | 22414 | 14233 | 23412 |
| | | 32122 | | |
| 4510598 | Optimus | 14433 | | |
| 4511299 | Optonica | 12242 | | |
| 4510602 | Orion | 14334 | 21323 | 13412 |
| | | 22111 | 22314 | 11134 |
| | | 11132 | 22112 | 22341 |
| | | 21331 | 12323 | 23434 |
| | | 31341 | 21131 | 23241 |
| 4511015 | Orline | 14233 | | |

| | | | | | | | |
|---------|--------------|-------|-------|-------|--|--|--|
| 4511192 | Ormond | 23112 | 33241 | | | | |
| 4510605 | Osaki | 12131 | 14233 | 11311 | | | |
| | | 14232 | 21131 | 21221 | | | |
| | | 23241 | 22423 | | | | |
| 4510607 | Oso | 14233 | | | | | |
| 4510608 | Osume | 13242 | 12131 | 11321 | | | |
| | | 11311 | 14233 | | | | |
| 4510610 | Otto Versand | 24432 | 11321 | 12242 | | | |
| | | 31341 | 31224 | 14114 | | | |
| | | 22332 | 14334 | 12342 | | | |
| | | 14222 | 21323 | 14313 | | | |
| | | 14424 | 21344 | 22111 | | | |
| | | 14232 | | | | | |
| 4510614 | Pael | 14231 | | | | | |
| 4510616 | Palladium | 22413 | 24432 | 14131 | | | |
| | | 23313 | 31341 | 14424 | | | |
| | | 22124 | 12224 | 13314 | | | |
| | | 14222 | 14232 | 23234 | | | |
| 4511129 | Palsonic | 21131 | 23241 | 14232 | | | |
| | | 22432 | | | | | |
| 4510619 | Panama | 11132 | 14232 | 21131 | | | |
| | | 14231 | 14424 | | | | |
| 4510620 | Panasonic | 14313 | 14433 | 21213 | | | |
| | | 14222 | 22332 | 14342 | | | |
| | | 22344 | 22221 | 31121 | | | |
| | | 13314 | | | | | |
| 4510622 | Panavision | 23234 | | | | | |
| 4510628 | Pathe Cinema | 13314 | 14343 | 14231 | | | |
| | | 23211 | 22111 | 21321 | | | |
| 4510629 | Pathe | | | | | | |
| | Marconi | 14222 | 12342 | 14121 | | | |
| | | 14123 | 22142 | 23144 | | | |
| | | 14342 | 31431 | | | | |
| 4510631 | Pausa | 11132 | | | | | |
| 4510632 | Perdio | 12131 | 22111 | 13314 | | | |
| 4511460 | Pershin | 23211 | | | | | |
| 4511131 | Phase | 11311 | | | | | |
| 4510634 | Philco | 12224 | 12133 | 23313 | | | |
| | | 12141 | 14222 | 14424 | | | |
| | | 13314 | 22413 | 13212 | | | |
| 4510635 | Philharmonic | 14232 | | | | | |
| 4510636 | Philips | 31341 | 11141 | 11334 | | | |
| | | 12224 | 14112 | 22224 | | | |
| | | 22423 | | | | | |
| 4510639 | Phoenix | 12224 | 22111 | 22413 | | | |
| | | 23112 | 14231 | 13314 | | | |
| | | 12131 | | | | | |
| 4510640 | Phonola | 31341 | 11141 | 12224 | | | |
| | | 14112 | 14231 | | | | |
| 4510642 | Pioneer | 23341 | 22413 | 22224 | | | |
| | | 22332 | 12342 | | | | |
| 4511132 | Pionier | 22413 | | | | | |
| 4510644 | Plantron | 21131 | 11132 | | | | |
| 4510666 | Playsonic | 14232 | | | | | |
| 4510645 | Policom | 31431 | | | | | |
| 4510647 | Poppy | 11132 | | | | | |
| 4510648 | Portland | 22423 | | | | | |
| 4511846 | Powerpoint | 24324 | | | | | |
| 4510650 | Prandoni- | | | | | | |
| | Prince | 14424 | 31121 | 22332 | | | |
| | | 14222 | 12141 | | | | |
| 4510651 | Precision | 14232 | | | | | |
| 4510655 | Prima | 11311 | 11132 | 21131 | | | |
| 4510656 | Prinz | 12131 | 11432 | | | | |
| 4510658 | Profex | 11132 | 13314 | | | | |
| 4510660 | Profitronic | 12323 | | | | | |
| 4510662 | Proline | 22112 | 12131 | 11141 | | | |
| | | 32412 | | | | | |
| 4510664 | Prosonic | 14231 | 22413 | 22423 | | | |
| | | 32114 | 22414 | 33241 | | | |
| 4510665 | Protech | 14232 | 11132 | 14424 | | | |
| | | 12323 | 21131 | 23313 | | | |
| | | 22212 | 33241 | | | | |
| 4510667 | Proton | 13413 | | | | | |
| 4510672 | Pye | 22423 | 31341 | 11141 | | | |
| | | 12224 | | | | | |
| 4510673 | Pymi | 11132 | | | | | |
| 4511067 | Quadra | | | | | | |
| | Vision | 23211 | | | | | |
| 4510677 | Quasar | 14424 | 14433 | | | | |
| 4510678 | Quelle | 11134 | 12342 | 31224 | | | |
| | | 22332 | 11311 | 11321 | | | |
| | | 14232 | 14424 | 12133 | | | |
| | | 22124 | 12123 | 12331 | | | |
| | | 12332 | 13242 | 14114 | | | |
| | | 14131 | 14222 | 21131 | | | |
| | | 21313 | 33241 | | | | |
| 4510679 | Questa | 11321 | 11311 | | | | |
| 4510682 | Radialva | 12342 | 14233 | 13314 | | | |
| 4510684 | Radiola | 31341 | 11141 | | | | |
| 4510685 | Radiomarelli | 12224 | 31121 | 14424 | | | |
| 4511088 | RadioShack | 11311 | 13413 | | | | |
| 4510686 | Radiotone | 11132 | 23341 | 22413 | | | |
| | | 32114 | 23313 | 21131 | | | |
| | | 23241 | 33131 | | | | |
| 4510688 | Rafena | 21332 | | | | | |
| 4510690 | Rank | 12123 | | | | | |

| | | | | |
|---------|------------------|-------|-------|-------|
| 4510691 | RCA | 31411 | 32412 | 22144 |
| | | 12242 | | |
| 4510693 | Realistic | 11311 | 13413 | |
| 4510695 | Rediffusion | 22332 | 11321 | |
| 4510698 | Revox | 22413 | | |
| 4510699 | Rex | 14143 | 23234 | 14424 |
| | | 13314 | 21114 | |
| 4510700 | RFT | 21332 | 12224 | 21321 |
| | | 22413 | 23341 | 12131 |
| | | 21131 | | |
| 4511338 | Rhapsody | 14231 | | |
| 4510701 | Roadstar | 11132 | 21131 | 14233 |
| | | 23313 | | |
| 4510703 | Robotron | 12224 | | |
| 4511197 | Roxy | 24111 | | |
| 4510711 | Royal Lux | 23322 | 22413 | 23241 |
| 4510715 | Saba | 21244 | 14222 | 12224 |
| | | 23144 | 13314 | 12342 |
| | | 31121 | 22224 | 22332 |
| | | 24413 | 14121 | 14123 |
| | | 22144 | 31431 | 32412 |
| 4510718 | Sagem | 24124 | 32313 | 21233 |
| 4510720 | Saisho | 14334 | 31121 | 13412 |
| | | 11132 | 11134 | 14232 |
| | | 13314 | 21131 | |
| 4510722 | Salora | 21313 | 13314 | 22332 |
| | | 22341 | 31121 | 22214 |
| 4510723 | Sambers | 14222 | 31121 | 12141 |
| | | 12323 | | |
| 4511340 | Sampo | 11311 | | |
| 4510724 | Samsung | 31341 | 32134 | 11132 |
| | | 14232 | 13413 | 24111 |
| | | 22413 | 21131 | 12233 |
| | | 14231 | 21313 | 11311 |
| | | 12131 | 14211 | 33121 |
| 4510726 | Sandra | 14231 | 14232 | |
| 4511139 | Sanela | 14343 | | |
| 4510727 | Sansui | 22414 | | |
| 4512102 | Santon | 11132 | | |
| 4510729 | Sanyo | 14211 | 13242 | 21321 |
| | | 11321 | 11134 | 22413 |
| | | 22214 | 12131 | 14231 |
| | | 14232 | 12331 | 14222 |
| | | 11342 | 13213 | 11132 |
| | | 13314 | 31334 | |
| 4510743 | SBR | 31341 | 11141 | |
| 4510745 | Schaub Lorenz | 32243 | | |

| | | | | |
|---------|--------------|-------|-------|-------|
| 4510746 | Schneider | 31341 | 11141 | 11432 |
| | | 21344 | 23133 | 22311 |
| | | 21114 | 22224 | 14232 |
| | | 14424 | 22414 | 14233 |
| | | 22332 | 13314 | 33241 |
| | | 33131 | | |
| 4510750 | Scott | 13413 | | |
| 4511324 | Sears | 13334 | 13413 | |
| 4510753 | SEG | 21332 | 14232 | 21131 |
| | | 11132 | 14424 | 11321 |
| | | 12323 | 22333 | 13314 |
| | | 14231 | 33241 | 24324 |
| 4510754 | SEI | 12224 | 12323 | 13314 |
| | | 31121 | 14222 | 21323 |
| | | 21331 | 14143 | |
| 4510756 | Seleco | 14143 | 21114 | 22333 |
| | | 13314 | 23234 | |
| 4510757 | Sencora | 11132 | | |
| 4510759 | Sentra | 21221 | 11314 | 14233 |
| | | 11132 | | |
| 4511265 | Serie Dorada | 13413 | | |
| 4511019 | Serino | 24124 | 32313 | |
| 4510762 | Sharp | 12242 | 13242 | 11321 |
| | | 21323 | 11422 | 14112 |
| 4510769 | Shorai | 21323 | | |
| 4510772 | Siarem | 13314 | 12224 | 12323 |
| | | 14222 | | |
| 4510773 | Siemens | 31224 | 14131 | 14114 |
| | | 14222 | 22124 | 13242 |
| | | 11311 | 13213 | |
| 4511916 | Siera | 31341 | 11141 | |
| 4510776 | Siesta | 22413 | | |
| 4510780 | Silva | 14231 | | |
| 4510781 | Silver | 11321 | 22332 | |
| 4510782 | Singer | 12224 | 12323 | 14424 |
| | | 23211 | 23414 | 11132 |
| 4510783 | Sinudyne | 13412 | 12224 | 14334 |
| | | 12323 | 14222 | 21323 |
| | | 21331 | 13314 | 22332 |
| | | 31121 | 14143 | |
| 4510795 | Sogera | 22111 | | |
| 4510797 | Solavox | 11311 | 22332 | 12131 |
| | | 13314 | | |
| 4511927 | Sonawa | 14233 | | |
| 4510801 | Sonitron | 14211 | 22413 | 22214 |
| | | 14232 | | |
| 4510802 | Sonoko | 11132 | 21131 | 21233 |
| | | 14232 | | |

| | | | | |
|---------|-------------------|-------|-------|-------|
| 4510803 | Sonolor | 14211 | 13314 | 23211 |
| | | 24432 | 22332 | |
| 4510804 | Sontec | 22413 | 21323 | |
| 4510805 | Sony | 24432 | 11134 | 11321 |
| | | 12323 | 12133 | |
| 4510806 | Sound & Vision | 12323 | 14233 | 22423 |
| 4510807 | Soundesign | 13413 | | |
| 4510809 | Soundwave | 22111 | 23313 | 11311 |
| 4511143 | Ssanyong | 11311 | 11132 | |
| 4510812 | Stag | 11311 | | |
| 4510813 | Standard | 14233 | 11132 | 14232 |
| | | 22111 | 22423 | |
| 4510817 | Starlite | 11132 | 13314 | 21131 |
| 4510822 | Stenway | 21233 | 14233 | |
| 4510823 | Stern | 14143 | 21114 | 13314 |
| 4511020 | Strato | 21131 | 11132 | |
| 4510828 | Sunkai | 21323 | 22314 | 22112 |
| | | 24124 | 14233 | 14334 |
| | | 24324 | | |
| 4510831 | Sunstar | 22414 | 11132 | 32114 |
| 4510833 | Sunwood | 11132 | | |
| 4510835 | Superla | 31121 | 14231 | |
| 4510838 | SuperTech | 11132 | 14231 | 31341 |
| | | 14233 | | |
| 4510839 | Supra | 22423 | 11132 | |
| 4510840 | Susumu | 22144 | | |
| 4510841 | Sutron | 11132 | | |
| 4511319 | Swissline | 14424 | | |
| 4510842 | Sydney | 14231 | 14232 | |
| 4510843 | Symphonic | 13334 | | |
| 4511021 | Sytong | 14231 | | |
| 4510849 | Tandberg | 22344 | 23234 | 12342 |
| | | 22212 | 14121 | 22333 |
| | | 22332 | | |
| 4510850 | Tandy | 14233 | 12131 | 14232 |
| | | 14424 | 21221 | 12242 |
| 4510852 | Tashiko | 11321 | 11334 | 14232 |
| | | 13213 | 13333 | 11311 |
| | | 14231 | 13314 | |
| 4510853 | Tatung | 12131 | 31121 | 14232 |
| | | 11134 | | |
| 4510854 | Teac | 24124 | 21131 | 11132 |
| | | 13334 | 23241 | 13413 |
| 4510855 | TEC | 14232 | 21221 | 11132 |
| | | 14424 | 24224 | 22144 |
| | | 22212 | 21114 | |
| 4511320 | Tech Line | 33241 | | |
| 4512107 | Techica | 14233 | | |

| | | | | |
|---------|-------------|-------|-------|-------|
| 4510856 | Technema | 22111 | | |
| 4510857 | Technics | 14433 | | |
| 4511453 | Tedalex | 14232 | | |
| 4511978 | Teiron | 11132 | | |
| 4510866 | Teleavia | 12342 | 21244 | 14121 |
| | | 23144 | 22142 | 31431 |
| 4510870 | Telecor | 13314 | 14233 | 14232 |
| | | 21114 | 23133 | |
| 4510872 | Telefunken | 12342 | 24413 | 24224 |
| | | 23144 | 21244 | 12133 |
| | | 12322 | 22144 | 21123 |
| | | 12132 | 22224 | 14121 |
| | | 31431 | 32412 | |
| 4510874 | Telegazi | 13314 | 21114 | 14233 |
| | | 21131 | | |
| 4510878 | Telemeister | 22111 | | |
| 4510884 | Teletech | 11132 | 14424 | 22212 |
| | | 33241 | | |
| 4510885 | Teleton | 14232 | 21214 | 14143 |
| | | 13314 | 21114 | 11321 |
| 4510887 | Televideon | 22111 | 13314 | 14231 |
| 4511022 | Televiso | 23211 | | |
| 4510889 | Temco | 21323 | | |
| 4511334 | Tempest | 11132 | | |
| 4510891 | Tensai | 12331 | 14233 | 14232 |
| | | 21323 | 22111 | 11132 |
| | | 12332 | 22423 | 22414 |
| | | 22432 | 14424 | |
| 4511023 | Tenson | 22111 | 11132 | |
| 4511461 | Tevion | 33131 | 33241 | |
| 4510892 | Textet | 14232 | 22423 | 11132 |
| 4510895 | Thomson | 21244 | 23144 | 12342 |
| | | 22142 | 24224 | 22144 |
| | | 14121 | 14123 | 14342 |
| | | 22224 | 31431 | 31411 |
| | | 32412 | | |
| 4510897 | Thorn | 14112 | 12132 | 13443 |
| | | 14343 | 14111 | 12133 |
| | | 12331 | 22144 | 22423 |
| | | 11314 | | |
| 4511329 | TMK | 13413 | | |
| 4510900 | Tokai | 12131 | 24111 | 22212 |
| | | 13314 | 14232 | 22423 |
| | | 11132 | | |
| 4510901 | Tokyo | 14231 | 11314 | 24111 |
| 4510902 | Tomashi | 21233 | 14233 | |
| 4510905 | Toshiba | 11314 | 24441 | 14414 |
| | | 11321 | 12123 | 12323 |
| | | 14232 | | |

| | | | | |
|---------|--------------|-------|-------|-------|
| 4510906 | Towada | 12323 | 14232 | |
| 4512109 | Toyoda | 11132 | | |
| 4512110 | Trakton | 21131 | | |
| 4510908 | Trans | | | |
| | Continens | 14232 | | |
| 4512111 | Transonic | 24124 | 32134 | |
| 4512008 | Transtec | 14231 | | |
| 4510913 | Trident | 31121 | 14232 | |
| 4510915 | Tristar | 14233 | 14112 | |
| 4510916 | Triumph | 13412 | 31121 | 22233 |
| | | 31341 | 14414 | |
| 4510919 | Uher | 12141 | 11432 | 14143 |
| | | 22111 | 21344 | 22423 |
| | | 23313 | 22413 | 21114 |
| 4511148 | Ultra | 14111 | | |
| 4510920 | Ultravox | 12224 | 12323 | 22423 |
| | | 14424 | 14231 | 13314 |
| | | 14222 | | |
| 4511024 | Unic Line | 24232 | | |
| 4510929 | Universum | | | |
| 4510930 | Univox | 22212 | 12224 | 13314 |
| | | 14343 | | |
| 4510937 | Vestel | 13314 | 14232 | |
| 4510938 | Vexa | 11132 | | |
| 4510939 | Victor | 11422 | | |
| 4510942 | Videologique | 14231 | 14233 | 14232 |
| 4510944 | Videotechnic | 14231 | 22111 | 14232 |
| | | 22423 | | |
| 4511025 | Videoton | 13314 | | |
| 4511322 | Vidikron | 12323 | | |
| 4511330 | Vidtech | 11321 | 13413 | |
| 4510947 | Viper | 22212 | | |
| 4510949 | Visiola | 14231 | | |
| 4510950 | Vision | 22111 | | |
| 4510954 | Vistar | 21221 | 14143 | 22332 |
| 4510957 | Voxson | 12224 | 12141 | 23313 |
| 4510958 | Waltham | 14232 | 21221 | 23313 |
| | | 21244 | 23112 | |
| 4510959 | Watson | 22111 | 13314 | 14233 |
| | | 14222 | 32114 | 23133 |
| | | 11132 | 33241 | |
| 4510960 | Watt Radio | 14222 | 12323 | 13314 |
| | | 14231 | | |
| 4510961 | Wega | 14222 | 11321 | 12224 |
| 4511026 | Wegavox | 11132 | | |
| 4510963 | Weltblick | 22111 | | |
| 4510967 | White | | | |
| | Westinghouse | 22111 | 14231 | 22212 |
| 4511264 | Winco | 23241 | | |

| | | | | |
|---------|----------|-------|-------|-------|
| 4511027 | Windstar | 21233 | | |
| 4510979 | Yamishi | 21233 | 24124 | 14233 |
| | | 14232 | | |
| 4510981 | Yoko | 14232 | 14233 | 21131 |
| | | 11132 | 23322 | 22413 |
| | | 22214 | 14231 | 14424 |
| 4510983 | Yorx | 14233 | | |
| 4510984 | Zanussi | 14143 | 14232 | |
| 4511219 | Zenor | 22214 | | |

* Excludes a few models in the LS, LX and MX series.

* Ausschließlich einige Modelle der LX, LS und MX Serie.

* Exclut quelques modèles de la serie LX, LS et MX.

* Excluye unos pocos modelos de la serie LX, LS y MX modelos.

* Exclui alguns modelos da série LX, LS y MX.

* Sono esclusi modelli della serie LX, LS e MX.

* Exclusief een paar modellen in de LX, MX en LS serie.

GARANTIA E UNIVERSAL ELECTRONICS/ONE FOR ALL garantiza al comprador que este producto estará libre de defectos materiales o de fabricación, al menos durante 1 año desde la fecha actual de su adquisición, y en caso de que se utilice de un modo normal y correcto. Este producto será sustituido de forma gratuita siempre y cuando se pueda demostrar que es defectuoso y que esto haya sucedido dentro del año de garantía, corriendo a cuenta del comprador los gastos de su devolución. Esta garantía no cubre embalajes, maletines, envoltorios, pilas, armarios u otros objetos utilizados en conexión con este producto. Se excluyen otras obligaciones, cualesquiera que sean, además de las mencionadas más arriba. Por favor, asegúrese de tener su recibo o ticket de compra para que podamos establecer su legitimidad a este servicio.


GARANTIA P A UNIVERSAL ELECTRONICS INC./ONE FOR ALL garante ao cliente a a protecção deste produto no que respeita a defeitos de fabrico de material, dentro de um período de uso correcto e normal de 1 ano a partir da data da compra do mesmo produto. Este produto será substituído sem qualquer encargo no caso de ter sido comprovada qualquer avaria dentro do período de 1 ano e após o seu retorno (custos de envio da responsabilidade do consumidor) dentro deste mesmo prazo.


Esta garantia não cobre embalagens de cartão, caixas, pilhas, ou outros itens usados em conjunto com este produto. Qualquer outra obrigação para além daquela acima descrita não será tida em consideração. Por favor tome nota que se lhe á pedido o comprovativo de compra, de forma a que possamos confirmar a sua legitimidade para este serviço.


GARANTIA I La compagnia Universal Electronics inc./ ONE FOR ALL garantisce l' acquisto originale che questo prodotto sarà esente da difetti di mano d' opera dietro l' utilizzo proprio di 1 anno. Questo prodotto sarà sostituito gratuitamente se verrà provato che è difettoso entro l' anno di garanzia e ovviamente accompagnato dalla prova dello scontrino che assicura la data d' acquisto. La garanzia non copre la scatola, l' imballaggio, le pile o ogni altro articolo che abbia a che vedere con il prodotto. Non ci sono ulteriori obblighi di qui sopra elencati. Vi chiediamo cortesemente di conservare lo scontrino affinché noi possiamo stabilire la vostra credibilità, per richiedere un nostro servizio.

GARANTIE NL UNIVERSAL ELECTRONICS INC./ONE FOR ALL garanteert de klant, dat dit produkt bij normaal en correct gebruik vrij van materiële of technische defecten zal blijven voor een periode van één jaar, gerekend vanaf de datum van aankoop. Als aangetoond kan worden dat binnen de periode van één jaar een defect is ontstaan, zal dit produkt gratis vervangen worden als het genoemde produkt op kosten van de klant binnen de garantieperiode teruggestuurd wordt. Deze garantie is niet van toepassing voor verpakkingen, dozen voor transport, batterijen, gebroken of beschadigde kasten of enig ander object, dat in verbinding met dit produkt gebruikt wordt. Elke andere verplichting dan het bovengenoemde wordt uitgesloten. Wij maken u erop attent dat wij uw bewijs van aankoop nodig hebben om vast te stellen of u voor deze garantieservice in aanmerking komt.

Universal Electronics BV
Europe & International
P.O. Box 3332
7500 DH, Enschede
The Netherlands

Guarantee  UNIVERSAL ELECTRONICS INC./ONE FOR ALL warrants to the original purchaser that this product will be free from defects in materials and workmanship under normal and correct use for a period of one (1) year from the date of original purchase. This product will be replaced free of charge if it has been proven to be defective within the one (1) year warranty period. This warranty does not cover cartons, carrying cases, batteries, broken or marred cabinets or any other item used in connection with the product. Any further obligation than listed above is excluded. Please notice that we need your purchase receipt so that we may establish your eligibility for service.

GARANTIE  UNIVERSAL ELECTRONICS INC./ONE FOR ALL garantiert dem Kunden, dass dieses Produkt bei sachgemäsem und ordentlichem Gebrauch für die Dauer eines Jahres vollkommen frei von Defekten materieller oder technischer Art bleiben wird, gerechnet ab Kaufdatum. Falls erwiesen werden kann, dass innerhalb der Garantiezeit eines Jahres ein Defekt entstanden ist, wird dieses Produkt gebührenfrei ersetzt, falls besagtes Produkt innerhalb der Garantiezeit auf Kosten des Kunden zurückgeschickt wird. Diese Garantie erstreckt sich nicht auf Verpackungen, Transportbehältnisse, Batterien, zerbrochene oder beschädigte Gehäuse oder andere Objekte, die in Verbindung mit dem Produkt verwendet werden. Jegliche weitere Verpflichtung als die oben aufgeführte wird ausgeschlossen. Bitte beachten Sie, dass wir Ihren Kaufbeleg brauchen um fest zu stellen ob Sie Anspruch auf unseren Garantieservice erheben können.

GARANTIE  UNIVERSAL ELECTRONICS INC./ONE FOR ALL garantit à l'acheteur d'origine que ce produit est certifié franc de défauts matériels et de main d'œuvre durant une période d'un (1) an à partir de la date d'achat original à la condition exclusive que ce produit ait été utilisé de manière normale et correcte. Ce produit sera remplacé gratuitement s'il s'est révélé défectueux pendant ladite période d'un (1) an, produit devant être retourné à la charge du client durant la période de garantie. Cette garantie ne saurait couvrir d'aucune manière que ce soit emballages en carton, coffrets portables quelconques, piles, corps d'appareil cassé ou endommagé ou tout autre article utilisé en combinaison avec ce produit. Nous nous réservons le droit de rejeter tout autre engagement que ceux cités plus haut. Veuillez noter que la preuve d'achat est obligatoire afin de pouvoir déterminer votre droit à ce service.

Universal Electronics BV
Europe & International
P.O. Box 3332
7500 DH, Enschede
The Netherlands



Printed on Recycled Paper

DD-0402