

ONE
FOR ALL®



URC-7010
701925

ONE FOR ALL 1

UK Universal remote

D

F

E

P

I

NL



PICTURE OF THE ONE FOR ALL 1 REMOTE	3
INSTALLING THE BATTERIES	4
FEATURES AND FUNCTIONS	4
INSTALLATION	
Setting up your television	6
The Search Method	7
QUICK CODE REFERENCE	8
ADVANCED FEATURES	
Colour and Brightness	9
Auto Scan	9
Device Sleptimer	10
ONE FOR ALL Sleptimer	10
ONE FOR ALL Recall	11
TROUBLE-SHOOTING	11
Customer Service	12
SETUP CODES	
Televisions	73

About Your ONE FOR ALL 1

Congratulations on your purchase of the ONE FOR ALL 1 Universal Remote Control. By choosing the ONE FOR ALL 1 remote you have opted for the User Friendly remote control solution. Made according to the highest quality, the ONE FOR ALL 1 will provide you with long-term satisfaction. Please read these enclosed instructions carefully before putting your ONE FOR ALL 1 to use.

Your ONE FOR ALL 1 Remote Package contains:

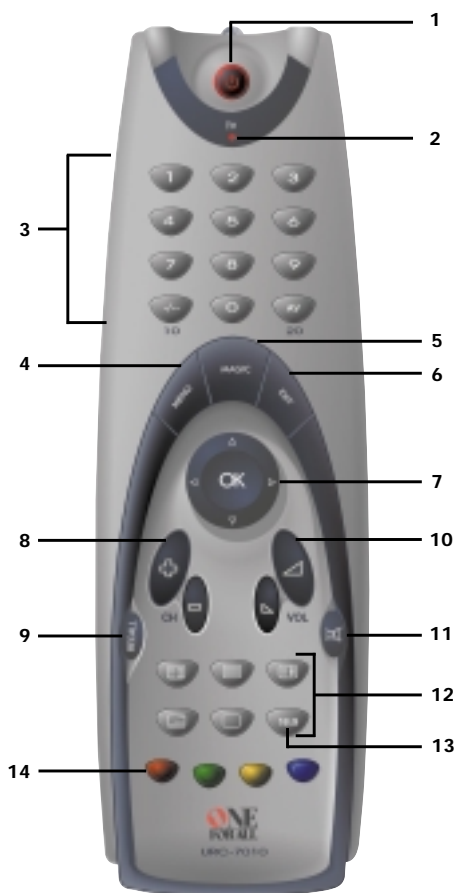
- Your ONE FOR ALL 1 Remote Control
- Your ONE FOR ALL 1 Manual

Your Manual is divided into two parts: the set-up instructions and the device codes.

PLEASE DO NOT DISCARD THIS MANUAL AS YOU MAY NEED IT AGAIN IN THE FUTURE!

Your ONE FOR ALL 1 can operate a Television.

Your ONE FOR ALL 1 remote needs to be powered by 2 new "AA/LR6" Alkaline batteries.



Installing the Batteries

Your ONE FOR ALL 1 Remote needs 2 new "AA/LR6" Alkaline batteries.

- 1 Remove the battery cover from the back of your ONE FOR ALL 1 by pressing down on the arrow on the battery cover and sliding it backwards.
- 2 Match the batteries to the + and - marks inside the battery case, then insert the batteries.
- 3 Slide the battery cover back into place until it clicks. Make sure the battery cover is secure.

Important notes:

- In order to avoid having to re-program your ONE FOR ALL 1 after you remove the batteries, you will need to insert new batteries within 5 minutes. Also it is recommended that you do not use rechargeable batteries.
- On the inside of the battery compartment door you will find a label on which to write your Set-Up Codes for future reference. This you will do after setting up your ONE FOR ALL 1 remote for your devices.

Features and Functions

Please refer to the picture of the ONE FOR ALL 1 Remote Control on Page 3.

- 1 **Power Key:**
The Power key controls the same function as it did on your original remote.
- 2 **LED:**
During the use of your ONE FOR ALL 1, the LED will flash red every-time you press a key.
- 3 **Number Keys:**
The Number keys (0-9, -/--(10), AV (20)) provide the functions just like your original remote, such as the direct access to programme/channel selection. If your original remote uses a 10 key, this function can be found by pressing the -/-- key. If your original remote uses a 20 key, this function can be found by pressing the AV key.
- 4 **Menu Key:**
The Menu key controls the same function as it did on your original remote control.
- 5 **Magic Key:**
The Magic key is used to set-up your ONE FOR ALL 1 Remote Control and to access special functions.
- 6 **Exit Key:**
The Exit key will exit the Menu.
- 7 **Menu Navigator:**
The Menu Navigator is a miniature joystick. The movement of the navigator up, down, left and right operates the same functions as the up, down, left and right keys of your original remote. By pressing the Menu Navigator, it will operate the same function as the OK/Select key on your original remote control. These keys will allow you to navigate up, down, left and right through the menu of your device.

8 Channel Up / Down Control:

The Channel Up / Down keys control the same functions as your original remote control.

9 Recall Key:

The Recall key operates the same function it did on the original remote control. If your original remote control does not have a Recall function you can set the Recall function up with the ONE FOR ALL Recall (see page 11).

10 Volume Up / Down Control:

These keys operate just as those on your original remote.

11 Mute Key:

The Mute key operates the same function it did on your original remote. It is also used to access the scan feature (see page 11).

12 Teletext Functions:

These keys are used to operate the main teletext functions.



TEXT ON: Puts your television in the teletext mode.



TEXT OFF: Switches the television back to regular viewing mode. On some televisions, this may be done by pressing the TEXT key several times.



HOLD/STOP: Stops the television changing text pages.



EXPAND: Shows the top half of the teletext page in larger letters. By pressing again, you can see the bottom half of the teletext page enlarged. To return to the regular teletext viewing, press the Expand key again, or press the Text key, depending on your television.



MIX: Shows the teletext and regular television simultaneously. You may also use this key for subtitles. On some televisions this function is accessed by pressing the Text key twice.

13 Wide Screen/Format/16:9 Function:

The 16:9 key allows you to access the wide screen view option of your television (if the function is available on your original remote).

14 Fasttext Keys:



 

The Red, Green, Yellow and Blue keys will allow you to access the fasttext functions of your television. Again, your television must have fasttext capability to operate these functions. If on your original remote control these keys are used for Menu operation, the ONE FOR ALL 1 Remote will operate the same.

Important note: For a more detailed explanation of the Teletext and Fasttext functions, please refer to the manual of your television. Remember, different televisions control Teletext and Fasttext in different ways. Not all Teletext functions may be available for your particular model.

Installation

Before you start, please read these instructions carefully

Setting Up Your Television

- 1** Make sure your television you wish to operate is **switched on** (not in standby).
-  **2** Find the code for your device in the **Code List (page 73 - 77)**. The device codes are listed per brand name. Also the most popular code for each brand is listed first.
-  **3** Press and hold down **MAGIC** until the red light blinks twice (the red light will blink once then twice).
-  **4** Enter your **four-digit device code** using the number keys. The red light will blink twice.
-  **5** Now **aim the ONE FOR ALL 1 remote at your device (television) and press POWER**. If your device switched off, the ONE FOR ALL 1 is ready to operate your device.
- 6** Turn your television back on and try all the remote's functions to ensure they are working properly. If the functions do not work properly, repeat steps 1-5 using another code listed under your brand.
- 7** If your television does not respond to the code entered, follow steps 1-5 with each code listed for your brand. If none of the codes listed for your brand operate your television, or if your brand is not listed at all, try the search method described on page 7.
- 8** Write your devicecode in the applicable four digit boxes provided in the battery compartment and on page 8 for future reference.





Important note:

- Some codes are quite similar. If your device does not respond or is not functioning properly with one of the codes, try another code listed under your brand.

The Search Method

If your television does not respond to the ONE FOR ALL 1 after you have tried all the codes listed for your brand, try searching for your code. The Search Method allows you to find the code for your device by scanning through all the codes contained in the memory of the ONE FOR ALL 1. The search method may also work if your brand is not listed at all.







To search for your television code:

- 1 Switch your television on (not in standby) and aim your ONE FOR ALL 1 at your device.
- 2  Press and hold down **MAGIC** until the ONE FOR ALL 1 red light blinks twice (the red light will blink once then twice).
- 3  Press **9 9 1**. The red light will blink twice.
- 4  Now slowly, alternate between **POWER** and **CHANNEL DOWN**, over and over, until your television turns off. You may have to press these keys many times (up to 200 times!), so please be patient. Remember to keep pointing the ONE FOR ALL 1 at your television when you press these keys.
- 5  As soon as your television turns off, press **MAGIC** to store the code.

The ONE FOR ALL remote should now be ready to operate your TV. Turn your TV back on and try all the remote's functions to ensure they are working properly. If some of the ONE FOR ALL 1's commands are not operating correctly, try the search method again. You may be using the wrong code.

Once you have Set-Up your ONE FOR ALL 1, you can blink back your Set-up Code for future reference.

To blink out your television code:

- 1  Press and hold down **MAGIC** until the ONE FOR ALL 1 red light blinks twice (the red light will blink once then twice).
- 2  Press **9 9 0**. The red light will blink twice.
- 3  For the first digit of your four-digit code, press **1** and count all the red blinks. If there are no blinks, the digit is "0".
- 4  For the second digit of your four-digit code, press **2** and count all the red blinks. If there are no blinks, the digit is "0".
- 5  For the third digit of your four-digit code, press **3** and count all the red blinks. If there are no blinks, the digit is "0".
- 6  For the fourth digit of your four-digit code, press **4** and count all the red blinks. If there are no blinks, the digit is "0". Now you have your four-digit code.

Quick Code Reference

Make sure you write down the code for your television in the boxes below and in the battery compartment for future easy reference.

Brand

1. _____

Code

<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
----------------------	----------------------	----------------------	----------------------

Advanced Features

Colour and Brightness

Depending on the functions of your original remote control, the ONE FOR ALL 1 may operate the colour and brightness settings of your television.

Colour (+) = Press and release **MAGIC** then hold **Volume (+)**

Colour (-) = Press and release **MAGIC** then hold **Volume (-)**

Brightness (+) = Press and release **MAGIC** then hold **Channel (+)**

Brightness (-) = Press and release **MAGIC** then hold **Channel (-)**

Important note: You have 5 seconds to press the Volume or Channel keys for the colour or brightness adjustments after pressing MAGIC.

Auto Scan

Your ONE FOR ALL 1 comes with a special Scan function which lets you scan through every channel available on your television.

To scan the channels on your TV:

- 1 Aim the ONE FOR ALL 1 at your TV. Press the **TV** key. Press and release **MAGIC** then press the **MUTE** key.

The ONE FOR ALL 1 will send the command to advance through all the channels available on your television stopping at each channel for about three seconds. Remember, you must aim the ONE FOR ALL 1 at your television the entire time you are using scan.

- 2 When you find a channel you would like to watch, simply press **any key** to stop the scan.

Important note: Auto Scan may not work with devices that do not have Channel +/- keys on the original remote control.

Device SleepTIMER

If your television has a "SleepTIMER" function built in, you can access this function with your ONE FOR ALL remote. To do so:

- 1 Make sure your television is switched on (not in standby).
- 2 Point the ONE FOR ALL at your television and press and release **MAGIC** then press **POWER**. You should see the SleepTIMER activate on your TV screen.
To increase the timer, simply press **POWER** again (within 5 seconds) until the timer gets to the desired time.

To deactivate the SleepTIMER, repeat steps 1 and 2 above. During step 3, continue pressing **POWER** (within 5 seconds) until the timer indicates zero minutes.

Important note: Depending on how you used the sleepTIMER function on your original remote, you might need to access the sleepTIMER of your television in a different way (through menu for example).

ONE FOR ALL SleepTIMER

If your device does **not** have a sleepTIMER function built-in, you can still install the ONE FOR ALL SleepTIMER function.

Installing the ONE FOR ALL SleepTIMER:

- 1 Press and hold **MAGIC** until the red light blinks twice.
- 2 Press **9 7 0**. The red light will blink twice again.

Now your ONE FOR ALL 1 is setup to use the ONE FOR ALL SleepTIMER on the device you selected in the setup above.

To activate the ONE FOR ALL SleepTIMER:

It is possible to set the ONE FOR ALL SleepTIMER for 15, 30, 45 or 60 minutes. To do this, first make sure your TV is switched on.

- 3 Press and release the **MAGIC** key and then press **POWER**. The red light will blink once to indicate the timer is activated for 15 minutes.
- 4 To increase the timer, simply press the **POWER** key again (this must be done within 5 seconds). The red light will blink twice indicating the timer is set for 30 minutes (2x15).
- 5 You can press the **POWER** to a maximum of four times. This will set the timer to 60 minutes (indicated by 4 blinks).

Once you have set the timer to the desired time, set your ONE FOR ALL remote down, pointing it at your device. When the programmed amount of time has elapsed, the ONE FOR ALL 1 will send the command for **POWER**, thereby turning off your device.

Important notes:

- The red light on the ONE FOR ALL 1 will blink every 15 seconds indicating that the remote is in sleepTIMER mode.
- To deactivate the timer, simply press any key on the ONE FOR ALL 1 remote.
- Once the ONE FOR ALL SleepTIMER has been installed it is not necessary to repeat steps 1 and 2 above every time you wish to activate the timer. Simply repeat steps 3-5.
- To uninstall the ONE FOR ALL SleepTIMER back to device sleepTIMER, repeat steps 1 and 2 above and the red light will blink four times.
- Remember to place the remote so it is pointing to your device when the timer is activated.

ONE FOR ALL Recall (Previous Channel)

If your television has a Recall or Previous / Last Channel function, the Recall key allows you to access this function. If, however, your television does not have a Recall or Previous / Last Channel function, then you can set up your own two favourite channels with the ONE FOR ALL Recall function.

The ONE FOR ALL Recall function allows you to program up to two channels, each consisting of a maximum of 4 key presses per channel entry. This allows you to swap back and forth between two channels with the press of a single key.

- 1 Press the **MAGIC** and **RECALL** keys simultaneously, until the red light blinks twice.
- 2 Enter the first channel number **exactly as you would on your original remote** (e.g. <-/->, <1>, <2> to get channel number 12).
- 3 Press **RECALL** once and release.
- 4 Enter the second channel number **exactly as you would on your original remote** (e.g. <-/->, <2>, <3> to get channel number 23).
- 5 Press the **MAGIC** key, and the red light blinks twice.

Now, if you press RECALL, you will obtain the second channel programmed (being <23>) and if you press RECALL again you will obtain the first channel programmed (being <12> in our example).

Important notes:

- To enter only one channel number, skip steps 3 & 4.
- If two channel numbers have been stored previously, entering one new channel will delete the oldest entry.

To reset the RECALL key:

- 1 Press **MAGIC** and **RECALL** **simultaneously** until the red light blinks twice.
- 2 Press **RECALL** and release.
- 3 Press **MAGIC** and release and the red light will blink twice.

Trouble-Shooting

Problem:	Solution:
Your brand is not listed in the code section?	Try the search method on page 7.
The ONE FOR ALL does not operate your device(s)?	A) Try all the codes listed for your brand. B) Try the search method on page 7.
The ONE FOR ALL is not performing commands properly?	You may be using the wrong code. Try repeating the Direct Set-Up using another code listed under your brand or start the search method over again to locate the proper code.
Problems changing channels?	Enter the programme number exactly as you would on your original remote.
The ONE FOR ALL does not respond after pressing a key?	Make sure you are using new batteries and are aiming the ONE FOR ALL at your television.
The red light does not blink when you press a key?	Replace batteries with 2 fresh, new "AA/LR6" alkaline batteries.

Customer Service

If you still have questions about the operation of your ONE FOR ALL 1 universal remote and could not find the answer(s) in the trouble shooting section, you may want to contact the customer service department for assistance.

You may care to visit our Internet-site:

www.oneforall.com

Our internet-site has many advantages:

- 24 hours access
- no waiting time
- page for Frequently Asked Questions
- info about the ONE FOR ALL product range

Before contacting us, by Fax, E-mail or Phone, make sure you have the required information available by filling in the table below.

What do we need to know before you contact us:

- 1 That you have the **URC-7010** ONE FOR ALL remote.
- 2 The date of purchase (...../...../.....).
- 3 A list of your equipment/models/helpcodes(*): (see example below)

Helpcode(*)	Brand	Device model nr.	Remote model nr.	SET-UP(***) code
3810805	Sony	KVX-2950B	RMT-V131B	0505 (example)

(***) To obtain the SET-UP CODE, please follow the blink back procedure on page 8.

Type/model numbers can often be found in your equipment owner's manual or on the factory plate behind the device.

4. Then Fax, E-mail or Dial us:

In the UK:

e-mail : ofahelp@uebv.com (**)
fax : +31 53 432 9816
tel : 0808-1000306(*)

In Ireland:

e-mail : ofahelp@uebv.com (**)
fax : +31 53 432 9816
tel : 1-800 553199 (*)

In Australia:

e-mail : ofahelp@uebv.com (**)
fax : 03 9672 2479
tel : 1-300 888298

In South Africa:

e-mail : support@oneforall.co.za
fax : 011 298 2302
tel : 0860 100551
tel : 011 298 2300

In New Zealand:

e-mail : ofahelp@uebv.com (**)
fax : (06) 878 2760
tel : 0508 ONE 4 ALL (663 4 255)

(*) When you call us you will be asked to enter your helpcode(s). You only have to enter the helpcode(s) of those devices you have a problem with. The helpcode is a 7-digit code, which defines the ONE FOR ALL-model you have, the device type and the brand of your device. This helpcode can be found in the first column of the setup code list.

(**) Just send a blank message, you'll get auto-reply.

Televisions

Fernseher

Téléviseurs

Televisores

Televisões

Televisori

Televisies

3810991	A.R. Systems	0037
3811306	Accent	0037
3812089	Acec	0012
3810010	Admiral	0087 0093 0418 0264
3810012	Adyson	0217 0216
3811080	Agashi	0216 0264
3810015	AGB	0516
3810997	Agef	0087
3810017	Aiko	0216 0009 0037 0371 0433 0072 0264 0217
3810018	Aim	0037
3810019	Aiwa	0701
3810020	Akai	0208 0371 0037 0433 0009 0072 0218 0163 0516 0602 0556 0581 0480 0217 0631 0216 0264 0448 0178 0377 0606 0714 0708
3810021	Akiba	0218 0282 0455 0037
3810022	Akito	0037
3810023	Akura	0218 0282 0009 0412 0264 0037 0668
3811267	Alaron	0179 0216
3810024	Alba	0218 0235 0009 0418 0370 0355 0371 0037 0216 0247 0163 0581 0487 0036 0668 0579
3810029	Allorgan	0206 0294 0217
3810032	Allstar	0037
3810041	Amplivision	0217 0400 0320 0370
3810042	Amstrad	0177 0009 0516 0264 0354 0218 0371 0433 0412 0037 0648
3811094	Anam	0037 0009
3811268	Anam National	0037
3810044	Anglo	0009 0264
3810045	Anitech	0009 0264 0037
3810047	Ansonic	0370 0292 0102 0009 0037 0374 0163 0411 0259 0247 0012 0428
3810050	Apollo	0473
3810053	Arc en Ciel	0399 0109 0196 0198
3810054	Arcam	0216 0399 0217
3811307	Ardem	0486
3810057	Aristona	0037 0556 0012
3810059	Arthur Martin	0163 0400
3810060	ASA	0105 0346 0070 0104 0087
3810062	Asberg	0037
3811095	Asora	0009
3810070	Asuka	0218 0264 0216 0282 0217
3810072	Atlantic	0037 0216 0206 0259 0320
3810074	Atori	0009
3810075	Auchan	0163 0400
3810080	Audiosonic	0037 0109 0217 0370 0337 0264 0218 0486 0428
3810081	Audioton	0217 0486 0370 0264
3810085	Autovox	0087 0206 0217 0247
3811156	AWA	0011 0036 0009 0157 0374 0412 0037 0216 0606
3811081	Ayomi	0238
3810091	Baird	0109 0193 0190 0192 0072 0073 0217 0208
3810093	Bang & Olufsen	0565 0087
3810094	Barco	0380 0163
3810097	Basic Line	0218 0009 0374 0037 0163 0282
3810098	Bastide	0217
3810099	Baur	0303 0195 0512 0037 0505
3811082	Bazin	0217
3811079	Beaumark	0178

3810103	Beko	0370 0486 0037 0714 0606 0715
3810105	Beon	0037 0418
3810106	Best	0337 0370 0421
3810107	Bestar	0037 0370 0374
3810108	Binatone	0217
3810110	Black Star	0247
3810111	Blacktron	0282
3810112	Blackway	0282
3810113	Blaupunkt	0195 0200 0327 0328 0448
3810114	Blue Sky	0218 0282 0455 0037 0487 0668 0714 0715
3810115	Blue Star	0282
3810118	Bondstec	0247
3810119	Boots	0217
3810121	BPL	0282 0037
3810123	Brandt	0109 0399 0196 0198 0335 0625
3810126	Brinkmann	0418 0037
3811030	Brionvega	0037 0087
3810128	Britannia	0216 0217
3811444	Brother	0264
3810133	Bruns	0087
3810134	BSR	0163 0294
3810138	BTC	0218
3810139	Bush	0668 0218 0235 0163 0009 0036 0282 0037 0355 0371 0374 0264 0487 0208 0581 0294 0217
3810149	Capsonic	0264
3811455	Carad	0610 0037
3810150	Carena	0455 0037
3810151	Carrefour	0036 0070
3810153	Carver	0170
3810998	Cascade	0009 0037
3810154	Casio	0037
3810155	Cathay	0037
3811231	CCE	0037 0217
3810160	Centurion	0037
3810161	Century	0087 0247 0238
3810162	CGE	0074 0084 0247 0163 0418 0370
3810167	Cimline	0009 0235 0218
3810169	City	0009
3811073	Clarivox	0418 0070
3810172	Clatronic	0218 0264 0370 0371 0217 0247 0037 0009 0102 0320 0579
3810173	Clayton	0385
3811308	CMS hightec	0217
3810186	Concorde	0009
3810187	Condor	0216 0247 0282 0320 0037 0370 0009 0102 0411 0418 0216 0009 0157 0011 0036
3810191	Contec	
3810192	Continental	Edison 0109 0196 0198 0399 0487 0009 0337
3810194	Cosmel	0087 0247 0074 0084 0163
3810196	Crosley	0009 0370 0486 0421 0037 0579 0418 0208 0487 0053 0714
3810197	Crown	0247 0216 0218
3810200	CS Electronics	0247 0216 0218
3810201	CTC	0247
3810202	Curtis Mathes	0093 0166
3810203	Cybertron	0218
3811254	Daenyk	0179
3810205	Daewoo	0009 0037 0216 0374 0218 0217 0624
3810206	Dainichi	0218 0216
3810207	Dansai	0037 0264 0216 0009
3811160	Dansette	0412
3811083	Dantax	0370 0486
3811102	Datsura	0208
3810209	Dawa	0037
3810210	Daytron	0009 0374 0037
3810216	de Graaf	0208 0044 0163
3810214	Decca	0072 0033 0516 0037 0217 0037
3811459	Deitron	0037
3810999	Denko	0264
3811103	DER	0193 0190
3810220	Desmet	0320 0037
3811000	Diamant	0037
3811310	Digiline	0037
3810232	Dixi	0009 0037 0247 0217
3810235	Domland	0394
3811255	Drean	0037
3810239	DTS	0009

3810240	Dual	0217 0259 0037 0394 0399 0303 0163	0339 0516 0473 0335
3810243	Dumont	0087 0104 0102 0217 0070 0072	0282 0218 0400 0037 0009 0320 0163 0455 0579 0610 0714 0715
3811162	Dux	0037 0012	0102 0217
3810247	Dynatron	0037	0195 0487 0070 0037 0556
3810252	Elbe	0435 0238 0259 0292 0370 0163 0037 0218 0411 0610	0264 0216 0217
3810254	Elicit	0087 0247 0516 0102 0163	0216 0217
3810255	Elekta	0264 0282	0294
3812093	ELG	0037	0037 0292 0282 0163 0394 0320 0428 0370 0009 0294 0217 0087
3810259	Elin	0216 0037 0105 0104 0448 0163 0009	0009 0037 0102
3810260	Elite	0218 0037	0037
3810261	Elman	0102	0218 0418 0037
3810263	Elta	0009 0264 0216	0217 0009
3810265	Emerson	0177 0087 0178 0247 0037 0179 0371 0070 0282 0320	0109 0196 0399
3810267	Emperor	0282	0264 0037
3810271	Erres	0037 0012	0264 0009 0282 0412 0217 0218 0418 0037
3810272	ESC	0037	0217 0009
3810273	Etron	0037 0009 0163	0109 0196 0399
3811632	Eurofeel	0264	0264 0037
3810278	Euroman	0216 0264 0037 0217 0421 0370	0218
3810279	Europa	0037	0208 0179 0036 0037 0218 0009 0163 0355 0443 0487 0235 0294
3810280	Europhon	0037 0516 0102 0217 0247 0163	0282 0218 0400 0455
3810291	Expert	0206 0400 0259 0163	0087
3811001	Exquisit	0037 0247	0036 0044 0043 0473 0163 0578 0196 0198 0217 0194 0516 0072 0037 0105 0178 0556
3811639	Family Life	0037	0108
3810294	Fenner	0374 0009	0009 0455 0218
3810296	Ferguson	0073 0192 0190 0335 0238 0193 0109 0625	0037 0012
3810299	Fidelity	0193 0216 0371 0163 0264 0037	0218 0455
3811164	Filsai	0217	0374 0216
3810301	Finlandia	0208 0346	0217 0216
3810302	Finlux	0105 0104 0037 0346 0217 0072 0163 0516 0070 0087 0179 0102 0411 0631 0480 0714	0009 0216 0217 0247 0037 0264 0217 0282 0455 0400 0238
3810304	Firstline	0294 0216 0037 0374 0385 0247 0009 0163 0102 0217 0411 0238 0072 0235 0668 0208 0624	0037
3810305	Fisher	0104 0217 0036 0208 0370 0045 0087 0157 0163 0303 0072	0264 0217 0037 0371 0218 0216 0009
3810307	Flint	0037 0455 0072 0218	0218 0216
3811002	FNR	0102	0037 0247 0370 0418 0163 0074 0084 0196
3810308	Forgestone	0193	0037
3810309	Formenti	0087 0216 0320 0163	0487 0610
3810310	Fortress	0093 0087	0009
3810313	Fraba	0370 0037	0009 0072 0037 0218 0290 0217 0516 0247
3811106	Friac	0009 0037 0102 0421	0411
3810319	Frontech	0247 0264 0448 0217 0009	0009 0264 0247
3810322	Fujitsu	0179 0206 0072 0102 0217 0163 0009	0037 0012 0087 0512 0327 0163 0370 0109
3811457	Fujitsu General	0009 0217	0037
3810323	Funai	0264 0179 0294	0282 0217 0455 0037 0371 0377 0448 0486 0370 0394 0487 0218 0102 0163 0264 0247
3810326	Galaxi	0102 0037	0009 0037 0218 0247 0290
3810327	Galaxis	0370 0418 0037 0102	0218 0037 0282
3810331	GBC	0163 0009 0374 0218	0217
3810333	GE	0109 0178 0282 0335	0037 0371 0218 0282 0264 0216
3811003	Geant Casino	0163 0400	0163 0480 0473 0193 0346 0339 0208 0179
3810335	GEC	0043 0072 0163 0516 0037 0217	0163 0473 0480 0346 0208 0179 0339 0606 0610 0631
3810336	Geloso	0247 0009 0163 0374	0264 0037 0247
3810337	General	0590 0109	0036
3810338	General Technic	0009	0653 0053 0190 0036 0192 0193 0371 0218 0606
3810339	Genexxa	0218 0037 0412	0218 0282 0037 0216 0455 0217 0009
3810345	Goldhand	0216	0216
3810346	Goldline	0337	0206 0163 0259 0104
3810347	GoldStar	0037 0370 0290 0009 0377 0217 0247 0216 0163 0178 0044	0037 0421 0370 0282 0102 0610 0264
3810349	Goodmans	0036 0072 0037 0009 0264 0516 0290 0179 0374 0487 0371 0556 0235 0480 0217 0624 0335	0216
3810350	Gorenje	0370 0421	0216
3810351	GPM	0218	0163
3811248	Gradiente	0037 0053 0170	0235 0247 0102 0037 0428 0370 0411 0610 0377
3810352	Graetz	0037 0371	0206 0163 0435
3810353	Granada	0037 0400 0226 0012 0045 0072 0108 0208 0217 0036	0216
3810354	Grandin		0435 0259 0292 0370 0238
3811107	Gronic		
3810355	Grundig		
3810359	Halifax		
3810360	Hampton		
3811108	Hanimex		
3810362	Hanseatic		
3810363	Hantarex		
3810364	Hantor		
3811280	Harley Davidson		
3811084	Harwood		
3811678	Hauppauge		
3810370	HCM		
3810372	Hema		
3810374	Hifivox		
3811682	Highline		
3811110	Hikona		
3810377	Hinari		
3810380	Hisawa		
3811004	Hit		
3810381	Hitachi		
3811684	Hitachi Fujian		
3811170	Hitsu		
3811085	Hornyphone		
3810384	Hoshai		
3811086	Huanyu		
3810388	Hygashi		
3810389	Hyper		
3810391	Hypson		
3811005	Iberia		
3810393	ICE		
3811006	Ices		
3810395	Imperial		
3810397	Indiana		
3811343	Ingelen		
3810398	Ingersoll		
3810401	Inno Hit		
3811312	Interactive		
3810404	Interbuy		
3810405	Interfunk		
3811113	Internal		
3810408	Intervision		
3810410	Irradio		
3810412	Isukai		
3810413	ITC		
3810414	ITS		
3810415	ITT		
3810416	ITT Nokia		
3810417	ITV		
3811314	Jean		
3810425	JVC		
3810427	Kaisui		
3810428	Kamp		
3810429	Kapsch		
3810430	Karcher		
3811283	Kawasho		
3811177	KB Aristocrat		
3810432	Kendo		
3810433	Kennedy		
3810437	Kingsley		
3810438	Kneissel		

3810441	Kolster	0037 0411 0610	3811124	Naiko	0037
3810442	Konka	0037 0102	3811125	Nakimura	0374 0037
3811315	Kontakt	0218 0371 0037	3812099	NAT	0226
3810443	Korpel	0487	3810562	National	0226
3810444	Korting	0037	3810564	NEC	0170 0036 0320 0455 0009
3810445	Kosmos	0087 0421 0370 0320			0374 0217 0037 0011 0704
3811181	Kotron	0037	3810565	Neckermann	0037 0370 0505 0200 0556
3811350	Kraking	0412 0264			0163 0327 0418 0087 0247
3811287	KTV	0238			0217 0411
3811117	Kyoshu	0217	3810566	NEI	0037 0337 0371
3810451	Kyoto	0264 0412 0418	3810567	Nesco	0247 0179
3812153	Lecson	0385 0163	3811292	Netsat	0037
3811451	Lemair	0037	3810568	Network	0337
3810454	Lenco	0411	3811012	Neufunk	0037 0009 0556 0610
3810456	Lenoir	0009 0374 0104 0163 0037	3810572	New Tech	0037 0009 0556 0217 0448
3810458	Lesa	0009	3810571	New World	0218
3810461	Leyco	0247	3810574	Nicamagic	0216
3811072	LG	0264 0072 0037 0294 0579	3810576	Nikkai	0072 0218 0037 0217 0264
		0037 0370 0290 0009 0377			0337 0216 0009 0036
		0217 0247 0216 0163 0178	3810577	Nikko	0178
3811008	Liesenkotter	0037 0327 0328 0012	3811249	Noblex	0037 0264
3810463	Lifetec	0009 0264 0037 0374 0218	3810578	Noblisko	0102 0070 0216
		0668 0512	3810579	Nogamatic	0399 0109 0196
		0009	3810580	Nokia	0163 0480 0473 0339 0208
3811240	Lloyd's	0512 0037 0087 0292 0370			0374 0631 0606 0346
3810472	Loewe	0011 0033 0193 0371	3810582	Nordmende	0109 0399 0196 0198 0195
3810474	Logik	0668			0037 0335
3811456	Logix	0206 0037 0163 0259 0411	3811013	Novatronic	0037 0105 0374
3810478	Luma	0374 0009	3810588	Oceanic	0163 0400 0294 0208
		0206 0037 0163 0259 0217	3812100	Odeon	0264
		0264 0073	3810590	Okano	0370 0037 0264 0072
3810481	Lux May	0037 0009	3811014	Omega	0264
3810485	Luxor	0194 0290 0480 0208 0163	3810595	Onwa	0371 0602 0218 0433 0581
		0346 0473 0179	3810596	Opera	0037
		0178	3810598	Optimus	0250 0166
3811241	LXI	0037	3811299	Optonica	0093
3811316	Madison	0087 0247 0516 0102 0163	3810599	Orbit	0037
3810490	Magnadyne	0516 0102 0216	3810602	Orion	0179 0235 0294 0177 0320
3810491	Magnafon	0036 0179 0037			0355 0011 0037 0009 0102
3810492	Magnavox	0648			0443 0556 0264 0412
3811071	Magnum	0264	3811015	Orline	0037 0218
3810495	Mandor	0037 0235 0217 0264 0320	3811192	Ormond	0385 0668
3810496	Manesth	0294	3810605	Osaki	0072 0218 0217 0264 0037
		0037 0668			0412 0374
3810497	Manhattan	0037	3811193	Osio	0037
3810500	Marantz	0087	3810607	Oso	0218
3810503	Marelli	0037 0217 0216 0374 0009	3810608	Osume	0157 0072 0036 0218
3810504	Mark	0218 0009 0371	3810610	Otto Versand	0505 0036 0093 0512 0037
3811342	Masuda	0235 0177 0009 0355 0011			0556 0195 0235 0109 0294
3810508	Matsui	0033 0072 0036 0037 0556			0226 0247 0303 0320 0217
		0487 0217 0354 0294 0371	3810614	Pael	0216
		0433 0443 0579 0455 0516	3810616	Palladium	0370 0037 0505 0200 0418
		0163 0208 0045 0195 0335			0556 0247 0327 0087 0163
		0043			0217 0411
3810513	McMichael	0037 0556 0012	3811129	Palsonic	0264 0412 0037 0217 0377
3810517	Mediator	0037 0668	3810619	Panama	0009 0217 0264 0216 0037
3810518	Medion	0610			0247
3811121	Megas	0178	3810620	Panasonic	0226 0650 0250 0367 0516
3811291	Megatron	0346 0037 0512 0109 0247			0037 0163
3810487	Melectronic	0105 0104 0374 0009 0217	3810622	Panavision	0037 0411
		0480 0216 0411	3810628	Pathe Cinema	0163 0238 0216 0400 0320
		0400			0292
3811010	Melvox	0009 0178 0250	3810629	Pathe Marconi	0109 0196 0198 0399
3810520	Memorex	0337 0072 0009 0385	3810631	Pausa	0009
3810521	Memphis	0037 0009	3810632	Perdio	0072 0320 0163 0037
3810522	Mercury	0087 0195 0447 0367 0388	3810633	Perfekt	0037
3810525	Metz	0587	3811460	Pershin	0400
		0178	3810634	Philco	0087 0084 0074 0418 0247
3810526	MGA	0037 0668			0163 0370 0037
3811317	Micromaxx	0487 0195 0070	3810635	Philharmonic	0217
3810531	Minerva	0412 0037	3810636	Philips	0037 0556 0012 0043 0087
3810532	Minoka	0108 0512 0037 0093 0178			0193 0374
3810535	Mitsubishi	0354 0087 0033 0036 0193	3810639	Phoenix	0037 0087 0320 0486 0370
		0292 0290 0291 0370 0216			0385 0216 0163 0072
		0609	3810640	Phonola	0037 0556 0012 0087 0193
		0009			0216
3811186	Monaco	0037	3811336	Pilot	0037 0556
3810540	Morgan's	0093	3810642	Pioneer	0166 0037 0428 0370 0109
3811297	Motorola	0370 0512 0216	3811132	Pionier	0370 0486
3810543	MTC	0193	3810644	Plantron	0037 0264 0009
3811187	Multibroadcast	0102	3811066	Playsonic	0217
3810545	Multistandard	0037 0668	3810646	Polytron	0697
3811452	Multitec	0217 0009 0216 0247 0102	3810647	Poppy	0009
3810547	Multitech	0486 0370 0037	3810648	Portland	0374
		0104 0216 0072 0163	3811846	Powerpoint	0487
3810551	Murphy	0218	3810650	Prandoni-Prince	0247 0516
3811791	Musikland	0166 0178	3810651	Precision	0217
3810553	NAD				

3810655	Prima	0009 0264	3811916	Siera	0037 0556 0012
3810656	Prinz	0072 0194	3810776	Siesta	0370
3810658	Profex	0009 0163	3810780	Silva	0216 0037
3810660	Profitronic	0037 0102	3810781	Silver	0036 0037 0179
3810662	Proline	0072 0037 0012 0625	3810782	Singer	0087 0102 0247 0400 0435 0009 0037
3810664	Prosonic	0037 0216 0370 0374 0579 0371 0668	3810783	Sinudyne	0177 0087 0235 0102 0294 0163 0516 0206 0037 0037
3810665	Protech	0037 0217 0009 0247 0102 0264 0418 0337 0668	3811298	Sky	0696
3810667	Proton	0178	3812120	Skysonic	0320
3810669	Provision	0037	3810795	Sogera	0072 0163
3810672	Pye	0037 0374 0556 0012 0087	3810797	Solavox	0218
3810673	Pymi	0009	3811927	Sonawa	0208 0370 0339 0217
3811067	Quadra Vision	0400	3810801	Sonitron	0037
3810677	Quasar	0247 0250	3811035	Sonneclair	0037 0009 0264 0282 0217
3810678	Quelle	0037 0011 0109 0512 0036 0217 0247 0074 0084 0327 0070 0104 0105 0157 0195 0200 0264 0290 0668	3810802	Sonoko	0208 0163 0400 0505
3810679	Questa	0036	3810804	Sontec	0037 0370 0294
3810680	R-Line	0037	3810805	Sony	1505 0505 1651 1010 0011 0036 0102 0074
3810682	Radialva	0109 0218 0163 0037	3810806	Sound & Vision	0102 0218 0374
3810684	Radiola	0037 0556 0012	3810807	Soundesign	0178 0179
3810685	Radiomarelli	0087 0516 0247 0037	3810809	Soundwave	0037 0320 0418
3811088	RadioShack	0037 0178	3811933	Spectra	0009
3810686	Radiotone	0009 0037 0428 0370 0579 0418 0264 0412 0648	3811143	Ssangyong	0009
3810690	Rank	0070	3810813	Standard	0218 0009 0217 0320 0037 0374
3810691	RCA	0625 0335 0093	3810817	Starlite	0009 0163 0037 0264
3810693	Realistic	0178	3810822	Stenway	0282 0218
3811016	Recor	0037	3810823	Stern	0206 0259 0163
3812101	Rectiligne	0037	3811020	Strato	0037 0264 0009
3810695	Rediffusion	0036	3810828	Sunkai	0294 0355 0455 0218 0235 0037 0487
3811017	Redstar	0037	3810831	Sunstar	0371 0037 0009 0579
3811018	Reflex	0037	3810833	Sunwood	0037 0009
3810698	Revox	0037 0370	3810835	Superla	0516 0216
3810699	Rex	0206 0411 0247 0163 0259	3810838	SuperTech	0009 0037 0216 0556 0218
3810700	RFT	0087 0292 0370 0428 0072 0264	3810839	Supra	0374 0009
3811338	Rhapsody	0216	3810840	Susumu	0335
3810701	Roadstar	0009 0264 0218 0418 0037	3810841	Sutron	0009
3810703	Robotron	0087	3811319	Swissline	0247
3811885	Rodex	0037	3810842	Sydney	0216 0217
3811197	Roxy	0448	3811021	Sytong	0216
3810711	Royal Lux	0421 0370 0412	3810849	Tandberg	0367 0411 0109 0337 0196
3810715	Saba	0625 0087 0399 0163 0109 0516 0196 0198 0335	3810850	Tandy	0218 0072 0217 0247 0093
3810718	Sagem	0455 0610 0282	3810852	Tashiko	0036 0043 0217 0170 0216 0163
3810720	Saisho	0235 0516 0177 0009 0011 0033 0217 0163 0264 0354	3810853	Tatung	0072 0516 0217 0037 0011
3810722	Salora	0290 0194 0163 0516 0339	3810854	Teac	0037 0698 0512 0455 0264 0009 0412 0178
3810723	Sambers	0516 0102	3810855	TEC	0217 0009 0247 0335 0337 0259
3810724	Samsung	0037 0556 0587 0009 0217 0178 0448 0370 0264 0216 0290 0072 0208 0644	3811320	Tech Line	0037 0668
3810726	Sandra	0216 0217	3812107	Techica	0218
3811139	Sanela	0238	3810856	Technema	0320
3810727	Sansui	0037 0371	3810857	Technics	0250
3812102	Santon	0009	3811453	Tedalex	0217
3810729	Sanyo	0208 0157 0292 0036 0011 0370 0339 0072 0216 0217 0104 0045 0009 0163 0037	3811978	Teiron	0009
3811318	Save	0037	3811328	Teknika	0179
3810743	SBR	0037 0556 0012	3810866	Teleavia	0109 0196 0399 0490
3810745	Schaub Lorenz	0606	3810870	Telecor	0037 0163 0218 0217 0259 0394
3810746	Schneider	0037 0556 0012 0303 0394 0259 0217 0247 0371 0218 0163 0668 0648	3810872	Telefunken	0109 0399 0074 0084 0101 0335 0262 0073 0196 0037 0486 0625
3810750	Scott	0178 0179	3811213	Telefusion	0037
3811324	Sears	0178 0179	3810874	Telegazi	0037 0163 0259 0218 0264
3810753	SEG	0217 0264 0009 0247 0036 0102 0163 0037 0216 0668 0487	3810878	Telemeister	0320 0037
3810754	SEI	0087 0102 0163 0516 0294 0206 0037	3810882	Telesonic	0037
3810756	Seleco	0206 0259 0163 0411	3810883	Telestarc	0037
3810757	Sencora	0009	3810884	Teletech	0009 0247 0337 0037 0668
3810759	Sentra	0218 0009	3810885	Teleton	0217 0206 0163 0259 0036
3811265	Serie Dorada	0178	3810887	Televideon	0320 0163 0216
3811019	Serino	0455 0610	3811022	Televiso	0400
3810762	Sharp	0093 0157 1193 0036 0294 0653 0053 0256 0193	3810889	Temco	0294
3810769	Shorai	0294 0179	3811334	Tempest	0009 0037
3811263	Siam	0037	3811991	Tennessee	0037
3810772	Siarem	0163 0087 0102	3810891	Tensai	0104 0218 0037 0217 0294 0320 0009 0105 0374 0371 0377 0247
3810773	Siemens	0200 0195 0327 0328 0157 0037	3811023	Tenson	0320 0009
			3811461	Tevion	0037 0648 0668
			3810892	Textet	0217 0374 0009
			3810895	Thomson	0399 0109 0335 0196 0198 0037 0490 0625
			3810897	Thorn	0193 0073 0190 0238 0192 0074 0084 0037 0104 0335

		0512 0374
3811329	TMK	0178
3810900	Tokai	0072 0037 0448 0337 0163 0217 0374 0009
3810901	Tokyo	0216 0448
3810902	Tomashi	0282 0218
3810905	Toshiba	0508 0036 0070 0102 0217
3810906	Towada	0102 0217
3812109	Toyoda	0009
3812110	Trakton	0264
3810908	Trans Continens	0217 0037
3812111	Transonic	0037 0455 0587 0512
3812008	Transtec	0216
3810913	Trident	0516 0217
3810915	Tristar	0218 0193
3810916	Triumph	0177 0516 0346 0556 0037
3810919	Uher	0037 0206 0320 0303 0374 0418 0486 0370 0259
3811148	Ultra	0192
3810920	Ultravox	0087 0102 0374 0247 0216 0163 0037
3811024	Unic Line	0037 0473
3811215	United	0037
3810929	Universum	0346 0105 0195 0473 0247 0480 0370 0200 0418 0011 0512 0294 0036 0157 0070 0163 0264 0104 0037 0421 0411 0290 0074 0327 0328 0505 0217 0109 0337 0177 0631 0668
3810930	Univox	0337 0087 0037 0163 0238
3810937	Vestel	0037 0163 0217
3810938	Vexa	0009 0037
3810939	Victor	0053
3810942	Videologique	0216 0218 0217
3810943	VideoSystem	0037
3810944	Videotechnic	0216 0320 0217 0374
3811025	Videoton	0163
3811322	Vidikron	0102
3811330	Vidtech	0036 0178
3810947	Viper	0337
3810949	Visiola	0216
3810950	Vision	0037 0320
3810954	Vistar	0206
3810956	Vortec	0037
3810957	Voxson	0087 0037 0418
3810958	Waltham	0217 0418 0385 0037
3810959	Watson	0037 0320 0163 0218 0579 0394 0009 0668
3810960	Watt Radio	0102 0163 0216
3810961	Wega	0036 0087 0037
3811026	Wegavox	0009
3810963	Weltblick	0037 0320
3811245	Wharfedale	0037
3810967	White Westing- house	0320 0216 0037 0337
3811264	Winco	0412
3811027	Windstar	0282
3810976	Xrypton	0037
3810979	Yamishi	0282 0455 0218 0037 0217
3810980	Yokan	0037
3810981	Yoko	0217 0037 0218 0264 0009 0421 0370 0339 0216 0247
3810983	Yorx	0218
3810984	Zanussi	0206 0217
3811219	Zenor	0339

Guarantee UK UNIVERSAL ELECTRONICS INC./ONE FOR ALL warrants to the original purchaser that this product will be free from defects in materials and workmanship under normal and correct use for a period of one (1) year from the date of original purchase. This product will be replaced free of charge if it has been proven to be defective within the one (1) year warranty period. This warranty does not cover cartons, carrying cases, batteries, broken or marred cabinets or any other item used in connection with the product. Any further obligation than listed above is excluded. To obtain warranty service during the warranty period, please call us at the number mentioned on the Customer Service page. Please notice that we need your purchase receipt so that we may establish your eligibility for service.

GARANTIE D UNIVERSAL ELECTRONICS INC./ONE FOR ALL garantiert dem Kunden, dass dieses Produkt bei sachgemäßem und ordentlichem Gebrauch für die Dauer eines Jahres vollkommen frei von Defekten materieller oder technischer Art bleiben wird, gerechnet ab Kaufdatum. Falls erwiesen werden kann, dass innerhalb der Garantiezeit eines Jahres ein Defekt entstanden ist, wird dieses Produkt gebührenfrei ersetzt, falls besagtes Produkt innerhalb der Garantiezeit auf Kosten des Kunden zurückgeschickt wird. Diese Garantie erstreckt sich nicht auf Verpackungen, Transportbehältnisse, Batterien, zerbrochene oder beschädigte Gehäuse oder andere Objekte, die in Verbindung mit dem Produkt verwendet werden. Jegliche weitere Verpflichtung als die oben aufgeführte wird ausgeschlossen. Um unseren Garantieservice innerhalb der Garantiezeit in Anspruch nehmen zu können, wählen Sie bitte die Nummer die Sie auf der Kundendienstseite finden um weitere Instruktionen zu erhalten. Bitte beachten Sie, dass wir Ihren Kaufbeleg brauchen um fest zu stellen ob Sie Anspruch auf unseren Garantieservice erheben können.

GARANTIE F UNIVERSAL ELECTRONICS INC./ONE FOR ALL garantit à l'acheteur d'origine que ce produit est certifié franc de défauts matériels et de main d'œuvre durant une période d'un (1) an à partir de la date d'achat original à la condition exclusive que ce produit ait été utilisé de manière normale et correcte. Ce produit sera remplacé gratuitement s'il s'est révélé défectueux pendant ladite période d'un (1) an, produit devant être retourné à la charge du client durant la période de garantie. Cette garantie ne saurait couvrir d'aucune manière que ce soit emballages en carton, coffrets portables quelconques, piles, corps d'appareil cassé ou endommagé ou tout autre article utilisé en combinaison avec ce produit. Nous nous réservons le droit de rejeter tout autre engagement que ceux cités plus haut. Pour pouvoir obtenir le service de garantie durant la période de garantie, veuillez nous contacter au numéro mentionné sur la page "Service Consommateurs" pour les instructions nécessaires. Veuillez noter que la preuve d'achat est obligatoire afin de pouvoir déterminer votre droit à ce service.

GARANTIA E UNIVERSAL ELECTRONICS/ONE FOR ALL garantiza al comprador que este producto estará libre de defectos materiales o de fabricación, al menos durante 1 año desde la fecha actual de su adquisición, y en caso de que se utilice de un modo normal y correcto. Este producto será sustituido de forma gratuita siempre y cuando se pueda demostrar que es defectuoso y que esto haya sucedido dentro del año de garantía, corriendo a cuenta del comprador los gastos de su devolución. Esta garantía no cubre embalajes, maletines, envoltorios, pilas, armarios u otros objetos utilizados en conexión con este producto. Se excluyen otras obligaciones, cualesquiera que sean, además de las mencionadas más arriba. Para obtener servicio de garantía dentro del periodo correspondiente a ésta, por favor, llámenos al número de teléfono que se menciona en la página de Servicio de Atención al Cliente. Por favor, asegúrese de tener su recibo o ticket de compra para que podamos establecer su legitimidad a este servicio.

GARANTIA P A UNIVERSAL ELECTRONICS INC./ONE FOR ALL garante ao cliente a protecção deste produto no que respeita a defeitos de fabrico de material, dentro de um período de uso correcto e normal de 1 ano a partir da data da compra do mesmo produto. Este produto será substituído sem qualquer encargo no caso de ter sido comprovada qualquer avaria dentro do período de 1 ano e após o seu retorno (custos de envio da responsabilidade do consumidor) dentro deste mesmo prazo. Esta garantia não cobre embalagens de cartão , caixas , pilhas, ou outros itens usados em conjunto com este produto. Qualquer outra obrigação para além daquela acima descrita não será tida em consideração. Para obter o serviço de garantia durante o período a este destinado, para mais informações contacte-nos no número mencionado na página do Serviço de Apoio ao Cliente. Por favor tome nota que se lhe é pedido o comprovativo de compra, de forma a que possamos confirmar a sua legitimidade para este serviço.

GARANZIA I La compagnia Universal Electronics inc./ ONE FOR ALL garantisce l'acquisto originale che questo prodotto sarà esente da difetti di mano d'opera dietro l'utilizzo proprio di 1 anno. Questo prodotto sarà sostituito gratuitamente se verrà provato che è difettoso entro l'anno di garanzia e ovviamente accompagnato dalla prova dello scontrino che assicura la data d'acquisto. La garanzia non copre la scatola, l'imballaggio, le pile o ogni altro articolo che abbia a che vedere con il prodotto. Non ci sono ulteriori obblighi di qui sopra elencati. Per accedere al nostro servizio al cliente durante l'anno di garanzia potete chiamare al seguente numero telefonico che trovate sulla pagina "Servizio Clienti". Vi chiediamo cortesemente di conservare lo scontrino affinché noi possiamo stabilire la vostra credibilità, per richiedere un nostro servizio.

GARANTIE NL UNIVERSAL ELECTRONICS INC./ONE FOR ALL garandeert de klant, dat dit produkt bij normaal en correct gebruik vrij van materiële of technische defecten zal blijven voor een periode van één jaar, gerekend vanaf de datum van aankoop. Als aangetoond kan worden dat binnen de periode van één jaar een defect is ontstaan, zal dit produkt gratis vervangen worden als het genoemde produkt op kosten van de klant binnen de garantieperiode teruggestuurd wordt. Deze garantie is niet van toepassing voor verpakkingen, dozen voor transport, batterijen, gebroken of beschadigde behuizing of enig ander object, dat in verbinding met dit produkt gebruikt wordt. Elke andere verplichting dan het bovengenoemde wordt uitgesloten. Om gebruik te maken van onze garantieservice tijdens de garantieperiode, belt u het nummer dat u vindt op de Klantenservice pagina. Wij maken u erop attent dat wij uw bewijs van aankoop nodig hebben om vast te stellen of u voor deze garantieservice in aanmerking komt.

URC-7010
701925



Printed on Recycled Paper

DD-1101