

ONE
FOR ALL[®]



URC-7030
701927

ONE FOR ALL 3

UK Universal remote

D

F

E

P

I

NL



PICTURE OF THE ONE FOR ALL 3 REMOTE	3
INSTALLING THE BATTERIES	4
FEATURES AND FUNCTIONS	4
INSTALLATION	
Setting up your devices	6
The Search Method	7
QUICK CODE REFERENCE	8
CHANGING THE MODE OF A DEVICE KEY	9
RESETTING A DEVICE KEY	9
ADVANCED FEATURES	
Colour and Brightness	10
Volume Punch Through	10
Auto Scan	10
Device Sleptimer	11
ONE FOR ALL Sleptimer	11
ONE FOR ALL Recall	12
TROUBLE-SHOOTING	12
Customer Service	13
SETUP CODES	
Televisions	80
Video Recorders	83
DVD Players	85

About Your ONE FOR ALL 3

Congratulations on your purchase of the ONE FOR ALL 3 Universal Remote Control. By choosing the ONE FOR ALL 3 remote you have opted for the User Friendly remote control solution. Made according to the highest quality, the ONE FOR ALL 3 will provide you with long-term satisfaction. Please read these enclosed instructions carefully before putting your ONE FOR ALL 3 to use.

Your ONE FOR ALL 3 Remote Package contains:


- Your ONE FOR ALL 3 Remote Control
- Your ONE FOR ALL 3 Manual

Your Manual is divided into two parts: the set-up instructions and the device codes.

PLEASE DO NOT DISCARD THIS MANUAL AS YOU MAY NEED IT AGAIN IN THE FUTURE!

Your ONE FOR ALL 3 can operate three devices: a Television, a Video Recorder and a DVD Player.

Your ONE FOR ALL 3 remote needs to be powered by 2 new "AA/LR6" Alkaline batteries.

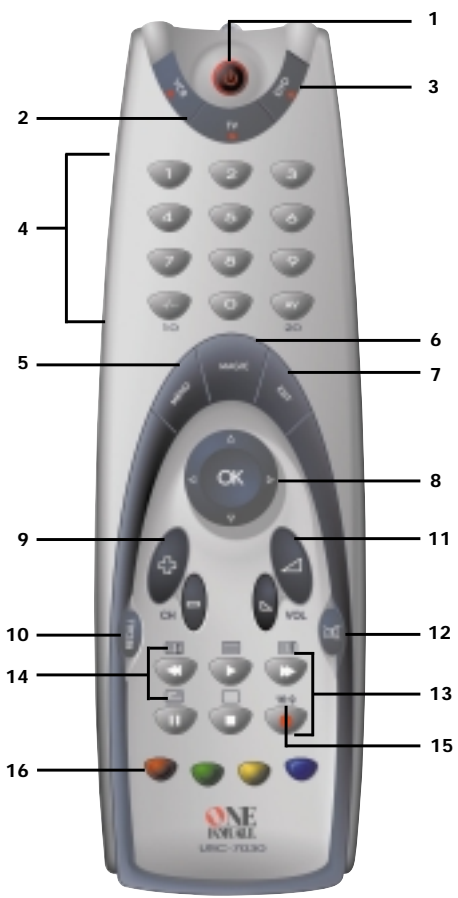

Installing the Batteries

Your ONE FOR ALL 3 Remote needs 2 new "AA/LR6" Alkaline batteries.

- 1** Remove the battery cover from the back of your ONE FOR ALL 3 by pressing down on the arrow on the battery cover and sliding it backwards.
- 2** Match the batteries to the + and - marks inside the battery case, then insert the batteries.
- 3** Slide the battery cover back into place until it clicks. Make sure the battery cover is secure.

Important notes:

- In order to avoid having to re-program your ONE FOR ALL 3 after you remove the batteries, you will need to insert new batteries within 5 minutes. Also it is recommended that you do not use rechargeable batteries.
- On the inside of the battery compartment door you will find a label on which to write your Set-Up Codes for future reference. This you will do after setting up your ONE FOR ALL 3 remote for your devices.

Features and Functions

Please refer to the picture of the ONE FOR ALL 3 Remote Control on Page 3.

- 1 Power Key:**
The Power key controls the same function as it did on your original remote.
- 2 Device Keys:**
The TV, VCR & DVD keys select the home entertainment device you wish to control. For example, pressing the TV key allows the remote to control the functions of your television, etc.
- 3 3 Mode Indicator LED's:**
During the use of your ONE FOR ALL 3, these LED's will indicate the mode you're using. For example when you are controlling your DVD player, the LED on the DVD key will flash red.
- 4 Number Keys:**
The Number keys (0-9, -/--(10), AV (20)) provide the functions just like your original remote, such as the direct access to programme/channel selection. If your original remote uses a 10 key, this function can be found by pressing the -/-- key. If your original remote uses a 20 key, this function can be found by pressing the AV key.
- 5 Menu Key:**
Controls the same function as it did on your original remote control.
- 6 Magic Key:**
The Magic key is used to set-up your ONE FOR ALL 3 Remote Control and to access special functions.
- 7 Exit Key:**
The Exit key will exit the Menu.
- 8 Menu Navigator:**
The Menu Navigator is a miniature joystick. The movement of the navigator up, down, left and right operates the same functions as the up, down, left and right keys of your original remote. By pressing the Menu Navigator, it will operate the same function as the OK/Select key on your original remote control. These keys will allow you to navigate up, down, left and right through the menu of your device.

9 Channel Up / Down Control:

The Channel Up / Down keys control the same functions as your original remote control. In DVD mode the Channel Up key operates the ► (Next Track) function, and the Channel down key operates the ◀◀ (Previous Track) function.

10 Recall Key:

The Recall key operates the same function it did on the original remote control. If your original remote control does not have a Recall function you can set the Recall function up with the ONE FOR ALL Recall (see page 12).

11 Volume Up / Down Control:

These keys operate just as those on your original remote.

12 Mute Key:

The Mute key operates the same function it did on your original remote. It is also used to access the scan feature (see page 10).

13 VCR/DVD Playback keys:

After pressing the VCR mode key, the Playback keys operate the same functions of your Video Recorder Keys. To prevent accidental recording of your video, the RECORD key must be pressed **twice**. After pressing the DVD mode key, the Playback keys will operate the same functions of your DVD Players.

14 Teletext Functions:

After pressing the TV mode key, the VCR/DVD Playback keys are used to operate the main teletext functions. The symbols above the keys represent the teletext functions they will access.



TEXT ON: Puts your television in the teletext mode.



TEXT OFF: Switches the television back to regular viewing mode. On some televisions, this may be done by pressing the TEXT key several times.



HOLD/STOP: Stops the television changing text pages.



EXPAND: Shows the top half of the teletext page in larger letters. By pressing again, you can see the bottom half of the teletext page enlarged. To return to the regular teletext viewing, press the Expand key again, or press the Text key, depending on your television.



MIX: Shows the teletext and regular television simultaneously. You may also use this key for subtitling. On some televisions this function is accessed by pressing the Text key twice.

15 Wide Screen/Format/16:9 Function:

The 16:9 key allows you to access the wide screen view option of your television (if the function is available on your original remote).

16 Fasttext Keys:

The Red, Green, Yellow and Blue keys will allow you to access the fasttext functions of your television. Again, your television must have fasttext capability to operate these functions. If on your original remote control these keys are used for Menu operation, the ONE FOR ALL 3 Remote will operate the same.






Important note: For a more detailed explanation of the Teletext and Fasttext functions, please refer to the manual of your television. Remember, different televisions control Teletext and Fasttext in different ways. Not all Teletext functions may be available for your particular model.

Installation

Before you start, please read these instructions carefully

Setting Up Your Devices


Example: To set up the ONE FOR ALL 3 for your television:

- 1** Make sure your device (television) you wish to operate is switched on (not in standby).
-  **2** Find the code for your device in the Code List (page 80 - 85). The device codes are listed per device type and brand name. Also the most popular code for each brand is listed first.
-  **3** Press the device mode key (TV) on the ONE FOR ALL 3 remote for the device you wish to set up.
-  **4** Press and hold down MAGIC until the red light blinks twice (the red light will blink once then twice).
-  **5** Enter your four-digit device code using the number keys. The red light will blink twice.
-  **6** Now aim the ONE FOR ALL 3 remote at your device (television) and press POWER. If your device switched off, the ONE FOR ALL 3 is ready to operate your device.
- 7** Turn your device (television) back on and try all the remote's functions to ensure they are working properly. If the functions do not work properly, repeat steps 1-6 using another code listed under your brand.
- 8** If your device (television) does not respond to the code entered, follow steps 1-6 with each code listed for your brand. If none of the codes listed for your brand operate your device (television), or if your brand is not listed at all, try the search method described on page 7.
- 9** Write your devicecode in the applicable four digit boxes provided in the battery compartment and on page 8 for future reference.

Important notes:

- Some codes are quite similar. If your device does not respond or is not functioning properly with one of the codes, try another code listed under your brand.
- For VCR setup: If your VCR's original remote control does not have a POWER key, press PLAY instead of POWER during step 6.
- Remember to press the correct device mode key before operating your device. Only one device can be assigned to each device mode key. If your original remote control operates more than one device, you need to set up each device separately.

Devices can be found under the following keys:

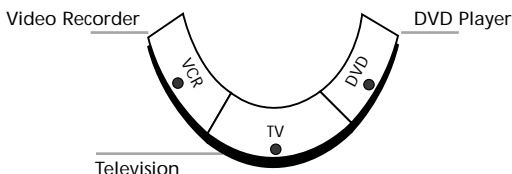






To set up for a second TV, VCR or DVD see Changing the Mode of a Device Key, Page 9.

The Search Method

If your device does not respond to the ONE FOR ALL 3 after you have tried all the codes listed for your brand, try searching for your code. The Search Method allows you to find the code for your device by scanning through all the codes contained in the memory of the ONE FOR ALL 3. The search method may also work if your brand is not listed at all.

Example: To search for your television code:

- 1 Switch your television on (not in standby) and aim your ONE FOR ALL 3 at your device.
- 2  Press the **TV** key on the ONE FOR ALL 3.
- 3  Press and hold down **MAGIC** until the ONE FOR ALL 3 red light blinks twice (the red light will blink once then twice).
- 4  Press **9 9 1**. The red light will blink twice.
- 5  Now slowly, alternate between **TV and POWER**, over and over, until your television turns off. You may have to press these keys many times (up to 200 times!), so please be patient. Remember to keep pointing the ONE FOR ALL 3 at your television when you press these keys.
- 6  As soon as your television turns off, press **MAGIC** to store the code.








The ONE FOR ALL remote should now be ready to operate your TV. Turn your TV back on and try all the remote's functions to ensure they are working properly. If some of the ONE FOR ALL 3's commands are not operating correctly, try the search method again. You may be using the wrong code.

Important notes:

- To search for the code for another device follow the instructions above only press the appropriate device key instead of TV during steps 2 and 5.
- If the original remote control of your VCR does not have a POWER key, press PLAY instead of POWER during step 5.

Once you have Set-Up your ONE FOR ALL 3, you can blink back your Set-up Code for future reference.

Example: to blink out your television code:

-  Press the **TV** key once.
-  Press and hold down **MAGIC** until the ONE FOR ALL 3 red light blinks twice (the red light will blink once then twice).
-  Press **9 9 0**. The red light will blink twice.
-  For the first digit of your four-digit code, press **1** and count all the red blinks. If there are no blinks, the digit is "0".
-  For the second digit of your four-digit code, press **2** and count all the red blinks. If there are no blinks, the digit is "0".
-  For the third digit of your four-digit code, press **3** and count all the red blinks. If there are no blinks, the digit is "0".
-  For the fourth digit of your four-digit code, press **4** and count all the red blinks. If there are no blinks, the digit is "0". Now you have your four-digit code.

Important note: To blink back the code for your other devices, press the appropriate device key during step 1.

Quick Code Reference





Make sure you write down the codes for your devices in the boxes below and in the battery compartment for future easy reference.

Device Type	Code
1. _____	<input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>
2. _____	<input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>
3. _____	<input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>

Changing the Mode of a Device Key

With your ONE FOR ALL 3 Remote it is possible to change the mode of a device key. This is useful if you want the ONE FOR ALL 3 to operate more than one of the same device types such as two Televisions or two Video Recorders for example.

Example: to program a second Television on the DVD key, you need to change the DVD key into a TV key.

-  Press and hold down the **MAGIC** key until the red light blinks twice (the red light will blink once then twice).
-  Press **9 9 2**. The red light will blink twice.
-  Press the **TV** key (the device mode you want to duplicate).
-  Now press the **DVD** key (the device mode key you want changed) and the red light will blink twice.

The DVD key of the ONE FOR ALL 3 is now ready to be set-up for your Television. To enter the Set-up code for your second TV, proceed with the setup procedure on page 6 remembering to use TV codes for the DVD key.

Resetting a Device Key

Example: to reset the DVD key back to its original mode.

- Hold down the **MAGIC** key until the red light blinks twice (the red light will blink once then twice).
- Press **9 9 2**. The red light will blink twice.
- Press the **DVD** key (the device mode you want to reset).
- Now press the **DVD** key again to confirm and the red light will blink twice.

Now your DVD key of the ONE FOR ALL 3 is ready to be programmed for your DVD player again. To enter the Set-up code for your DVD player, proceed with the setup procedure on page 6.

Advanced Features

Colour and Brightness

Depending on the functions of your original remote control, the ONE FOR ALL 3 may operate the colour and brightness settings of your television.

Colour (+) = Press and release **MAGIC** then hold **Volume (+)**

Colour (-) = Press and release **MAGIC** then hold **Volume (-)**

Brightness (+) = Press and release **MAGIC** then hold **Channel (+)**

Brightness (-) = Press and release **MAGIC** then hold **Channel (-)**

Important note: You have 5 seconds to press the Volume or Channel keys for the colour or brightness adjustments after pressing MAGIC.

Volume Punch Through

You may be able to use some functions of your Television, Video recorder or DVD player at the same time.

For example: if you are watching a programme on your video recorder, you can adjust the volume (a TV function) without pressing the TV mode key on your ONE FOR ALL 3. The table below lists some of the possibilities.

Last Device Mode Key Pressed:	You Can Control:
VCR	TV volume up and down, mute
DVD	TV volume up and down, mute

To punch through to TV volume while in the VCR or DVD mode:

- 1 Press and hold **MAGIC** until the red light blinks twice.
- 2 Press **9 9 3**.
- 3 Then press the **TV** key and the red light will blink twice.

To cancel the "Volume Punch Through":

- 1 Press and hold **MAGIC** until the red light blinks twice.
- 2 Press **9 9 3**.
- 3 Press the **Volume (+)** key and the red light will blink four times.

Auto Scan

Your ONE FOR ALL 3 comes with a special Scan function which lets you scan through every channel available on your television.

To scan the channels on your TV:

- 1 Aim the ONE FOR ALL 3 at your TV. Press the **TV** key. Press and release **MAGIC** then press the **MUTE** key.

The ONE FOR ALL 3 will send the command to advance through all the channels available on your television stopping at each channel for about three seconds. Remember, you must aim the ONE FOR ALL 3 at your television the entire time you are using scan.

- 2 When you find a channel you would like to watch, simply press **any key** to stop the scan.

Important note: Auto Scan may not work with devices that do not have Channel +/- keys on the original remote control.

Device Sleptimer

If your television has a "Sleptimer" function built in, you can access this function with your ONE FOR ALL remote. To do so:

- 1 Make sure your television is switched on (not in standby).
- 2 Press the device key (**TV**).
- 3 Point the ONE FOR ALL at your television and press and release **MAGIC** then press **POWER**. You should see the Sleptimer activate on your TV screen.
To increase the timer, simply press **POWER** again (within 5 seconds) until the timer gets to the desired time.

To deactivate the Sleptimer, repeat steps 1-3 above. During step 3, continue pressing **POWER** (within 5 seconds) until the timer indicates zero minutes.

Important note: Depending on how you used the sleptimer function on your original remote, you might need to access the sleptimer of your television in a different way (through menu for example).

ONE FOR ALL Sleptimer

If your device does **not** have a sleptimer function built-in, you can still install the ONE FOR ALL Sleptimer function.

Installing the ONE FOR ALL Sleptimer:

- 1 Press the device key of the device you want to use the sleptimer on (this is only available for **TV**).
- 2 **Press and hold MAGIC** until the red light blinks twice.
- 3 Press **9 7 0**. The red light will blink twice again.

Now your ONE FOR ALL 3 is setup to use the ONE FOR ALL Sleptimer on the device you selected in the setup above.

To activate the ONE FOR ALL Sleptimer:

It is possible to set the ONE FOR ALL Sleptimer for 15, 30, 45 or 60 minutes. To do this, first make sure your TV is switched on.

- 4 Press the device mode key (**TV**).
- 5 Press and release the **MAGIC** key and then press **POWER**. The red light will blink once to indicate the timer is activated for 15 minutes.
- 6 To increase the timer, simply press the **POWER** key again (this must be done within 5 seconds). The red light will blink twice indicating the timer is set for 30 minutes (2x15).
- 7 You can press the **POWER** to a maximum of four times. This will set the timer to 60 minutes (indicated by 4 blinks).

Once you have set the timer to the desired time, set your ONE FOR ALL remote down, pointing it at your device. When the programmed amount of time has elapsed, the ONE FOR ALL 3 will send the command for **POWER**, thereby turning off your device.

Important notes:

- The red light on the ONE FOR ALL 3 will blink every 15 seconds indicating that the remote is in sleptimer mode.
- To deactivate the timer, simply press any key on the ONE FOR ALL 3 remote.
- Once the ONE FOR ALL Sleptimer has been installed it is not necessary to repeat steps 1-3 above every time you wish to activate the timer. Simply repeat steps 4-7.
- To uninstall the ONE FOR ALL Sleptimer back to device sleptimer, repeat steps 1-3 above and the red light will blink four times.
- Remember to place the remote so it is pointing to your device when the timer is activated.
- The ONE FOR ALL Sleptimer can only be set-up for one device at a time.

ONE FOR ALL Recall (Previous Channel)

If your television has a Recall or Previous / Last Channel function, the Recall key allows you to access this function. If, however, your television does not have a Recall or Previous / Last Channel function, then you can set up your own two favourite channels with the ONE FOR ALL Recall function.

The ONE FOR ALL Recall function allows you to program up to two channels, each consisting of a maximum of 4 key presses per channel entry. This allows you to swap back and forth between two channels with the press of a single key.

- 1 Press the device key (**TV**).
- 2 Press the **MAGIC** and **RECALL** keys simultaneously, until the red light blinks twice.
- 3 Enter the first channel number **exactly as you would on your original remote** (e.g. <-/-->, <1>, <2> to get channel number 12).
- 4 Press **RECALL** once and release.
- 5 Enter the second channel number **exactly as you would on your original remote** (e.g. <-/-->, <2>, <3> to get channel number 23).
- 6 Press the **MAGIC** key, and the red light blinks twice.

Now, if you press **RECALL**, you will obtain the second channel programmed (being <23>) and if you press **RECALL** again you will obtain the first channel programmed (being <12> in our example).

Important notes:

- To enter only one channel number, skip steps 4 & 5.
- If two channel numbers have been stored previously, entering one new channel will delete the oldest entry.

To reset the RECALL key:

- 1 Press the device key (**TV**).
- 2 Press **MAGIC** and **RECALL** **simultaneously** until the red light blinks twice.
- 3 Press **RECALL** and release.
- 4 Press **MAGIC** and release and the red light will blink twice.

Trouble-Shooting

Problem:	Solution:
Your brand is not listed in the code section?	Try the search method on page 7.
The ONE FOR ALL does not operate your device(s)?	A) Try all the codes listed for your brand. B) Try the search method on page 7.
The ONE FOR ALL is not performing commands properly?	You may be using the wrong code. Try repeating the Direct Set-Up using another code listed under your brand or start the search method over again to locate the proper code.
Problems changing channels?	Enter the programme number exactly as you would on your original remote.
Video not recording?	As a safety feature on your ONE FOR ALL, you must press the Record key twice.
The ONE FOR ALL does not respond after pressing a key?	Make sure you are using new batteries and are aiming the ONE FOR ALL at your device.
The red light does not blink when you press a key?	Replace batteries with 2 fresh, new "AA/LR6" alkaline batteries.

Customer Service

If you still have questions about the operation of your ONE FOR ALL 3 universal remote and could not find the answer(s) in the trouble shooting section, you may want to contact the customer service department for assistance.

You may care to visit our Internet-site:
www.oneforall.com

Our internet-site has many advantages:

- 24 hours access
- no waiting time
- page for Frequently Asked Questions
- info about the ONE FOR ALL product range

Before contacting us, by Fax, E-mail or Phone, make sure you have the required information available by filling in the table below.

What do we need to know before you contact us:

- 1 That you have the **URC-7030** ONE FOR ALL remote.
- 2 The date of purchase (...../...../.....).
- 3 A list of your equipment/models/helpcodes(*): (see example below)

Helpcode(*)	Device	Brand	Device model nr.	Remote model nr.	SET-UP(***) code
3110805	TV	Sony	KVX-2950B	RMT-V131B	0505 (example)

(***) To obtain the SET-UP CODE, please follow the blink back procedure on page 8.

Type/model numbers can often be found in your equipment owner's manual or on the factory plate behind the device.

4. Then Fax, E-mail or Dial us:

In the UK:

e-mail : ofahelp@uebv.com (**)
fax : +31 53 432 9816
tel : 0808-1000306(*)

In Ireland:

e-mail : ofahelp@uebv.com (**)
fax : +31 53 432 9816
tel : 1-800 553199 (*)

In Australia:

e-mail : ofahelp@uebv.com (**)
fax : 03 9672 2479
tel : 1-300 888298

In South Africa:

e-mail : support@oneforall.co.za
fax : 011 298 2302
tel : 0860 100551
tel : 011 298 2300

In New Zealand:

e-mail : ofahelp@uebv.com (**)
fax : (06) 878 2760
tel : 0508 ONE 4 ALL (663 4 255)

(*) When you call us you will be asked to enter your helpcode(s). You only have to enter the helpcode(s) of those devices you have a problem with. The helpcode is a 7-digit code, which defines the ONE FOR ALL-model you have, the device type and the brand of your device. This helpcode can be found in the first column of the setup code list.

(**) Just send a blank message, you'll get auto-reply.

Televisions

Fernseher

Téléviseurs

Televisores

Televisões

Televisori

Televisies

3110991	A.R. Systems	0037
3111306	Accent	0037
3112089	Acec	0012
3110010	Admiral	0087 0093 0418 0264
3110012	Adyson	0217 0216
3111080	Agashi	0216 0264
3110015	AGB	0516
3110997	Agef	0087
3110017	Aiko	0216 0009 0037 0371 0433 0072 0264 0217
3110018	Aim	0037
3110019	Aiwa	0701
3110020	Akai	0208 0371 0037 0433 0009 0072 0218 0163 0516 0602 0556 0581 0480 0217 0631 0216 0264 0448 0178 0377 0606 0714 0708
3110021	Akiba	0218 0282 0455 0037
3110022	Akito	0037
3110023	Akura	0218 0282 0009 0412 0264 0037 0668
3111267	Alaron	0179 0216
3110024	Alba	0218 0235 0009 0418 0370 0355 0371 0037 0216 0247 0163 0581 0487 0036 0668 0579
3110029	Allorgan	0206 0294 0217
3110032	Allstar	0037
3110041	Amplivision	0217 0400 0320 0370
3110042	Amstrad	0177 0009 0516 0264 0354 0218 0371 0433 0412 0037 0648
3111094	Anam	0037 0009
3111268	Anam National	0037
3110044	Anglo	0009 0264
3110045	Anitech	0009 0264 0037
3110047	Ansonic	0370 0292 0102 0009 0037 0374 0163 0411 0259 0247 0012 0428
3110050	Apollo	0473
3110053	Arc en Ciel	0399 0109 0196 0198
3110054	Arcam	0216 0399 0217
3111307	Ardem	0486
3110057	Aristona	0037 0556 0012
3110059	Arthur Martin	0163 0400
3110060	ASA	0105 0346 0070 0104 0087
3110062	Asberg	0037
3111095	Asora	0009
3110070	Asuka	0218 0264 0216 0282 0217
3110072	Atlantic	0037 0216 0206 0259 0320
3110074	Atori	0009
3110075	Auchan	0163 0400
3110080	Audiosonic	0037 0109 0217 0370 0337 0264 0218 0486 0428
3110081	Audioton	0217 0486 0370 0264
3110085	Autovox	0087 0206 0217 0247
3111156	AWA	0011 0036 0009 0157 0374 0412 0037 0216 0606
3111081	Ayomi	0238
3110091	Baird	0109 0193 0190 0192 0072 0073 0217 0208
3110093	Bang & Olufsen	0565 0087
3110094	Barco	0380 0163
3110097	Basic Line	0218 0009 0374 0037 0163 0282
3110098	Bastide	0217
3110099	Baur	0303 0195 0512 0037 0505
3111082	Bazin	0217
3111079	Beaumarck	0178
3110103	Beko	0370 0486 0037 0714 0606 0715
3110105	Beon	0037 0418
3110106	Best	0337 0370 0421
3110107	Bestar	0037 0370 0374
3110108	Binatone	0217
3110110	Black Star	0247
3110111	Blacktron	0282

3110112	Blackway	0282
3110113	Blaupunkt	0195 0200 0327 0328 0448
3110114	Blue Sky	0218 0282 0455 0037 0487 0668 0714 0715
3110115	Blue Star	0282
3110118	Bondstec	0247
3110119	Boots	0217
3110121	BPL	0282 0037
3110123	Brandt	0109 0399 0196 0198 0335 0625
3110126	Brinkmann	0418 0037
3111030	Brionvega	0037 0087
3110128	Britannia	0216 0217
3111444	Brother	0264
3110133	Bruns	0087
3110134	BSR	0163 0294
3110138	BTC	0218
3110139	Bush	0668 0218 0235 0163 0009 0036 0282 0037 0355 0371 0374 0264 0487 0208 0581 0294 0217
3110149	Capsonic	0264
3111455	Carad	0610 0037
3110150	Carena	0455 0037
3110151	Carrefour	0036 0070
3110153	Carver	0170
3110998	Cascade	0009 0037
3110154	Casio	0037
3110155	Cathay	0037
3111231	CCE	0037 0217
3110160	Centurion	0037
3110161	Century	0087 0247 0238
3110162	CGE	0074 0084 0247 0163 0418 0370
3110167	Cimline	0009 0235 0218
3110169	City	0009
3111073	Clarivox	0418 0070
3110172	Clatronic	0218 0264 0370 0371 0217 0247 0037 0009 0102 0320 0579
3110173	Clayton	0385
3111308	CMS hightec	0217
3110186	Concorde	0009
3110187	Condor	0216 0247 0282 0320 0037 0370 0009 0102 0411 0418 0216 0009 0157 0011 0036
3110191	Contec	
3110192	Continental Edison	0109 0196 0198 0399 0487 0009 0337
3110194	Cosmel	0087 0247 0074 0084 0163
3110196	Crosley	0009 0370 0486 0421 0037 0579 0418 0208 0487 0053 0714
3110197	Crown	
3110200	CS Electronics	0247 0216 0218
3110201	CTC	0247
3110202	Curtis Mathes	0093 0166
3110203	Cybertron	0218
3111254	Daenyk	0179
3110205	Daewoo	0009 0037 0216 0374 0218 0217 0624
3110206	Dainichi	0218 0216
3110207	Dansai	0037 0264 0216 0009
3111160	Dansette	0412
3111083	Dantax	0370 0486
3111102	Datsura	0208
3110209	Dawa	0037
3110210	Daytron	0009 0374 0037
3110216	de Graaf	0208 0044 0163
3110214	Decca	0072 0033 0516 0037 0217
3111459	Deitron	0037
3110999	Denko	0264
3111103	DER	0193 0190
3110220	Desmet	0320 0037
3111000	Diamant	0037
3111310	Digiline	0037
3110232	Dixi	0009 0037 0247 0217
3110235	Domland	0394
3111255	Drean	0037
3110239	DTS	0009
3110240	Dual	0217 0259 0037 0394 0399 0303 0163
3110243	Dumont	0087 0104 0102 0217 0070 0072
3111162	Dux	0037 0012
3110247	Dynatron	0037
3110252	Elbe	0435 0238 0259 0292 0370 0163 0037 0218 0411 0610 0087 0247 0516 0102 0163
3110254	Elcit	0264 0282
3110255	Elekta	0037
3112093	ELG	
3110259	Elin	0216 0037 0105 0104 0448 0163 0009
3110260	Elite	0218 0037
3110261	Elman	0102
3110263	Elta	0009 0264 0216
3110265	Emerson	0177 0087 0178 0247 0037 0179 0371 0070 0282 0320
3110267	Emperor	0282

3110271	Erres	0037 0012	3110381	Hitachi	0036 0044 0043 0473 0163
3110272	ESC	0037			0578 0196 0198 0217 0194
3110273	Etron	0037 0009 0163			0516 0072 0037 0105 0178
3111632	Eurofeel	0264			0556
3110278	Euroman	0216 0264 0037 0217 0421	3111684	Hitachi Fujian	0108
		0370	3111170	Hitsu	0009 0455 0218
3110279	Europa	0037	3111085	Hornymphone	0037 0012
3110280	Europhon	0037 0516 0102 0217 0247	3110384	Hoshal	0218 0455
		0163	3111086	Huanyu	0374 0216
3110291	Expert	0206 0400 0259 0163	3110388	Hygashi	0217 0216
3111001	Exquisit	0037 0247	3110389	Hyper	0009 0216 0217 0247
3111639	Family Life	0037	3110391	Hypson	0037 0264 0217 0282 0455
3110294	Fenner	0374 0009			0400 0238
3110296	Ferguson	0073 0192 0190 0335 0238	3111005	Iberia	0037
		0193 0109 0625	3110393	ICE	0264 0217 0037 0371 0218
3110299	Fidelity	0193 0216 0371 0163 0264			0216 0009
		0037	3111006	Ices	0218 0216
3111164	Filsai	0217	3110395	Imperial	0037 0247 0370 0418 0163
3110301	Finlandia	0208 0346			0074 0084 0196
3110302	Finlux	0105 0104 0037 0346 0217	3110397	Indiana	0037
		0072 0163 0516 0070 0087	3111343	Ingelen	0487 0610
		0179 0102 0411 0631 0480	3110398	Ingersoll	0009
		0714	3110401	Inno Hit	0009 0072 0037 0218 0290
3110304	Firstline	0294 0216 0037 0374 0385			0217 0516 0247
		0247 0009 0163 0102 0217	3111312	Interactive	0411
		0411 0238 0072 0235 0668	3110404	Interbuy	0009 0264 0247
		0208 0624	3110405	Interfunk	0037 0012 0087 0512 0327
3110305	Fisher	0104 0217 0036 0208 0370			0163 0370 0109
		0045 0087 0157 0163 0303	3111113	Internal	0037
		0072	3110408	Intervision	0282 0217 0455 0037 0371
3110307	Flint	0037 0455 0072 0218			0377 0448 0486 0370 0394
3111002	FNR	0102			0487 0218 0102 0163 0264
3110308	Forgestone	0193			0247
3110309	Formenti	0087 0216 0320 0163	3110410	Irradio	0009 0037 0218 0247 0290
3110310	Fortress	0093 0087	3110412	Isukai	0218 0037 0282
3110313	Fraba	0370 0037	3110413	ITC	0217
3111106	Friac	0009 0037 0102 0421	3110414	ITS	0037 0371 0218 0282 0264
3110319	Frontech	0247 0264 0448 0217 0009			0216
3110322	Fujitsu	0179 0206 0072 0102 0217	3110415	ITT	0163 0480 0473 0193 0346
		0163 0643 0009			0339 0208 0179
3111457	Fujitsu General	0009 0217	3110416	ITT Nokia	0163 0473 0480 0346 0208
3110323	Funai	0264 0179 0294			0179 0339 0606 0610 0631
3110326	Galaxi	0102 0037	3110417	ITV	0264 0037 0247
3110327	Galaxis	0370 0418 0037 0102	3111314	Jean	0036
3110331	GBC	0163 0009 0374 0218	3110425	JVC	0653 0053 0190 0036 0192
3110333	GE	0109 0178 0282 0335			0193 0371 0218 0606 0643
3111003	Geant Casino	0163 0400	3110427	Kaisui	0218 0282 0037 0216 0455
3110335	GEC	0043 0072 0163 0516 0037			0217 0009
		0217	3110428	Kamp	0216
3110336	Geloso	0247 0009 0163 0374	3110429	Kapsch	0206 0163 0259 0104
3110337	General	0590 0109	3110430	Karcher	0037 0421 0370 0282 0102
3110338	General Technic	0009			0610 0264
3110339	Genexxa	0218 0037 0412	3111283	Kawasho	0216
3110345	Goldhand	0216	3111177	KB Aristocrat	0163
3110346	Goldline	0337	3110432	Kendo	0235 0247 0102 0037 0428
3110347	GoldStar	0037 0370 0290 0009 0377			0370 0411 0610 0377
		0217 0247 0216 0163 0178	3110433	Kennedy	0206 0163 0435
		0044	3110437	Kingsley	0216
3110349	Goodmans	0036 0072 0037 0009 0264	3110438	Kneissel	0435 0259 0292 0370 0238
		0516 0290 0179 0374 0487			0037 0411 0610
		0371 0556 0235 0480 0217	3110441	Kolster	0037 0102
		0624 0335	3110442	Konka	0218 0371 0037
3110350	Gorenje	0370 0421	3111315	Kontakt	0487
3110351	GPM	0218	3110443	Korpel	0037
3111248	Gradiente	0037 0053 0170	3110444	Korting	0087 0421 0370 0320
3110352	Graetz	0037 0371	3110445	Kosmos	0037
3110353	Granada	0037 0400 0226 0012 0045	3111181	Kotron	0412 0264
		0072 0108 0208 0217 0036	3111350	Kraking	0238
		0339 0516 0473 0335	3111287	KTV	0217
3110354	Grandin	0282 0218 0400 0037 0009	3111117	Kyoshu	0264 0412 0418
		0320 0163 0455 0579 0610	3110451	Kyoto	0385 0163
		0714 0715	3112153	Lecson	0037
3111107	Gronic	0102 0217	3111451	Lemair	0411
3110355	Grundig	0195 0487 0070 0037 0556	3110454	Lenco	0009 0374 0104 0163 0037
3110359	Halifax	0264 0216 0217	3110456	Lenoir	0009
3110360	Hampton	0216 0217	3110458	Lesa	0247
3111108	Hanimex	0294	3110461	Leyco	0264 0072 0037 0294 0579
3110362	Hanseatic	0037 0292 0282 0163 0394	3111072	LG	0037 0370 0290 0009 0377
		0320 0428 0370 0009 0294			0217 0247 0216 0163 0178
		0217 0087	3111008	Liesenkotter	0037 0327 0328 0012
3110363	Hantarex	0009 0037 0102	3110463	Lifetec	0009 0264 0037 0374 0218
3110364	Hantor	0037			0643 0668 0512
3111280	Harley Davidson	0179	3111240	Lloyd's	0009
3111084	Harwood	0009 0412 0037	3110472	Loewe	0512 0037 0087 0292 0370
3111678	Hauppauge	0037	3110474	Logik	0011 0033 0193 0371
3110370	HCM	0264 0009 0282 0412 0217	3111456	Logix	0668
		0218 0418 0037	3110478	Luma	0206 0037 0163 0259 0411
		0217 0009			0374 0009
3110372	Hema	0109 0196 0399	3111009	Lumatron	0206 0037 0163 0259 0217
3110374	Hifivox	0264 0037			0264 0073
3111682	Highline	0218	3110481	Lux May	0037 0009
3111110	Hikona	0208 0179 0036 0037 0218	3110485	Luxor	0194 0290 0480 0208 0163
3110377	Hinari	0009 0163 0355 0443 0487			0346 0473 0179
		0235 0294			0178
3110380	Hisawa	0282 0218 0400 0455	3111241	LXI	0037
3111004	Hit	0087	3111316	Madison	0087
			3110490	Magnadyne	0087 0247 0516 0102 0163
			3110491	Magnafon	0516 0102 0216
			3110492	Magnavox	0036 0179 0037

3111071	Magnum	0648	
3110495	Mandor	0264	
3110496	Manesth	0037 0235 0217 0264 0320	
		0294	
3110497	Manhattan	0037 0668	
3110500	Marantz	0037	
3110503	Marelli	0087	
3110504	Mark	0037 0217 0216 0374 0009	
3111342	Masuda	0218 0009 0371	
3110508	Matsui	0235 0177 0009 0355 0011	
		0033 0072 0036 0037 0556	
		0487 0217 0354 0294 0371	
		0433 0443 0579 0455 0516	
		0163 0208 0045 0195 0335	
		0043	
3110513	McMichael	0037 0556 0012	
3110517	Mediator	0037 0668	
3110518	Medion	0610	
3111121	Megas	0178	
3111291	Megatron	0346 0037 0512 0109 0247	
3110487	Melectronic	0105 0104 0374 0009 0217	
		0480 0216 0411	
		0400	
3111010	Melvox	0009 0178 0250	
3110520	Memorex	0337 0072 0009 0385	
3110521	Memphis	0037 0009	
3110522	Mercury	0087 0195 0447 0367 0388	
3110525	Metz	0587	
		0178	
3110526	MGA	0037 0668	
3111317	Micromaxx	0487 0195 0070	
3110531	Minerva	0412 0037	
3110532	Minoka	0108 0512 0037 0093 0178	
3110535	Mitsubishi	0354 0087 0033 0036 0193	
		0292 0290 0291 0370 0216	
		0609	
3110538	Mivar	0009	
3111186	Monaco	0037	
3110540	Morgan's	0093	
3111297	Motorola	0370 0512 0216	
3110543	MTC	0193	
3111187	Multibroadcast	0102	
3110545	Multistandard	0037 0668	
3111452	Multitec	0217 0009 0216 0247 0102	
3110547	Multitech	0486 0370 0037	
		0104 0216 0072 0163	
3110551	Murphy	0218	
3111791	Musikland	0166 0178	
3110553	NAD	0037	
3111124	Naiko	0374 0037	
3111125	Nakimura	0226	
3112099	NAT	0226	
3110562	National	0170 0036 0320 0455 0009	
3110564	NEC	0374 0217 0037 0011 0704	
		0037 0370 0505 0200 0556	
3110565	Neckermann	0163 0327 0418 0087 0247	
		0217 0411	
3110566	NEI	0037 0337 0371	
3110567	Nesco	0247 0179	
3111292	Netsat	0037	
3110568	Network	0337	
3111012	Neufunk	0037 0009 0556 0610	
3110572	New Tech	0037 0009 0556 0217 0448	
3110571	New World	0218	
3110574	Nicamagic	0216	
3110576	Nikkai	0072 0218 0037 0217 0264	
		0337 0216 0009 0036	
3110577	Nikko	0178	
3111249	Noblex	0037 0264	
3110578	Nobliko	0102 0070 0216	
3110579	Nogamatic	0399 0109 0196	
3110580	Nokia	0163 0480 0473 0339 0208	
		0374 0631 0606 0346	
3110582	Nordmende	0109 0399 0196 0198 0195	
		0037 0335	
3111013	Novatronic	0037 0105 0374	
3110588	Oceanic	0163 0400 0294 0208	
3112100	Odeon	0264	
3110590	Okano	0370 0037 0264 0072	
3111014	Omega	0264	
3110595	Onwa	0371 0602 0218 0433 0581	
3110596	Opera	0037	
3110598	Optimus	0250 0166	
3111299	Optonica	0093	
3110599	Orbit	0037	
3110602	Orion	0179 0235 0294 0177 0320	
		0355 0011 0037 0009 0102	
		0443 0556 0264 0412	
3111015	Orline	0037 0218	
3111192	Ormond	0385 0668	
3110605	Osaki	0072 0218 0217 0264 0037	
		0412 0374	
3111193	Osio	0037	
3110607	Oso	0218	
3110608	Osume	0157 0072 0036 0218	
3110610	Otto Versand	0505 0036 0093 0512 0037	
		0556 0195 0235 0109 0294	
		0226 0247 0303 0320 0217	
3110614	Pael	0216	
3110616	Palladium	0370 0037 0505 0200 0418	
		0556 0247 0327 0087 0163	
		0217 0411	
3111129	Palsonic	0264 0412 0037 0217 0377	
3110619	Panama	0009 0217 0264 0216 0037	
		0247	
3110620	Panasonic	0226 0650 0250 0367 0516	
		0037 0163	
3110622	Panavision	0037 0411	
3110628	Pathe Cinema	0163 0238 0216 0400 0320	
		0292	
3110629	Pathe Marconi	0109 0196 0198 0399	
3110631	Pausa	0009	
3110632	Perdio	0072 0320 0163 0037	
3110633	Perfekt	0037	
3111460	Pershin	0400	
3110634	Philco	0087 0084 0074 0418 0247	
		0163 0370 0037	
3110635	Philharmonic	0217	
3110636	Philips	0037 0556 0012 0043 0087	
		0193 0374	
3110639	Phoenix	0037 0087 0320 0486 0370	
		0385 0216 0163 0072	
3110640	Phonola	0037 0556 0012 0087 0193	
		0216	
3111336	Pilot	0037 0556	
3110642	Pioneer	0166 0037 0428 0370 0109	
3111132	Pionier	0370 0486	
3110644	Plantron	0037 0264 0009	
3111066	Playsonic	0217	
3110646	Polytron	0697	
3110647	Poppy	0009	
3110648	Portland	0374	
3111846	Powerpoint	0487	
3110650	Prandoni-Prince	0247 0516	
3110651	Precision	0217	
3110655	Prima	0009 0264	
3110656	Prinz	0072 0194	
3110658	Profex	0009 0163	
3110660	Profitronic	0037 0102	
3110662	Proline	0072 0037 0012 0625	
3110664	Prosonic	0037 0216 0370 0374 0579	
		0371 0668	
3110665	Protech	0037 0217 0009 0247 0102	
		0264 0418 0337 0668	
		0178	
3110667	Proton	0037	
3110669	Provision	0037	
3110672	Pye	0037 0374 0556 0012 0087	
3110673	Pymi	0009	
3111067	Quadra Vision	0400	
3110677	Quasar	0247 0250	
3110678	Quelle	0037 0011 0109 0512 0036	
		0217 0247 0074 0084 0327	
		0070 0104 0105 0157 0195	
		0200 0264 0290 0668	
3110679	Questa	0036	
3110680	R-Line	0037	
3110682	Radialva	0109 0218 0163 0037	
3110684	Radiola	0037 0556 0012	
3110685	Radiomarelli	0087 0516 0247 0037	
3111088	RadioShack	0037 0178	
3110686	Radiotone	0009 0037 0428 0370 0579	
		0418 0264 0412 0648	
		0070	
3110690	Rank	0625 0335 0093	
3110691	RCA	0178	
3110693	Realistic	0037	
3111016	Recor	0037	
3112101	Rectiligne	0037	
3110695	Rediffusion	0036	
3111017	Redstar	0037	
3111018	Reflex	0037	
3110698	Revox	0037 0370	
3110699	Rex	0206 0411 0247 0163 0259	
3110700	RFT	0087 0292 0370 0428 0072	
		0264	
3111338	Rhapsody	0216	
3110701	Roadstar	0009 0264 0218 0418 0037	
3110703	Robotron	0087	
3111885	Rodex	0037	
3111197	Roxy	0448	
3110711	Royal Lux	0421 0370 0412	
3110715	Saba	0625 0087 0399 0163 0109	
		0516 0196 0198 0335	
3110718	Sagem	0455 0610 0282	
3110720	Saisho	0235 0516 0177 0009 0011	
		0033 0217 0163 0264 0354	
		0290 0194 0163 0516 0339	
3110722	Salora	0516 0102	
3110723	Sambers	0037 0556 0587 0009 0217	
3110724	Samsung	0178 0448 0370 0264 0216	
		0290 0072 0208 0644	
3110726	Sandra	0216 0217	
3111139	Sanela	0238	
3110727	Sansui	0037 0371	
3112102	Santon	0009	

3110729	Sanyo	0208 0157 0292 0036 0011 0370 0339 0072 0216 0217 0104 0045 0009 0163 0037	3110884	Teletech	0009 0247 0337 0037 0668
3111318	Save	0037	3110885	Teleton	0217 0206 0163 0259 0036
3110743	SBR	0037 0556 0012	3110887	Televideon	0320 0163 0216
3110745	Schaub Lorenz	0606	3111022	Televiso	0400
3110746	Schneider	0037 0556 0012 0303 0394 0259 0217 0247 0371 0218 0163 0668 0648	3110889	Temco	0294
3110750	Scott	0178 0179	3111334	Tempest	0009 0037
3111324	Sears	0178 0179	3111991	Tennessee	0037
3110753	SEG	0217 0264 0009 0247 0036 0102 0163 0037 0216 0668 0487	3110891	Tensai	0104 0218 0037 0217 0294 0320 0009 0105 0374 0371 0377 0247
3110754	SEI	0087 0102 0163 0516 0294 0206 0037	3111023	Tenson	0320 0009
3110756	Seleco	0206 0259 0163 0411	3111461	Tevion	0037 0648 0668
3110757	Sencora	0009	3110892	Texet	0217 0374 0009
3110759	Sentra	0218 0009	3110895	Thomson	0399 0109 0335 0196 0198 0037 0490 0625
3111265	Serie Dorada	0178	3110897	Thorn	0193 0073 0190 0238 0192 0074 0084 0037 0104 0335 0512 0374
3111019	Serino	0455 0610	3111329	TMK	0178
3110762	Sharp	0093 0157 1193 0036 0294 0653 0053 0256 0193	3110900	Tokai	0072 0037 0448 0337 0163 0217 0374 0009
3110769	Shorai	0294 0179	3110901	Tokyo	0216 0448
3111263	Siam	0037	3110902	Tomashi	0282 0218
3110772	Siarem	0163 0087 0102	3110905	Toshiba	0508 0036 0070 0102 0217
3110773	Siemens	0200 0195 0327 0328 0157 0037	3110906	Towada	0102 0217
3111916	Siera	0037 0556 0012	3112109	Toyoda	0009
3110776	Siesta	0370	3112110	Trakton	0264
3110780	Silva	0216 0037	3110908	Trans Continen	0217 0037
3110781	Silver	0036 0037 0179	3112111	Transonic	0037 0455 0587 0512
3110782	Singer	0087 0102 0247 0400 0435 0009 0037	3112008	Transtec	0216
3110783	Sinudyne	0177 0087 0235 0102 0294 0163 0516 0206 0037	3110913	Trident	0516 0217
3111298	Sky	0037	3110915	Tristar	0218 0193
3112120	Skysonic	0696	3110916	Triumph	0177 0516 0346 0556 0037
3110795	Sogera	0320	3110919	Uher	0037 0206 0320 0303 0374 0418 0486 0370 0259
3110797	Solavox	0072 0163	3111148	Ultra	0192
3111927	Sonawa	0218	3110920	Ultravox	0087 0102 0374 0247 0216 0163 0037
3110801	Sonitron	0208 0370 0339 0217	3111024	Unic Line	0037 0473
3111035	Sonneclair	0037	3111215	United	0037
3110802	Sonoko	0037 0009 0264 0282 0217	3110929	Universum	0346 0105 0195 0473 0247 0480 0370 0200 0418 0011 0512 0294 0036 0157 0070 0163 0264 0104 0037 0421 0411 0290 0074 0327 0328 0505 0217 0109 0337 0177 0631 0668
3110803	Sonorol	0208 0163 0400 0505	3110930	Univox	0337 0087 0037 0163 0238
3110804	Sontec	0037 0370 0294	3110937	Vestel	0037 0163 0217
3110805	Sony	1505 0505 1651 1010 0011 0036 0102 0074	3110938	Vexa	0009 0037
3110806	Sound & Vision	0102 0218 0374	3110939	Victor	0053
3110807	Soundesign	0178 0179	3110942	Videologique	0216 0218 0217
3110809	Soundwave	0037 0320 0418	3110943	VideoSystem	0037
3111933	Spectra	0009	3110944	Videotechnic	0216 0320 0217 0374
3111143	Ssangyong	0009	3111025	Videoton	0163
3110813	Standard	0218 0009 0217 0320 0037 0374	3111322	Vidikron	0102
3110817	Starlite	0009 0163 0037 0264	3111330	Vidtech	0036 0178
3110822	Stenway	0282 0218	3110947	Viper	0337
3110823	Stern	0206 0259 0163	3110949	Visiola	0216
3111020	Strato	0037 0264 0009	3110950	Vision	0037 0320
3110828	Sunkai	0294 0355 0455 0218 0235 0037 0487	3110954	Vistar	0206
3110831	Sunstar	0371 0037 0009 0579	3110956	Vortec	0037
3110833	Sunwood	0037 0009	3110957	Voxson	0087 0037 0418
3110835	Superla	0516 0216	3110958	Waltham	0217 0418 0385 0037
3110838	SuperTech	0009 0037 0216 0556 0218	3110959	Watson	0037 0320 0163 0218 0579 0394 0009 0668
3110839	Supra	0374 0009	3110960	Watt Radio	0102 0163 0216
3110840	Susumu	0335	3110961	Wega	0036 0087 0037
3110841	Sutron	0009	3111026	Wegavox	0009
3111319	Swissline	0247	3110963	Weltblick	0037 0320
3110842	Sydney	0216 0217	3111245	Wharfedale	0037
3111021	Sytong	0216	3110967	White	
3110849	Tandberg	0367 0411 0109 0337 0196		Westinghouse	0320 0216 0037 0337
3110850	Tandy	0218 0072 0217 0247 0093	3111264	Winco	0412
3110852	Tashiko	0036 0043 0217 0170 0216 0163	3111027	Windstar	0282
3110853	Tatung	0072 0516 0217 0037 0011	3110976	Xrypton	0037
3110854	Teac	0037 0698 0512 0455 0264 0009 0412 0178	3110979	Yamishi	0282 0455 0218 0037 0217 0037
3110855	TEC	0217 0009 0247 0335 0337 0259	3110980	Yokan	0037
3111320	Tech Line	0037 0668	3110981	Yoko	0217 0037 0218 0264 0009 0421 0370 0339 0216 0247
3112107	Techica	0218	3110983	Yorx	0218
3110856	Technema	0320	3110984	Zanussi	0206 0217
3110857	Technics	0250	3111219	Zenor	0339
3111453	Tedelex	0217			
3111978	Teiron	0009			
3111328	Teknika	0179			
3110866	Teleavia	0109 0196 0399 0490			
3110870	Telecor	0037 0163 0218 0217 0259 0394			
3110872	Telefunken	0109 0399 0074 0084 0101 0335 0262 0073 0196 0037 0486 0625			
3111213	Telefusion	0037			
3110874	Telegazi	0037 0163 0259 0218 0264			
3110878	Telemester	0320 0037			
3110882	Telesonic	0037			
3110883	Telestari	0037			

Video Recorders

Videorecorder

Magnétoscopes

Videos

Vídeo Gravadores

Videoregistratori

Videorecorders

3121028	Adelsound	0004
3120012	Adyson	0072
3120019	Aiwa	0307 0000 0041 0348 0352 0037
3120020	Akai	0106 0315 0041 0020 0352 0240
3120021	Akiba	0072
3120023	Akura	0072 0041
3120024	Alba	0278 0072 0352 0020 0000 0315 0348
3120029	Allorgan	0240
3120032	Allstar	0322 0081
3120037	Ambassador	0020
3120042	Amstrad	0000 0325 0278 0072
3120045	Anitech	0072 0322
3120047	Ansonic	0004
3120057	Aristona	0081
3120060	ASA	0037 0081
3120070	Asuka	0072 0037 0081 0000 0038
3120080	Audiosonic	0278
3120081	Audioton	0020
3121156	AWA	0075 0037 0278 0043
3120091	Baird	0106 0278 0104 0041 0000
3120093	Bang & Olufsen	0499
3120097	Basic Line	0278 0020 0072
3120107	Bestar	0278 0020
3120109	Black Panther	0278
3120113	Blaupunkt	0226 0081 0154 0227 0162 0195
3120114	Blue Sky	0037 0348 0072 0352
3120118	Bondstec	0020 0072
3120120	Bosch	0154
3120123	Brandt	0041 0206 0320 0321 0493
3120126	Brinkmann	0348
3120139	Bush	0072 0278 0315 0352 0000 0348
3120150	Carena	0081
3120151	Carrefour	0045
3120154	Casio	0000
3120155	Cathay	0278
3120156	Catron	0020
3120162	CGE	0041 0000
3120167	Cimilinc	0072
3120172	Clatronic	0020 0072
3120180	Combitech	0352
3120187	Condor	0020 0278
3120197	Crown	0278 0020 0045 0352 0637 0642
3120205	Daewoo	0072 0278
3120207	Dansai	0072 0278
3120210	Daytron	0278
3120216	de Graaf	0042 0081 0104 0048
3120214	Decca	0000 0041 0081 0008 0067 0348
3121459	Deitron	0278
3120999	Denko	0072
3121000	Diamant	0037
3120240	Dual	0041 0081 0278 0000
3120243	Dumont	0000 0081 0104
3120252	Elbe	0278 0038
3120253	Elcotech	0072
3120259	Elin	0240
3121031	Elsay	0072
3120263	Elta	0072 0278
3120265	Emerson	0072 0045
3120272	ESC	0278 0240 0020
3120274	Etzuko	0072
3120280	Europhon	0020
3120294	Fenner	0020
3120296	Ferguson	0041 0320 0321 0493 0000 0278
3120299	Fidelity	0000 0072 0325 0240
3120301	Finlandia	0104 0081 0042 0000 0048
3120302	Finlux	0000 0081 0104 0042
3120304	Firstline	0072 0348 0043 0037 0045 0042 0278
3120305	Fisher	0047 0104 0038 0020
3120319	Frontech	0020 0322
3120322	Fujitsu	0000
3120323	Funai	0000
3120326	Galaxi	0000
3120331	GBC	0020
3120335	GEC	0081
3120337	General	0020
3120338	General Technic	0348
3120339	Genexxa	0104
3120345	Goldhand	0072
3120347	GoldStar	0037 0000
3120349	Goodmans	0000 0072 0240 0278 0062 0037 0020 0081 0348 0637
3121248	Gradiente	0008

3120352	Graetz	0041 0104 0240
3120353	Granada	0104 0048 0081 0240 0037 0226 0042 0000
3120354	Grandin	0072 0037 0020 0000 0278
3120355	Grundig	0195 0081 0347 0226 0320 0348
3121108	Hanimex	0352
3120362	Hanseatic	0037 0278 0081
3120364	Hantor	0020
3121084	Harwood	0072
3120370	HCM	0072 0322
3120377	Hinari	0004 0072 0352 0041 0322 0278
3120380	Hisawa	0352
3120381	Hitachi	0042 0041 0000 0240 0081 0004 0104
3121085	Hornophone	0081
3120391	Hypson	0072 0278 0352
3120394	Impego	0020
3120395	Imperial	0000 0240
3120398	Ingersoll	0004 0240
3120401	Inno Hit	0020 0240 0278 0322 0072
3120404	Interbuy	0037 0072
3120405	Interfunk	0081 0104
3121113	Internal	0278
3121114	International	0278
3120408	Intervision	0000 0278 0037 0348
3120410	Irradio	0072 0037 0081
3120415	ITT	0106 0041 0384 0104 0240 0048
3120416	ITT Nokia	0048
3120417	ITV	0278 0037 0020
3120425	JVC	0041 0067 0008 0206 0207 0384
3120427	Kaisui	0072
3120430	Karcher	0278
3120432	Kendo	0106 0315 0348 0072 0037
3120434	Kenwood	0041 0038
3121032	Kimari	0047
3120438	Kneissel	0352 0348 0037
3120443	Korpel	0072
3120448	Kuba	0047
3122095	Kuwa	0226
3120451	Kyoto	0072
3120461	Leyco	0072
3121072	LG	0037 0000 0278
3120463	Lifetec	0348
3120472	Loewe	0081 0037 0004 1162 0162
3120474	Logik	0004 0240 0072 0106
3121009	Lumatron	0278
3120485	Luxor	0106 0043 0072 0062 0104 0047 0048
3120492	Magnavox	0081
3120496	Manesth	0072 0045 0081
3120500	Marantz	0081 0038 0062
3120504	Mark	0278 0020
3121033	Marquant	0322
3120508	Matsui	0004 0348 0037 0240 0352 0000
3120517	Mediator	0081
3120518	Medion	0348 0352
3120487	Melectronic	0000 0037 0038
3120520	Memorex	0104 0000 0037 0048 0047
3120521	Memphis	0072
3120525	Metz	0195 0347 0081 1162 0162 0226 0227 0459
3121323	Micormay	0348
3120529	Migros	0000
3120531	Minerva	0195
3120535	Mitsubishi	0043 0067 0075 0081 0608
3120547	Multitech	0000 0072 0020 0104 0322
3120551	Murphy	0000
3120553	NAD	0104
3120562	National	0226 0162
3120564	NEC	0041 0038 0067 0104 0037
3120565	Neckermann	0041 0081
3120567	Nesco	0072 0000 0352
3120576	Nikkai	0020 0072 0278
3120580	Nokia	0104 0106 0315 0041 0278 0240 0048 0042 0081
3120582	Nordmende	0041 0384 0320 0321 0207 0528 0067 0493
3120588	Oceanic	0000 0048 0106 0081 0104 0041
3120590	Okano	0315 0348 0072 0322 0278
3120602	Orion	0004 0352 0348
3120604	Orson	0000
3120605	Osaki	0000 0037 0072
3120610	Otto Versand	0081
3120616	Palladium	0072 0315 0037 0041 0004 0240
3121129	Palsonic	0072 0000
3120620	Panasonic	1162 0162 0226 0227 0459
3120628	Pathe Cinema	0004 0043
3120629	Pathe Marconi	0041
3120632	Perdio	0000
3120634	Philco	0038 0072
3120636	Philips	0081
3120640	Phonola	0081

3120642	Pioneer	0067 0081 0042
3120648	Portland	0020 0278
3120656	Prinz	0000
3120658	Profex	0322
3120660	Profitronic	0081 0240
3120662	Proline	0000 0320 0321
3121194	Prosc0	0278
3120664	Prosonic	0278 0000
3120665	Protech	0081
3120669	Provision	0278
3120672	Pye	0081
3120678	Quelle	0081
3120682	Radialva	0037 0072 0081 0048
3120684	Radiola	0081
3120690	Rank	0041
3120699	Rex	0041 0384
3120700	RFT	0020 0072
3120701	Roadstar	0240 0072 0037 0278
3120710	Royal	0322 0072
3120715	Saba	0041 0206 0207 0320 0321 0384 0062 0580 0278
3120720	Saisho	0004 0348
3120722	Salora	0043 0106 0104
3120724	Samsung	0240 0432
3120725	Samurai	0020
3120727	Sansui	0041 0067 0106 0072 0322 0348
3120728	Sanwa	0004
3120729	Sanyo	0104 0047 0048 0067
3120742	Saville	0352 0278 0240
3120743	SBR	0081
3121200	Scan Sonic	0240
3120745	Schaub Lorenz	0041 0104 0000 0106 0315
3120746	Schneider	0072 0000 0037 0081 0278 0240
3122103	Seaway	0278
3120753	SEG	0072 0240 0322 0278 0075
3120755	Sei-Sinudyne	0004 0081
3120756	Seleco	0041 0008 0384 0020 0037
3121250	Semivox	0045
3120759	Sentra	0072 0020
3121910	Setron	0072
3120762	Sharp	0048 0062 0037
3120766	Shintom	0072 0104
3120768	Shivaki	0037
3120769	Shorai	0004
3120773	Siemens	0195 0037 0104 0081
3121916	Siera	0081
3120780	Silva	0037
3120781	Silver	0278
3120783	Sinudyne	0004 0081
3120797	Solavox	0020
3120801	Sonitron	0047
3121035	Sonneclair	0072
3120802	Sonoko	0278
3120803	Sonolor	0048
3120804	Sontec	0037
3120805	Sony	0033 0032 0106 1032
3120809	Soundwave	0037
3121143	Ssangyong	0072
3120813	Standard	0278
3120817	Starlite	0037 0104
3120823	Stern	0278
3120828	Sunkai	0348 0278
3120831	Sunstar	0000
3120832	Suntronic	0000
3120833	Sunwood	0072
3120839	Supra	0037 0240
3120843	Symphonic	0000 0072
3120847	Taisho	0004
3120849	Tandberg	0278
3120852	Tashiko	0000 0048 0240 0081 0037
3120853	Tatung	0000 0041 0081 0048 0043 0348 0352
3120854	Teac	0041 0000 0278 0037 0081 0307
3120855	TEC	0020 0278 0072
3120859	TechniSat	0348
3120866	Teleavia	0041
3120872	Telefunken	0041 0320 0321 0384 0493 0278
3120884	Teletech	0322 0072 0278 0000
3121334	Tempest	0020
3120890	Tenosal	0072
3120891	Tensai	0000 0322 0037 0072 0004
3121461	Tevion	0348
3120895	Thomson	0041 0384 0320 0206 0321 0493 0528
3120897	Thorn	0041 0104 0037
3120900	Tokai	0072 0037 0041 0104
3122002	Tokiwa	0072
3120904	Topline	0348
3120905	Toshiba	0045 0041 0384 0043 0081
3120906	Towada	0322 0072
3122110	Trakton	0020
3120918	TVA	0020
3120919	Uher	0037 0240
3120920	Ultravox	0278

3120924	Unitech	0240
3120926	United	
	Quick Star	0278
3120929	Universum	0000 0325 0081 0240 0037 0106 0348 0195 0322
3120939	Victor	0008 0067
3120959	Watson	0081 0352
3120963	Weltblick	0037
3120979	Yamishi	0072 0278
3120980	Yokan	0072
3120981	Yoko	0037 0072 0020 0240

DVD Player

DVD Spieler

Lecteur DVD

DVD

Leitor de DVD

Lettore DVD

DVD speler

3182085	3DLAB	0539
3182155	Afreey	0698
3180139	Bush	0699 0690 0689
3182192	cineULTRA	0699
3180217	Denon	0490
3181233	Denver	0699
3182092	Denzel	0665
3180222	Diamond	0651
3180240	Dual	0665
3180263	Elta	0690
3182165	Encore	0698
3182136	Enzer	0665
3180347	GoldStar	0591
3180355	Grundig	0539 0695 0652
3180366	Harman/Kardon	0702
3180381	Hitachi	0665 0573
3182145	JMB	0695
3180434	Kenwood	0490
3181729	Kiss	0665
3182153	Lecson	0696
3180454	Lenco	0699
3181072	LG	0591
3180492	Magnavox	0503
3180500	Marantz	0539
3180508	Matsui	0651 0695
3181775	Micromedia	0503
3180528	Micromega	0539
3181783	Monyka	0665
3181012	Neufunk	0665
3180594	Onkyo	0503
3180598	Optimus	0525
3180602	Orion	0695
3180603	Oritron	0651
3180620	Panasonic	0490
3180636	Philips	0539 0503
3180641	Phonotrend	0699
3180642	Pioneer	0525 0571
3180662	Proline	0652
3181865	Raite	0665
3181871	REC	0490 0689
3180701	Roadstar	0699 0690 0689
3181340	Sampo	0698
3180724	Samsung	0573
3180727	Sansui	0695
3180753	SEG	0665
3181922	SM Electronic	0690
3180805	Sony	0533
3180857	Technics	0490
3180891	Tensai	0690
3181461	Tevion	0651
3180895	Thomson	0551
3180900	Tokai	0665
3180905	Toshiba	0503
3180929	Universum	0591
3182156	Wesder	0699
3181245	Wharfedale	0696
3180977	Yamaha	0490
3182066	Yamakawa	0665
3180987	Zenith	0503 0591

Guarantee UK UNIVERSAL ELECTRONICS INC./ONE FOR ALL warrants to the original purchaser that this product will be free from defects in materials and workmanship under normal and correct use for a period of one (1) year from the date of original purchase. This product will be replaced free of charge if it has been proven to be defective within the one (1) year warranty period. This warranty does not cover cartons, carrying cases, batteries, broken or marred cabinets or any other item used in connection with the product. Any further obligation than listed above is excluded. To obtain warranty service during the warranty period, please call us at the number mentioned on the Customer Service page. Please notice that we need your purchase receipt so that we may establish your eligibility for service.

GARANTIE D UNIVERSAL ELECTRONICS INC./ONE FOR ALL garantiert dem Kunden, dass dieses Produkt bei sachgemäßem und ordentlichem Gebrauch für die Dauer eines Jahres vollkommen frei von Defekten materieller oder technischer Art bleiben wird, gerechnet ab Kaufdatum. Falls erwiesen werden kann, dass innerhalb der Garantiezeit eines Jahres ein Defekt entstanden ist, wird dieses Produkt gebührenfrei ersetzt, falls besagtes Produkt innerhalb der Garantiezeit auf Kosten des Kunden zurückgeschickt wird. Diese Garantie erstreckt sich nicht auf Verpackungen, Transportbehältnisse, Batterien, zerbrochene oder beschädigte Gehäuse oder andere Objekte, die in Verbindung mit dem Produkt verwendet werden. Jegliche weitere Verpflichtung als die oben aufgeführte wird ausgeschlossen. Um unseren Garantieservice innerhalb der Garantiezeit in Anspruch nehmen zu können, wählen Sie bitte die Nummer die Sie auf der Kundendienstseite finden um weitere Instruktionen zu erhalten. Bitte beachten Sie, dass wir Ihren Kaufbeleg brauchen um fest zu stellen ob Sie Anspruch auf unseren Garantieservice erheben können.

GARANTIE F UNIVERSAL ELECTRONICS INC./ONE FOR ALL garantit à l'acheteur d'origine que ce produit est certifié franc de défauts matériels et de main d'œuvre durant une période d'un (1) an à partir de la date d'achat original à la condition exclusive que ce produit ait été utilisé de manière normale et correcte. Ce produit sera remplacé gratuitement s'il s'est révélé défectueux pendant ladite période d'un (1) an, produit devant être retourné à la charge du client durant la période de garantie. Cette garantie ne saurait couvrir d'aucune manière que ce soit emballages en carton, coffrets portables quelconques, piles, corps d'appareil cassé ou endommagé ou tout autre article utilisé en combinaison avec ce produit. Nous nous réservons le droit de rejeter tout autre engagement que ceux cités plus haut. Pour pouvoir obtenir le service de garantie durant la période de garantie, veuillez nous contacter au numéro mentionné sur la page "Service Consommateurs" pour les instructions nécessaires. Veuillez noter que la preuve d'achat est obligatoire afin de pouvoir déterminer votre droit à ce service.

GARANTIA E UNIVERSAL ELECTRONICS/ONE FOR ALL garantiza al comprador que este producto estará libre de defectos materiales o de fabricación, al menos durante 1 año desde la fecha actual de su adquisición, y en caso de que se utilice de un modo normal y correcto. Este producto será sustituido de forma gratuita siempre y cuando se pueda demostrar que es defectuoso y que esto haya sucedido dentro del año de garantía, corriendo a cuenta del comprador los gastos de su devolución. Esta garantía no cubre embalajes, maletines, envoltorios, pilas, armarios u otros objetos utilizados en conexión con este producto. Se excluyen otras obligaciones, cualesquiera que sean, además de las mencionadas más arriba. Para obtener servicio de garantía dentro del periodo correspondiente a ésta, por favor, llámenos al número de teléfono que se menciona en la página de Servicio de Atención al Cliente. Por favor, asegúrese de tener su recibo o ticket de compra para que podamos establecer su legitimidad a este servicio.

GARANTIA P A UNIVERSAL ELECTRONICS INC./ONE FOR ALL garante ao cliente a protecção deste produto no que respeita a defeitos de fabrico de material, dentro de um período de uso correcto e normal de 1 ano a partir da data da compra do mesmo produto. Este produto será substituído sem qualquer encargo no caso de ter sido comprovada qualquer avaria dentro do período de 1 ano e após o seu retorno (custos de envio da responsabilidade do consumidor) dentro deste mesmo prazo. Esta garantia não cobre embalagens de cartão, caixas, pilhas, ou outros itens usados em conjunto com este produto. Qualquer outra obrigação para além daquela acima descrita não será tida em consideração. Para obter o serviço de garantia durante o período a este destinado, para mais informações contacte-nos no número mencionado na página do Serviço de Apoio ao Cliente. Por favor tome nota que se lhe é pedido o comprovativo de compra, de forma a que possamos confirmar a sua legitimidade para este serviço.

GARANZIA I La compagnia Universal Electronics inc./ ONE FOR ALL garantisce l'acquisto originale che questo prodotto sarà esente da difetti di mano d'opera dietro l'utilizzo proprio di 1 anno. Questo prodotto sarà sostituito gratuitamente se verrà provato che è difettoso entro l'anno di garanzia e ovviamente accompagnato dalla prova dello scontrino che assicura la data d'acquisto. La garanzia non copre la scatola, l'imballaggio, le pile o ogni altro articolo che abbia a che vedere con il prodotto. Non ci sono ulteriori obblighi di qui sopra elencati. Per accedere al nostro servizio al cliente durante l'anno di garanzia potete chiamare al seguente numero telefonico che trovate sulla pagina "Servizio Clienti". Vi chiediamo cortesemente di conservare lo scontrino affinché noi possiamo stabilire la vostra credibilità, per richiedere un nostro servizio.

GARANTIE NL UNIVERSAL ELECTRONICS INC./ONE FOR ALL garandeert de klant, dat dit produkt bij normaal en correct gebruik vrij van materiële of technische defecten zal blijven voor een periode van één jaar, gerekend vanaf de datum van aankoop. Als aangetoond kan worden dat binnen de periode van één jaar een defect is ontstaan, zal dit produkt gratis vervangen worden als het genoemde produkt op kosten van de klant binnen de garantieperiode teruggestuurd wordt. Deze garantie is niet van toepassing voor verpakkingen, dozen voor transport, batterijen, gebroken of beschadigde behuizing of enig ander object, dat in verbinding met dit produkt gebruikt wordt. Elke andere verplichting dan het bovengenoemde wordt uitgesloten. Om gebruik te maken van onze garantieservice tijdens de garantieperiode, belt u het nummer dat u vindt op de Klantenservice pagina. Wij maken u erop attent dat wij uw bewijs van aankoop nodig hebben om vast te stellen of u voor deze garantieservice in aanmerking komt.

URC-7030
701927



Printed on Recycled Paper

DD-1001