

MANUFACTURER'S CODES

Setup Codes For Audio Amplifiers

GE	0078
JVC	0331
Sony	0689
Soundesign	0078
Victor	0331
Wards	0078
Yamaha	0354

Setup Codes For Audio Receivers

ADC	0531
Aiwa	1089,1405,0158,0121
Capetronic	0531
Carver	1089,1189,0042,0360
Casio	0195
Clarinette	0195
Denon	1104,1160
Fisher	0042,0360,0219
Garrard	0463
Harman/Kardon	0110
JBL	0110
JVC	0074
Kenwood	1313,1027,1570,1569, 0186,0042
Lloyd's	0195
MCS	0039
Magnavox	1089,1189,0531,0195, 0391
Marantz	1089,1189,0039
Modulaire	0195
NAD	0320
Nakamichi	0097,0347
Onkyo	0135
Optimus	1023,0531,0670,0186, 0042,0219
Panasonic	1518,0039
Penney	0195
Philips	1089,1189,1269,1120
Philips	0391
Pioneer	1023,0531,0630
Proscan	1254
Quasar	0039
RCA	1023,1254,0531,0360, 0530
Realistic	0195
Sansui	1089
Sanyo	0219
Sharp	0186
Sherwood	0491,0502
Sony	1058,1158,1258,0158, 0474
Soundesign	0670
Sunfire	1313
Teac	0463
Technics	1308,1309,1518,0039
Thorens	1189
Victor	0074
Wards	0158
Yamaha	0176,1176,0186
Yorx	0195

Setup Codes For Cable Converters

Allegro	0153,0315
Antronix	0022
Archer	0153,0797,0022

Cabletenna	0022
Cableview	0022
Century	0153
Citizen	0153,0315
Colour Voice	0025,0031
Comtronics	0040
Contec	0019
Eastern	0002
Emerson	0797
Everquest	0015,0040
Focus	0400
Garrard	0153
Gemini	0015,0797
General Instrument	0476
GoldStar	0040
Goodmind	0797
Hamlin	0020
Jasco	0015,0153,0315
Jerrold	0476,0012,0015
Magnavox	0027
Memorex	0000
Motorola	0476
Movie Time	0063
NSC	0063
Novaplex	0618
Oak	0019
Optimus	0021
Panasonic	0000,0021
Paragon	0000
Philips	0305,0153,0025,0031, 0027
Pioneer	0877,0533
Pioneer	0533
Popular Mechanics	0400
Pulsar	0000
Quasar	0000
RCA	0021
RadioShack	0015,0315,0797,0883
Recoton	0400
Regal	0020
Regency	0002
Runco	0000
SL Marx	0040
Samsung	0040
Scientific Atlanta	0477,0877
Signal	0015,0040
Sprucer	0021
Starcom	0015
Stargate	0015,0040,0797
Starquest	0015
TV86	0063
Televue	0040
Timeless	0418
Tocom	0012
Toshiba	0000
Tusa	0015
Unika	0153,0022
Universal	0153,0022
Viewmaster	0883
Viewstar	0063,0027
Zenith	0525,0000
Zentek	0400

Setup Codes For CD Players

Aiwa	0157,0124
Burmester	0420
California Audio Labs	0029,0303

Carver	0157,0179
DKK	0000
Denon	0003
Emerson	0305
Fisher	0179
Garrard	0420
Genexxa	0032,0305
Harman/Kardon	0157,0173
Hitachi	0032
JVC	0072
Kenwood	0826,0626,0028,0037, 0190
Krell	0157
LXI	0305
Linn	0157
MCS	0029
MTC	0420
Magnavox	0157,0305
Marantz	0626,0029,0157,0180
Mission	0157
NSM	0157
Onkyo	0101
Optimus	1063,0032,0000,0179, 0305,0037,0420,0145, 0468
Panasonic	0029,0303
Parasound	0420
Philips	0626,0157
Pioneer	1063,0032,0305,0468
Polk Audio	0157
Proton	0157
QED	0157
Quasar	0029
RCA	0032,0179,0305,0053, 0468
Realistic	0179,0420,0180
Rotel	0157,0420
SAE	0157
Sansui	0157,0305
Sanyo	0179
Scott	0305
Sears	0305
Sharp	0861,0037,0180
Sherwood	1067,0180
Sonic Frontiers	0157
Sony	0490,0000,0185
Soundesign	0145
Tascam	0420
Teac	0420,0180
Technics	0029,0303
Victor	0072
Wards	0157,0053
Yamaha	0888,0036,0187

Setup Codes For DVD Players

Apex	0672
Denon	0490
Fisher	0670
GE	0522
GPX	0769
Gradiente	0651
Hitachi	0573,0664
Hiteker	0672
JVC	0558,0623
Kenwood	0534
Konka	0711,0719
Magnavox	0503
Magnavox	0675

Marantz	0539
Mitsubishi	0521
Onkyo	0503
Optimus	0571
Oritron	0651
Panasonic	0490,0677,0632
Philips	0503,0539
Pioneer	0525,0571,0632
Proscan	0522
RCA	0522,0571
Samsung	0573
Sony	0533
Technics	0490
Theta Digital	0571
Toshiba	0503
Yamaha	0490,0545
Zenith	0503,0591

Setup Codes For Home Automation

One For All	0167
Security System	0167
Universal X10	0167
X10	0167

Setup Codes For Miscellaneous Audio

Aiwa	0159,0010
JVC	0073
Sony	0159,0010

Setup Codes For Video Accessories

Archer	0160
GC Electronics	0160
Jebsee	0160
RadioShack	0160
TeleCaption	0171

Setup Codes For Satellite Receivers

AlphaStar	0772
Echostar	0775,1005
Expressvu	0775
GE	0566
General Instrument	0361,0627,0869
HTS	0775
Hitachi	0819
Hughes Network Systems	0749
JVC	0775
Jerrold	0361,0627
Magnavox	0724,0722
Memorex	0724
Mitsubishi	0749
Next Level	0869
Panasonic	0701
Philips	0749,0724,0722,1076
Primestar	0361,0627
Proscan	0392
RCA	0566,0143,0855,0392
RadioShack	0869
Samsung	1109
Sony	0639
Star Choice	0869
Toshiba	0749,0790
Uniden	0724,0722
Zenith	0856

Setup Codes For TVs

AOC	0030,0019
Admiral	0093,0463
Aiko	0092
Akai	0030
Alaron	0179
America Action	0180
Anam	0180
Audiovox	0451,0180,0623,0092
Baysonic	0180
Belcor	0019
Bell & Howell	0154,0016
Bradford	0180
Brockwood	0019
Broksonic	0236,0463
CXC	0180
Candle	0030,0056
Carnivale	0030
Carver	0054
Celebrity	0000
Cineral	0451,0092
Citizen	0060,0030,0056,0092
Concerto	0056
Contec	0180
Craig	0180
Crosley	0054
Crown	0180
Curtis Mathes	0047,1147,1347,0054, 0154,0051,0451,0093, 0060,0030,0056,0145, 0016,0166
Daewoo	0451,0019,0623,0624, 0092
Daytron	0019
Denon	0145
Dumont	0017,0019
Electroband	0000
Emerson	0154,0236,0463,0180, 0178,0179,0019,0623, 0624
Envision	0030
Fisher	0154
Fujitsu	0179
Funai	0180,0179,0171
Futuretech	0180
GE	0047,1147,1347,0051, 0451,0093,0178,0021
Gibraltar	0017,0030,0019
GoldStar	0030,0178,0056,0019
Gradiente	0053,0056
Grunpy	0180,0179
Hallmark	0178
Harley Davidson	0179
Harman/Kardon	0054
Harvard	0180
Hitachi	0056,0145,0016
Infinity	0054
Inteq	0017
JBL	0054
JCB	0000
JVC	0053
KEC	0180
KTV	0180,0030
Kenwood	0030,0019
Konka	0707,0628,0632,0638, 0703
LG	0056
LXI	0047,0054,0154,0156,

	0178
Logik	0016
Luxman	0056
MGA	0150,0030,0178,0019
MTC	0060,0030,0056,0019
Magnavox	0054,1254,0030,0179
Majestic	0016
Marantz	0054,0030
Matsushita	0250
Megatron	0178,0145
Memorex	0154,0250,0463,0150, 0178,0179,0056,0016
Midland	0047,0017,0051
Minutz	0021
Mitsubishi	0093,0150,0178,0019
Motorola	0093
Multitech	0180
NAD	0156,0178,0166
NEC	0030,0056,0019
NTC	0092
Nikko	0030,0178,0092
Onwa	0180
Optimus	0154,0250,0166
Optonica	0093
Orion	0236,0463,0179
Panasonic	0051,0250
Penney	0047,1347,0156,0051, 0060,0030,0178,0021, 0056,0019
Philco	0054,0463,0030,0145, 0019
Philips	0054
Pilot	0030,0019
Pioneer	0166
Portland	0019,0092
Prism	0051
Proscan	0047
Proton	0178
Pulsar	0017,0019
Quasar	0051,0250
RCA	0047,1047,1147,1247, 1347,1447,0090,0051, 0093,0019
RadioShack	0047,0154,0180,0030, 0178,0056,0019
Realistic	0154,0180,0030,0178, 0056,0019
Runco	0017,0030
SSS	0180,0019
Sampo	0030
Samsung	0060,0030,0178,0056, 0019
Sansei	0451
Sansui	0463
Sanyo	0154
Scimitsu	0019
Scotch	0178
Scott	0236,0180,0178,0179, 0019
Sears	0047,0054,0154,0156, 0178,0179,0056,0171
Semivox	0180
Semp	0156
Sharp	0093
Shogun	0019
Signature	0016
Sony	0000
Soundesign	0180,0178,0179
Squareview	0171

Starlite	0180
Supreme	0000
Sylvania	0054,0030
Symphonic	0180,0171
TMK	0178,0056
TNCi	0017
Tandy	0093
Technics	0051,0250
Technol Ace	0179
Techwood	0051,0056
Teknika	0054,0180,0150,0060, 0179,0056,0019,0016, 0092
Telefunken	0056
Toshiba	0154,0156,0060
Toshiba	1256
Vector Research	0030
Victor	0053
Vidikron	0054
Vidtech	0178,0019
Wards	0054,0030,0178,0021, 0179,0056,0019,0016
White Westinghouse	0463,0623,0624
Yamaha	0030,0019
Zenith	0017,0463,0624,0016, 0092

Setup Codes For TV/VCR Combos

Broksonic	0002, 0479 (for TV use 0463)
Citizen	0278
Colt	0072
Curtis Mathes	0035 (for TV use 0051)
Daewoo	0278 (for TV use 0624)
Emerson	0002, 0278 (for TV use 0624), 0294 (for TV use 0236), 0479 (for TV use 0463)
Funai	0000
GE	0035 (for TV use 0051), 0048 (for TV use 0093), 0060 (for TV use 0047),0240
GoldStar	0037 (for TV use 0056)
Harley Davidson	0000
Hitachi	0000
Lloyd's	0000
Magnasonic	0278
Magnavox	0000, 0081 (for TV use 0054)
Magnin	0240
Memorex	0037, 0162 (for TV use 0250), 1037, 1162, 1262
MGA	0240
Mitsubishi	0048 (for TV use 0093)
Optimus	0162 (for TV use 0250), 1162, 1262
Orion	0000, 0479 (for TV use 0463)
Panasonic	0035 (for TV use 0051), 0162 (for TV use

	0250), 1162, 1262
Penney	0035 (for TV use 0051), 0037 (for TV use 0056), 0240
Quasar	0035 (for TV use 0051), 0162 (for TV use 0250)
RadioShack	1037
RCA	0035 (for TV use 0051), 0048 (for TV use 0093), 0060 (for TV use 0047), 0240
Sansui	0000, 0479 (for TV use 0463)
Sanyo	0240
Sears	0000, 0037 (for TV use 0056)
Sharp	0048 (for TV use 0093)
Sony	0000, 0032 (for TV use 0000)
Sylvania	0081 (for TV use 0054)
Symphonic	0000, 0563
Thomas	0000
White Westinghouse	0278 (for TV use 0624)
Zenith	0000, 0637 (for TV use 0624)

Setup Codes For VCRs

Admiral	0048, 0209
Adventura	0000
Aiko	0278
Aiwa	0037, 0000, 0307
Akai	0041
America Action	0278
American High	0035
Asha	0240
Audiovox	0037
Beaumarck	0240
Bell & Howell	0104
Broksonic	0184, 0121, 0209, 0002, 0479
CCE	0072, 0278
Calix	0037
Canon	0035
Capehart	0020
Carver	0081
Cineral	0278
Citizen	0037, 0278
Colt	0072
Craig	0037, 0047, 0240, 0072, 0271
Curtis Mathes	0035, 0060, 0162, 0041
Cybernex	0240
Daewoo	0045, 0278, 0020, 0561
Daytron	0020
Denon	0042
Dynatech	0000
Electrohome	0037
Electrohome	0037
Emerex	0032
Emerson	0037, 0184, 0000, 0121, 0043, 0209, 0002, 0278, 0479, 0561, 0208

Fisher	0047,0104	RCA	0035,0060,0048,0042, 0240
Fuji	0035,0033	RCA	0060
Funai	0000	RadioShack	1037,0000
GE	0035,0060,0048,0240	Radix	0037
Garrard	0000	Randex	0037
Go Video	0432,0526,0643	Realistic	0035,0037,0048,0047, 0000,0104,0046
GoldStar	0037,0038	ReplayTV	0614,0616
Gradiente	0000,0008	Runco	0039
HI-Q	0047	STS	0042
Harley Davidson	0000	Samsung	0045,0240
Harman/Kardon	0081,0038	Samtron	0643
Harwood	0072	Sanky	0048,0039
Headquarter	0046	Sansui	0000,0067,0209,0041, 0479,0271
Hitachi	0000,0042,0041	Sanyo	0047,0240,0104,0046
HughesNetworkSystems	0042	Scott	0184,0045,0121,0043
JVC	0067,0041,0008	Sears	0035,0037,0047,0000, 0042,0104,0046
Jensen	0041	Semp	0045
KEC	0037,0278	Sharp	0048
KLH	0072	Shintom	0072
Kenwood	0067,0041,0038	Shogun	0240
Kodak	0035,0037	Singer	0072
LXI	0037	Sony	0035,0032,1032,0000, 0636,0033
Lloyd's	0000,0208	Sylvania	0035,0081,0000,0043
Logik	0072	Symphonic	0000
MEI	0035	TMK	0240,0208
MGA	0240,0043	Tatung	0041
MGN Technology	0240	Teac	0000,0041
MTC	0000,0240	Technics	0035,0162
Magnasonic	0278	Teknika	0035,0037,0000
Magnavox	0035,0039,0081,0000	Thomas	0000
Magnin	0240	Tivo	0618,0636
Marantz	0035,0081	Toshiba	0045,0043
Marta	0037	Totevision	0037,0240
Matsushita	0035,0162	Unitech	0240
Memorex	0035,0037,1037,0048, 0039,0047,0162,1162, 1262,0000,0240,0104, 0209,0479,0046,0307	Vector	0045
Minolta	0042	Vector Research	0038
Mitsubishi	0048,0067,0043	Video Concepts	0045
Motorola	0035,0048	Videosonic	0240
Multitech	0000,0072	Wards	0035,0060,0048,0047, 0081,0000,0042,0240, 0072
NEC	0067,0104,0041,0038	White Westinghouse	0209,0072,0278
Nikko	0037	XR-1000	0035,0000,0072
Noblex	0240	Yamaha	0038
Olympus	0035	Zenith	0039,0000,0209,0479, 0033,0637
Optimus	0037,0048,1048,0162, 1062,1162,1262,0104, 0432		
Orion	0184,0209,0002,0479		
Panasonic	0035,0162,1062,1162, 1262,1362,0616		
Penney	0035,0037,0042,0240, 0038		
Pentax	0042		
Philco	0035,0209,0479		
Phillips	0035,0081,1081,1181, 0618		
Pilot	0037		
Pioneer	0067		
Polk Audio	0081		
Portland	0020		
Profitronic	0240		
Proscan	0060		
Protec	0072		
Pulsar	0039		
Quarter	0046		
Quartz	0046		
Quasar	0035,0162,1162		